


Service Manual

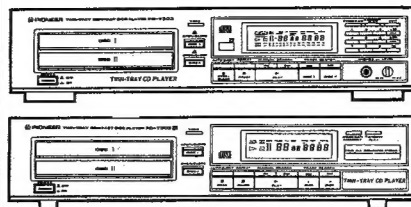

ORDER NO.
ARP1714

TWIN-TRAY COMPACT DISC PLAYER

PD-T503 PD-T303 PD-T303-S PD-T403

PD-T503, PD-T303, PD-T303-S AND PD-T403 HAVE SEVEN VERSIONS :

Type	Applicable model				Power requirement	Export destination
	PD-T503	PD-T303	PD-T303-S	PD-T403		
KU	○	○	—	○	AC120V only	U. S. A
KC	○	○	—	○	AC120V only	Canada
HEM	—	○	○	—	AC220V, 240V (switchable) *	European continent
HB	—	○	—	—	AC220V, 240V (switchable) *	United Kingdom
SD	○	○	—	—	AC110V, 120V-127V, 220V, 240V (switchable)	Kingdom of Saudi Arabia and general market
SD/G	○	—	—	—	AC110V, 120V-127V, 220V, 240V (switchable)	U. S. Military
HP	—	○	—	—	AC220V, 240V (switchable) *	Australia

*Change the position of jumper of the transformer board assembly.

- This manual is applicable to the PD-T503/KU, KC, PD-T303/KU, KC and PD-T403/KU, KC types.
- For the PD-T303/KC and PD-T403/KU, KC types, refer to page 93.
- For the other types, refer to additional service manuals.
- The PD-T303-S/HEM is the same as the PD-T303/HEM except for the color.
- Ce manuel pour le service comprend les explications en français de réglage.
- Este manual de servicio trata del método ajuste escrito en español.

CONTENTS

1. SAFETY INFORMATION.....	2
2. DISASSEMBLY.....	3
3. REASSEMBLY.....	6
4. EXPLODED VIEWS AND PARTS LIST.....	8
5. PACKING.....	14
6. SCHEMATIC DIAGRAM.....	15
7. P.C. BOARDS CONNECTION DIAGRAM.....	19
8. ELECTRICAL PARTS LIST.....	28
9. ADJUSTMENTS.....	30
9. RÉGLAGE.....	43
9. AJUSTE.....	56
10. MECHANISM DESCRIPTION.....	69

11. IC DESCRIPTION.....	76
12. EXPLODED VIEW AND PARTS LIST FOR PD-T303.....	77
13. PACKING FOR PD-T303.....	80
14. SCHEMATIC DIAGRAM FOR PD-T303.....	81
15. P.C. BOARDS CONNECTION DIAGRAM FOR PD-T303.....	85
16. ELECTRICAL PARTS LIST FOR PD-T303.....	91
17. FOR PD-T303/KC AND PD-T403/KU, KC TYPES.....	93
18. PANEL FACILITIES.....	94
19. SPECIFICATIONS.....	98


1. SAFETY INFORMATION

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

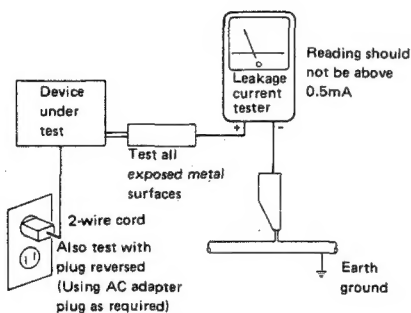

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

(FOR EUROPEAN MODEL ONLY)

VAROITUS!

LAITE SISÄLTÄÄ LASERDIODIN, JOKA LAHETTAÄ NÄKYMÄTÖNTÄ, SILMILLE VAARALLISTA INFRAPUNASATEILYÄ LAITTEEN SISÄLLÄ ON LASERDIODIN LAHEISYYDESSÄ KUVAN 1. MUKAINEN VAROITUSMERKKI.



LASER
Kuva 1
Lasersäteilyn
varoituserkki

WARNING!

DEVICE INCLUDES LASER DIODE WHICH EMITS INVISIBLE INFRARED RADIATION WHICH IS DANGEROUS TO EYES. THERE IS A WARNING SIGN ACCORDING TO PICTURE 1 INSIDE THE DEVICE CLOSE TO THE LASER DIODE.



LASER
Picture 1
Warning sign for
laser radiation

ADVERSEL:

USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSÅFBRYDERE ER UDE AF FUNKTION UNDGA UDSÆTTELSE FOR STRÅLING.

VIKTIGT

APARATEN INNEHÅLLER LASER AV HÖGRE KLASS ÄN 1. INGREPP I APPARATEN BÖR GÖRAS AV SPECIELLT UTBILDAD PERSONAL.

IMPORTANT

PIONEER COMPACT DISC PLAYER APPARATUS CONTAINS LASER OF HIGHER CLASS THAN 1. SERVICING OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUCTED PERSON.

2. DISASSEMBLY

● REMOVAL OF CLAMPER HOLDER

1. Stand the clamber holder up and push the claw at ① section in Fig. 2-1 in the direction of arrow to remove the clamber holder.

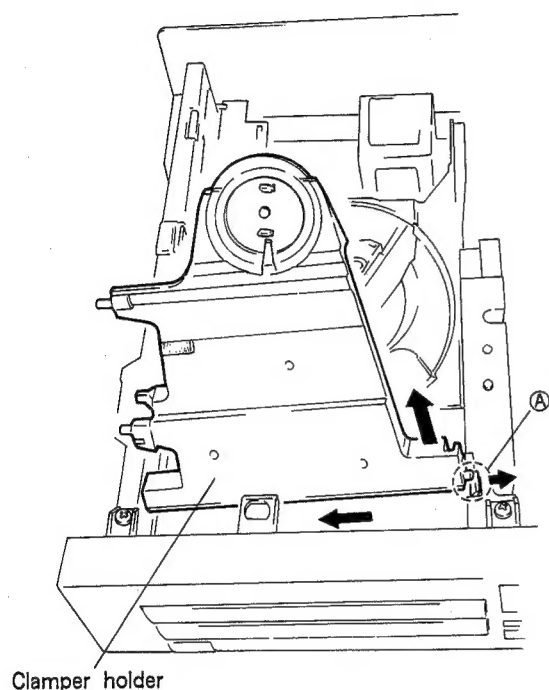


Fig. 2-1

● REMOVAL OF TRAY 1

★ (Refer to page 34)

● REMOVAL OF TRAY 2


★ Set tray 2 to the OPEN position and remove it in accordance with "removal of tray 1" in page 34.

● REMOVAL OF SERVO MECHANISM ASSEMBLY

1. Move tray 1 to the complete-open position and remove it. (Refer to page 34)
2. Move tray 2 to the CLOSE position and manually rotate gear-pulley and move tray 2 to a position allowing removal of the servo mechanism assembly screws.
3. Remove the four screws holding the servo mechanism assembly, flexible cable, and connectors, etc., as required.

● REMOVAL OF TRANSFORMER BOARD ASSEMBLY

1. After turning OFF the power switch, be sure to remove the plug of the power cord from the wall outlet.
2. Rotate the gear-pulley by hand so that to displace the parts of tray ① and ② from the transformer board assembly.
3. Remove 4 screws ① - ④, binder, and the CN301 parallel jumper, shown in Fig. 2-2.

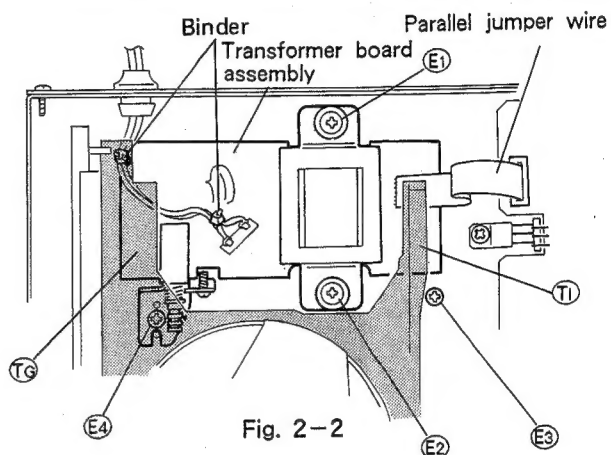

4. After confirming that the power is OFF, remove the POWER SW joint from the POWER SW. (In order to prevent movement of the POWER SW joint, move the POWER SW to the back together with the board.)
5. Slide the transformer board assembly in the ① direction as shown in Fig. 2-3, and stand up the transformer board assembly in the ② direction while making sure that there is no contact with the servo mechanism assembly and POWER SW joint.

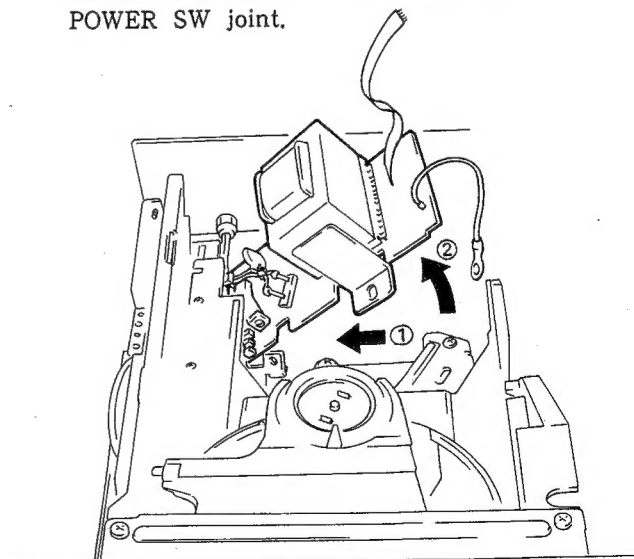


Fig. 2-3

● REMOVAL OF SW BOARD ASSEMBLY (BOARD FOR U, S, AND L POSITION DETECTION SW)

Note: Tray mechanism assembly must be removed previously to remove SW board assembly.

1. Manually rotate gear-pulley to a position where tray 1 and tray 2 overlap.
2. Remove 2 binders (K1) · (K2), cable clamp section (K3) · (K4), and CN1 through CN3 in Fig. 2-4.

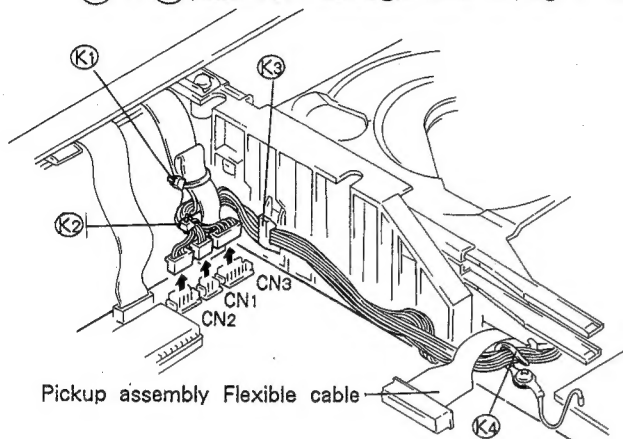


Fig. 2-4

3. Remove four screws (L1) - (L4) holding the loading base assembly and guide-base, and two screws (B1) · (B2) holding the front panel.

Note: Be careful that shorter ones are used for screw (B2) holding front panel, and screw (X) holding coupling plate.

4. As shown in Fig. 2-5, lift up guide-base towards the back while pushing in the front panel direction.
5. After confirming the (Y) section (Protrusion section for positioning the bottom of the guide base) in Fig. 2-5 has been removed, move the mechanism toward the rear panel by lifting up the back and making sure not to damage flexible cable (in Fig. 2-4) of the pickup assembly.
6. Remove the mechanism assembly while making sure not to damage (Z) (front panel screw retaining section), and place at the left side of the unit.
7. Rotate gear-pulley by hand to the position that none of the three switches U, S and L is pressed (which is slightly forward position from the state that tray 1 overlaps tray 2). (Refer to Fig. 2-6)
8. Remove one screw (N) holding the SW board assembly and remove the SW board assembly. When attaching it, fix J601's lead wires to place between SW board assembly and chassis as shown in Fig. 2-6.

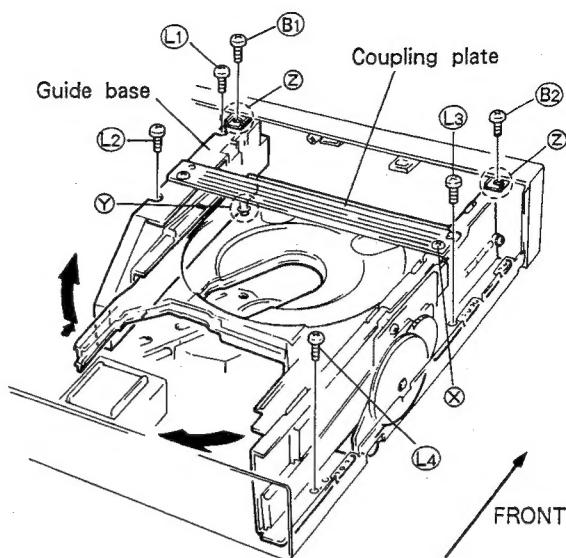


Fig. 2-5

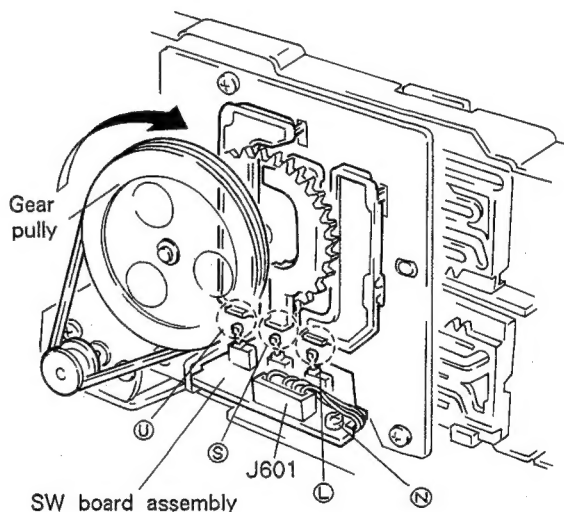


Fig. 2-6

● REMOVAL OF LOADING MOTOR

1. Remove rubber-belt after completing steps 1 through 7 in "Removal of SW Board Assembly".
2. Remove retaining ring ⑥ holding gear-pulley in Fig. 2-10 and remove gear-pulley.
3. Remove retaining ring ⑦ holding gear, and remove gear.
4. Remove 3 screws (R1) - (R3) holding motor-base, and remove motor-base.
5. Remove 2 screws (S1) - (S2) holding loading motor.

When attaching, be sure to guide the lead wires of J601 so that they are between the SW board assembly and the chassis. (Refer to Fig. 2-6)

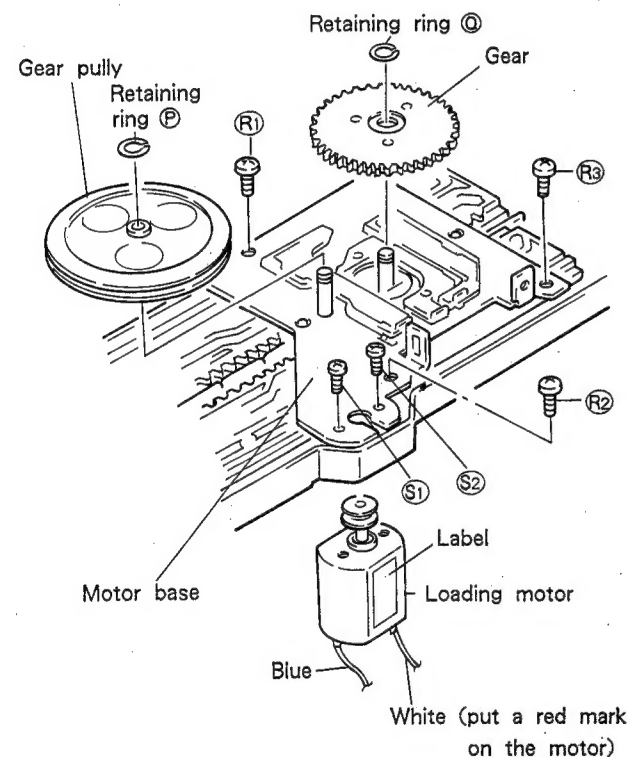


Fig. 2-7

● REMOVAL OF FL PLATE A

1. Lift up FL plate A, paying attention that the two upper claws do not become damaged.
2. Release FL plate A from the two claws attached to the lower part of the hole in the front panel.
3. Remove FL plate A in the direction of the arrow.

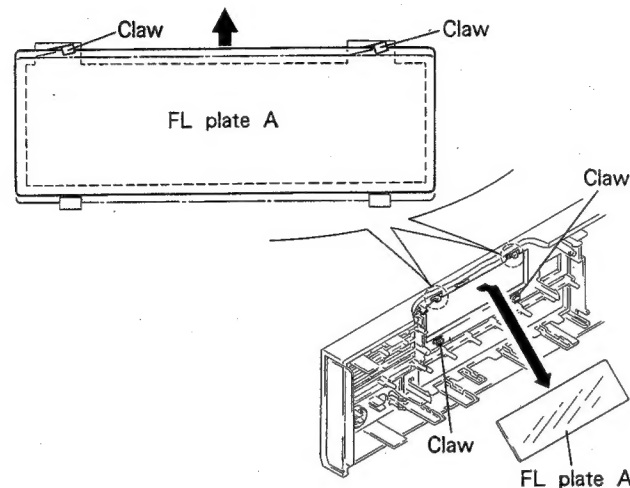


Fig. 2-8.

● REMOVAL OF PLAY BUTTON

Note: If excessive force is applied when removing the play button, it may be damaged or deformed. Therefore, proceed in the following order.

1. Slowly pull out the play button along with track button towards the front.
2. Rotate the play button and track button as the two claws catch to pull it off the 7 pins.
3. Remove the play button and track button from the front panel.

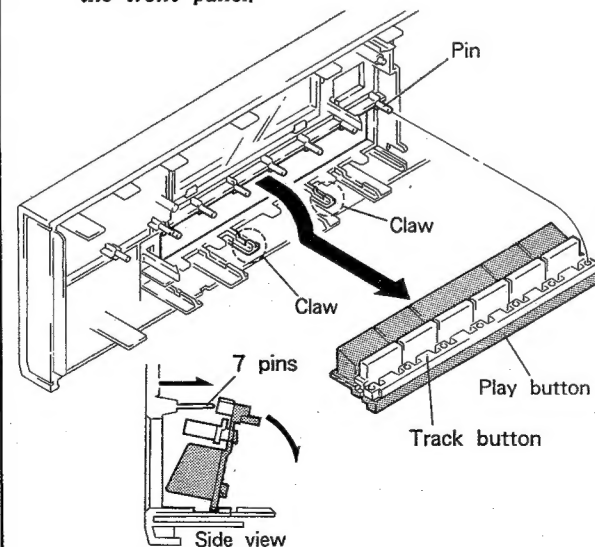


Fig. 2-9.

3. REASSEMBLY

● ATTACHMENT OF TRAY 1

★ Refer to page 36.

● ATTACHMENT OF TRAY 2

★ Set slide-angle L unit to the foremost position (where opening of tray 2 is completed), and attach tray 2 in accordance with "attachment of tray 1" in page 36.

● ATTACHMENT OF RACK U AND RACK L

1. Set shaft (SU) of slide-angle U unit, shaft (SL) of slide-angle L unit, auxiliary arm U, and auxiliary arm L to the positions shown in Fig. 3-1.

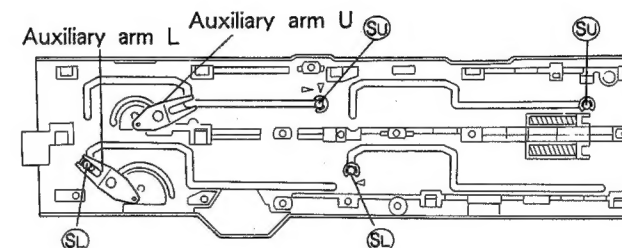


Fig. 3-1

2. As shown in Fig. 3-2, attach the racks U · L so that the tips are at the tip positions (M1) and (M2) of each ▶ mark stuck on the chassis. Insert the upper portion of the rack first and attach it as arrow shown in Fig. 3-3.
3. Tighten 5 screws (B1) - (B5).

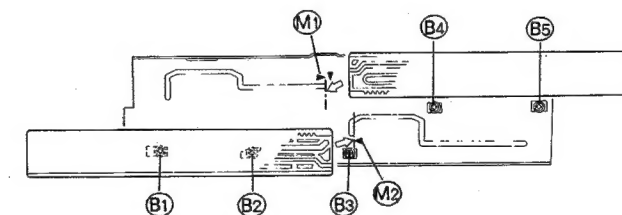


Fig. 3-2

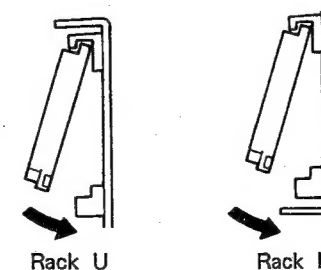


Fig. 3-3

● ATTACHMENT OF MOTOR-BASE

1. Make sure that the positions of rack L and rack U are within the range indicated by the dotted lines in relation to the position of ④ in Fig. 3-4. (Position at which U, S, and L switches are all OFF.)
2. Make sure that the 3 switch levers (U, S, and L) attached to motor-base are not pushing each switch.
3. Attach motor-base.

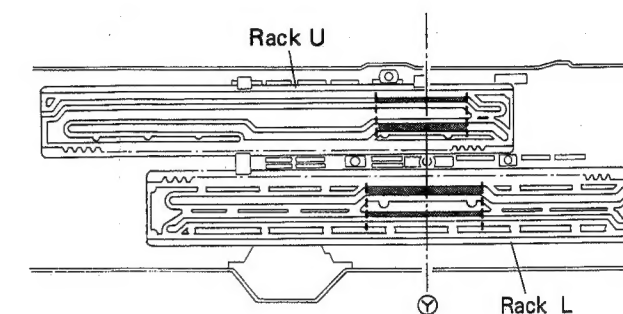


Fig. 3-4

● ATTACHMENT OF GEAR

1. As shown in Fig. 3-5, position rack U fully to the left and rack L fully to the right. (When attaching the gear with the tray inserted, set the tray horizontally in a similar manner to the inserted condition. Also, when shifting the rack U and rack L to the position as shown in Fig. 3-5, shift the both racks at the same time. (This is because the mechanism is designed as mentioned in "Relationship between slide angle shaft movement range and tray movement range" on page 71.))
2. Attach the gear and hold in place with retaining ring ④.


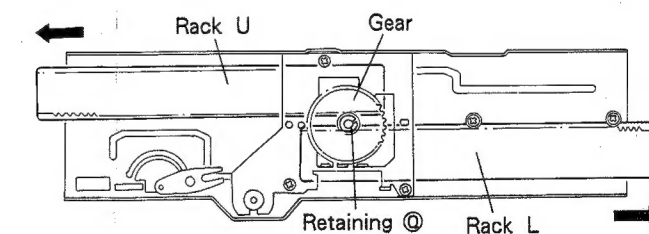


Fig. 3-5

● ATTA LEVEL

Note:

1. Ref - ④ asse:
2. Man - an high
3. Atta to s
4. Atta to s guid

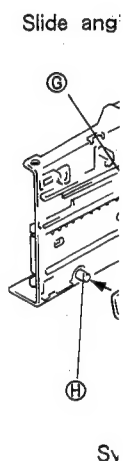

3. REASSEMBLY

• ATTACHMENT OF TRAY 1

★ Refer to page 36.

• ATTACHMENT OF TRAY 2

★ Set slide-angle L unit to the foremost position (where opening of tray 2 is completed), and attach tray 2 in accordance with "attachment of tray 1" in page 36.

• ATTACHMENT OF RACK U AND RACK L

1. Set shaft (SU) of slide-angle U unit, shaft (SL) of slide-angle L unit, auxiliary arm U, and auxiliary arm L to the positions shown in Fig. 3-1.

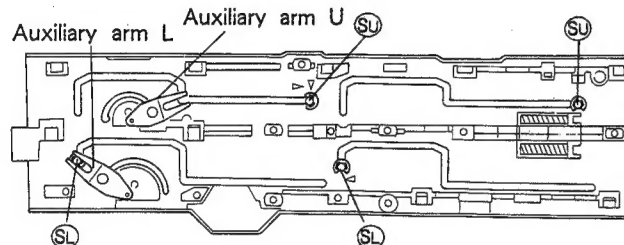


Fig. 3-1

2. As shown in Fig. 3-2, attach the racks U·L so that the tips are at the tip positions (M1) and (M2) of each ▶ mark stuck on the chassis. Insert the upper portion of the rack first and attach it as arrow shown in Fig. 3-3.

3. Tighten 5 screws (B1) - (B5).

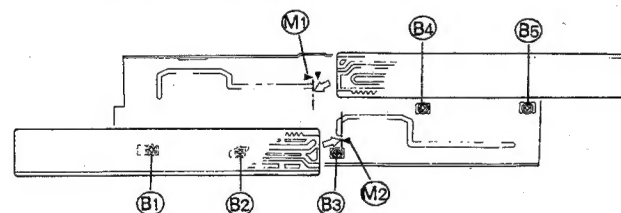


Fig. 3-2

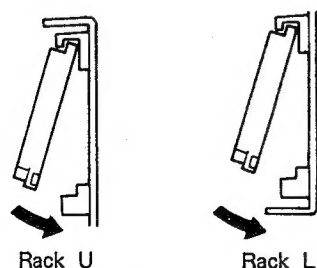


Fig. 3-3

• ATTACHMENT OF MOTOR-BASE

1. Make sure that the positions of rack U and rack L are within the range indicated by the dotted lines in relation to the position of (Y) in Fig. 3-4. (Position at which U, S, and L switches are all OFF.)
2. Make sure that the 3 switch levers (U, S, and L) attached to motor-base are not pushing each switch.
3. Attach motor-base.

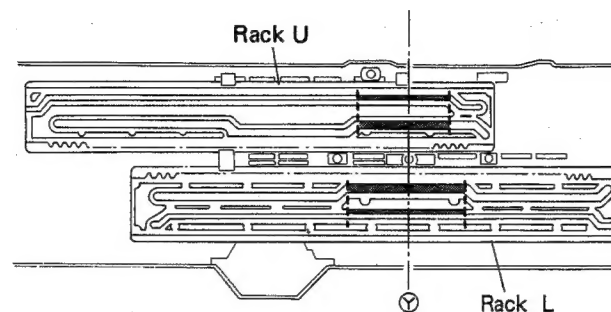


Fig. 3-4

• ATTACHMENT OF GEAR

1. As shown in Fig. 3-5, position rack U fully to the left and rack L fully to the right. (When attaching the gear with the tray inserted, set the tray horizontally in a similar manner to the inserted condition. Also, when shifting the rack U and rack L to the position as shown in Fig. 3-5, shift the both racks at the same time. (This is because the mechanism is designed as mentioned in "Relationship between slide angle shaft movement range and tray movement range" on page 71.))
2. Attach the gear and hold in place with retaining ring (Q).

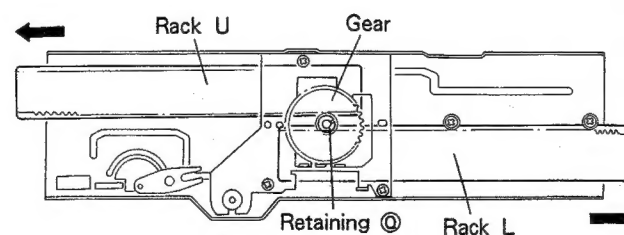


Fig. 3-5

• ATTACHMENT OF SYNCHRONOUS LEVER

Note: Attach with tray 1 and tray 2 removed.

1. Refer to Fig. 3-6 and remove 2 screws (C1) - (C2) and slide guide-base toward main board assembly.
2. Manually rotate gear-pulley and position slide-angle U unit and slide-angle L unit at their highest positions.
3. Attach sections (E) and (F) of synchronous lever to sections (G) and (H) respectively.
4. Attach sections (J) and (K) of synchronous lever to section (L) of the guide and section (M) of guide-base respectively.

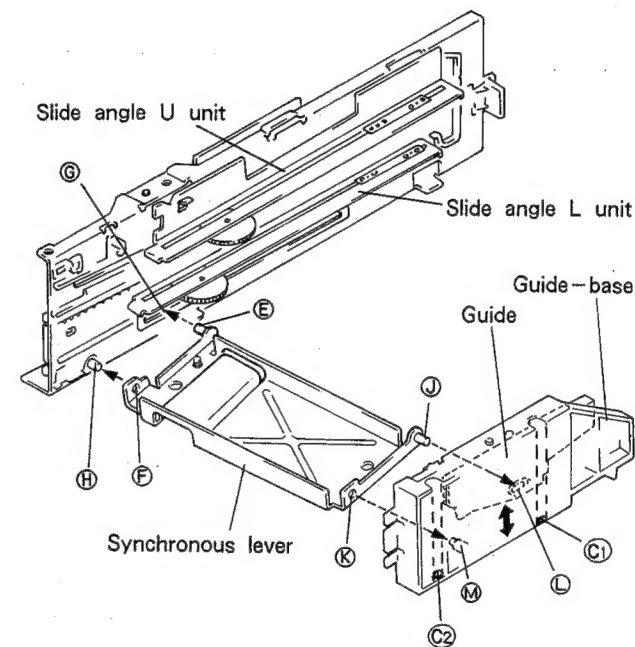


Fig. 3-6

4. EXPLODED VIEWS AND PARTS LIST



NOTES :

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.


Parts List of Exterior

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
Δ ⊙	1	PWZ1565	Main board assembly		41	PDZ30P050FMC	Screw
Δ ⊙	2	PWZ1571	Control board assembly		42	PMZ30P060FCU	Screw
Δ	3	CM-22C	Strain relief		43	PYY1088	Clamper assembly
Δ	4	PDG1015	AC Power cord		44	PYY1091	Servo mechanism assembly
Δ	5	PTT1091	Power transformer		45	PYY1093	Bonnet
	6	PBA1011	Screw	⊙	46	PNW1477	Guide base
	7	PBH1072	Door spring		101		Transformer board assembly
	8	PNM1070	*1 Stopper		102		Headphone board assembly
	9	PNW1376	Insulator		103		Under base
	10	RNH-184	Cord clamper		104		Rear base
	11	PBK1060	Plate spring		105		Panel angle
	12	PHC1043	Spacer (For Packing)		106		P.C.B angle
	13	PNM1011	Cushion rubber		107		Switch angle
	14	PNW1475	Tray		108		Mechanism support
	15	PNW1476	Guide		109		Holder
	16	PNW1479	Clamper holder		110		P.C.B spacer
	17	PEB1014	Froating rubber		111		Magnet
	18	PAC1058	Power Button (OFF/ON)		112		Synchronous lever
	19	PAC1347	O/C-Button (TIME, OPEN/CLOSE DISC I, II)		113		Joint plate
	20	PAC1348	Track Button (AUTO EJECT, REPEAT, ◀, ▶, ⏮, ⏭)		114		Yoke
	21	PAC1349	Play Button (▶, ⏮, ⏭, DISC I, DISC II)		115		Clamper
	22	PAC1350	Button (A) (PROGRAM, RANDOM PLAY, EDIT)		116		Loading base assembly
	23	PAC1351	Select Button (1, 2, 3, +10, 4, 5, 6, ≥20, 7, 8, 9, 10)		117		Name plate
	24	PAC1370	Knob (LEVEL)		118		Power switch joint
	25	PAM1255	FL Plate (A)		119		Binder
	26	PAM1265	Name plate		120		Hold Rubber
	27	PAM1266	Window		121		Hold angle
	28	PNW1498	Door 1				
	29	PNW1499	Door 2				
	30	PYY1104	Control panel unit				
	31	BBZ30P060FMC	Screw				
	32	BBZ30P080FZK	Screw				
	33	BBZ30P120FMC	Screw				
	34	BMZ20P040FZK	Screw				
	35	FBT40P080FZK	Screw				
	36	IBZ30P050FZK	Screw				
	37	IBZ30P120FCC	Screw				
	38	PSA40P080FZB	Screw				
	39	IPZ30P080FMC	Screw				
	40	PDZ26P050FMC	Screw				



*1. The stopper consist of the big ring part and the small ring part.
If you stick the stopper to the leg, stick the big ring part to the front leg, and the small ring part to the rear leg.

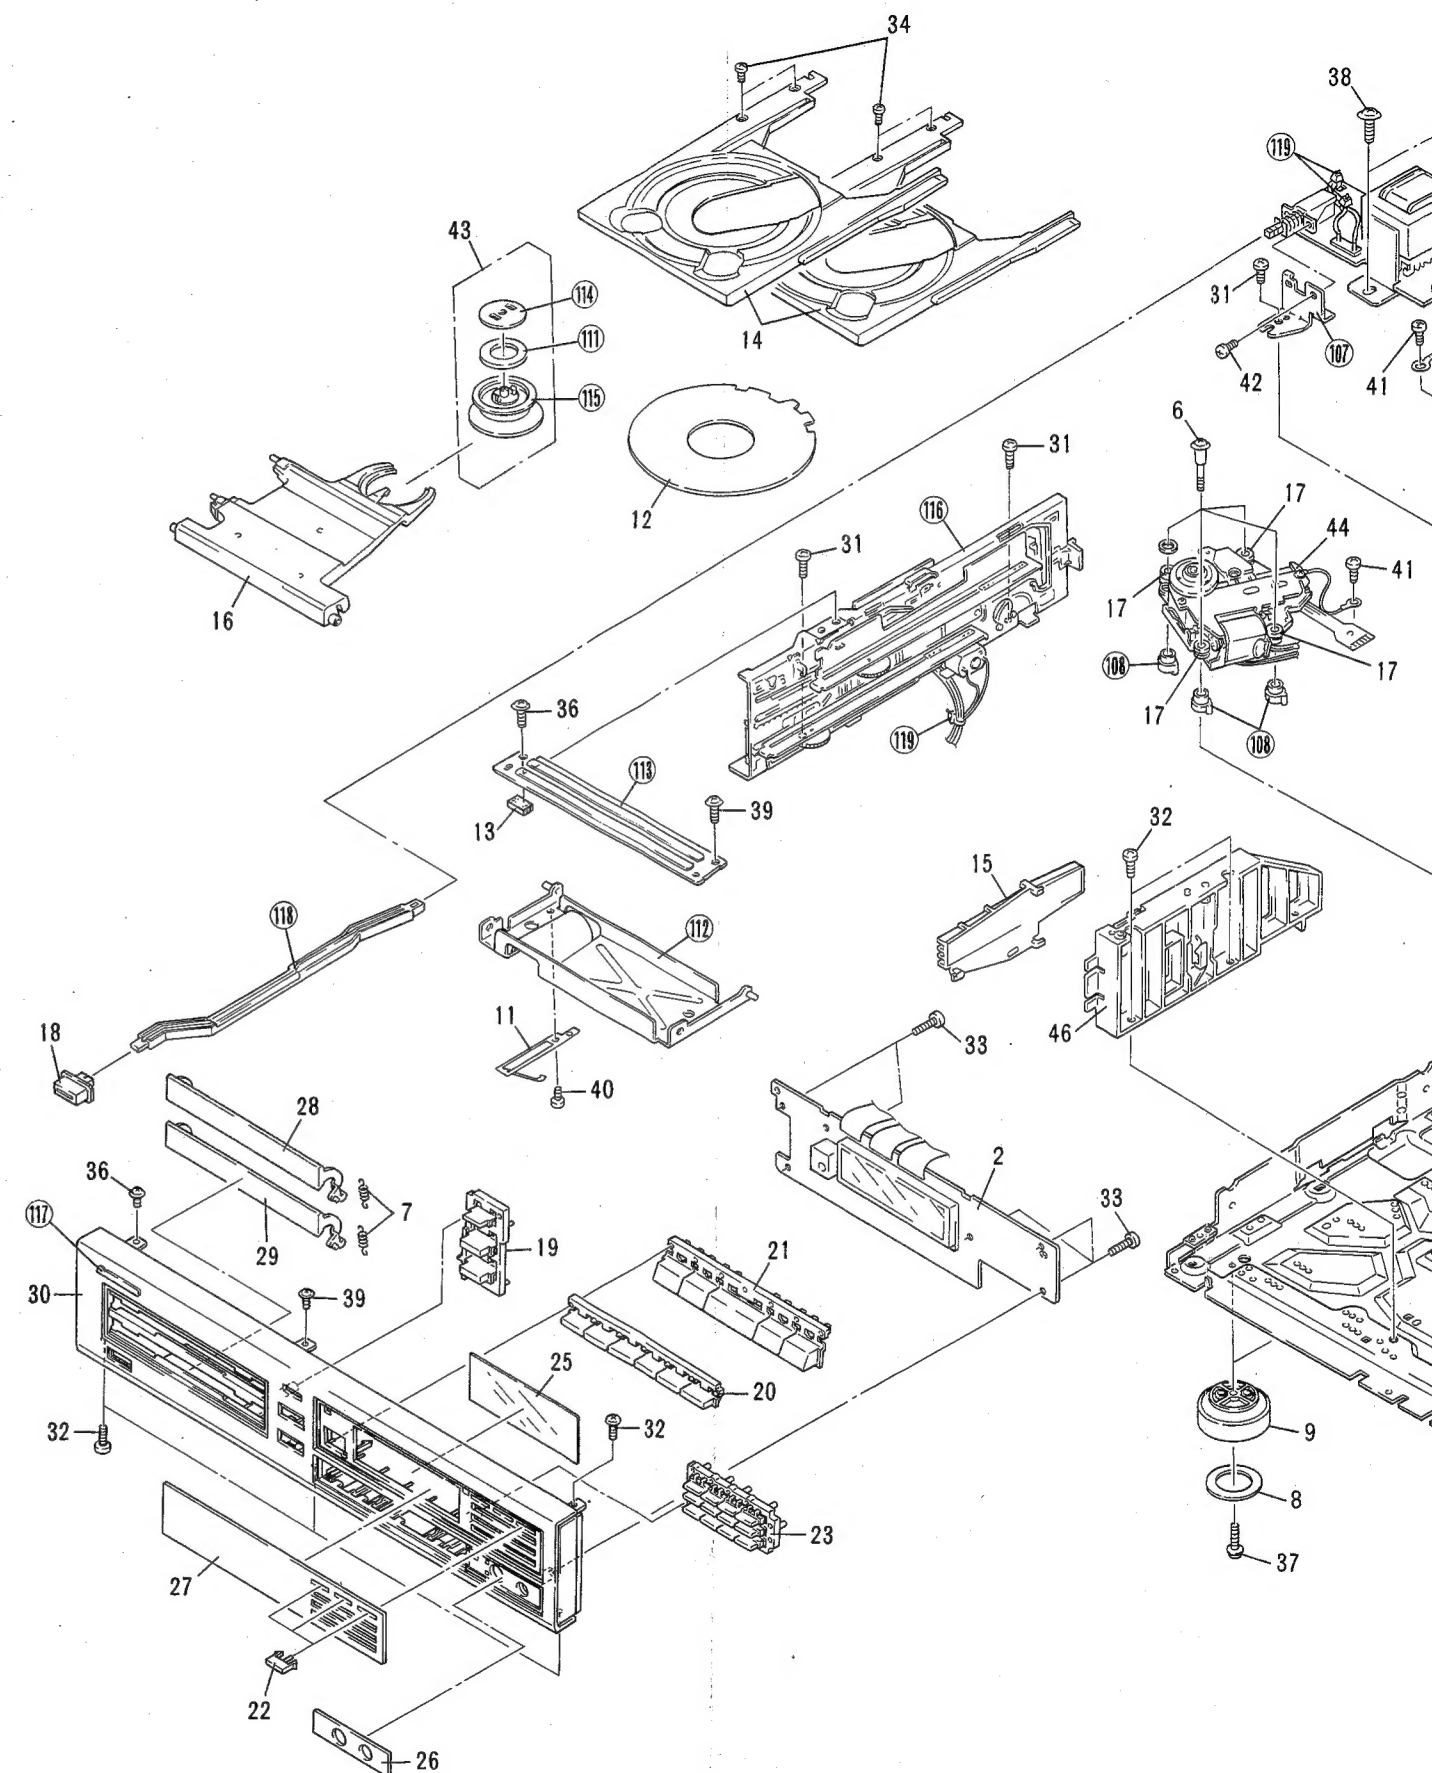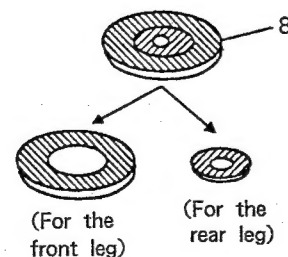

4.1 Exterior

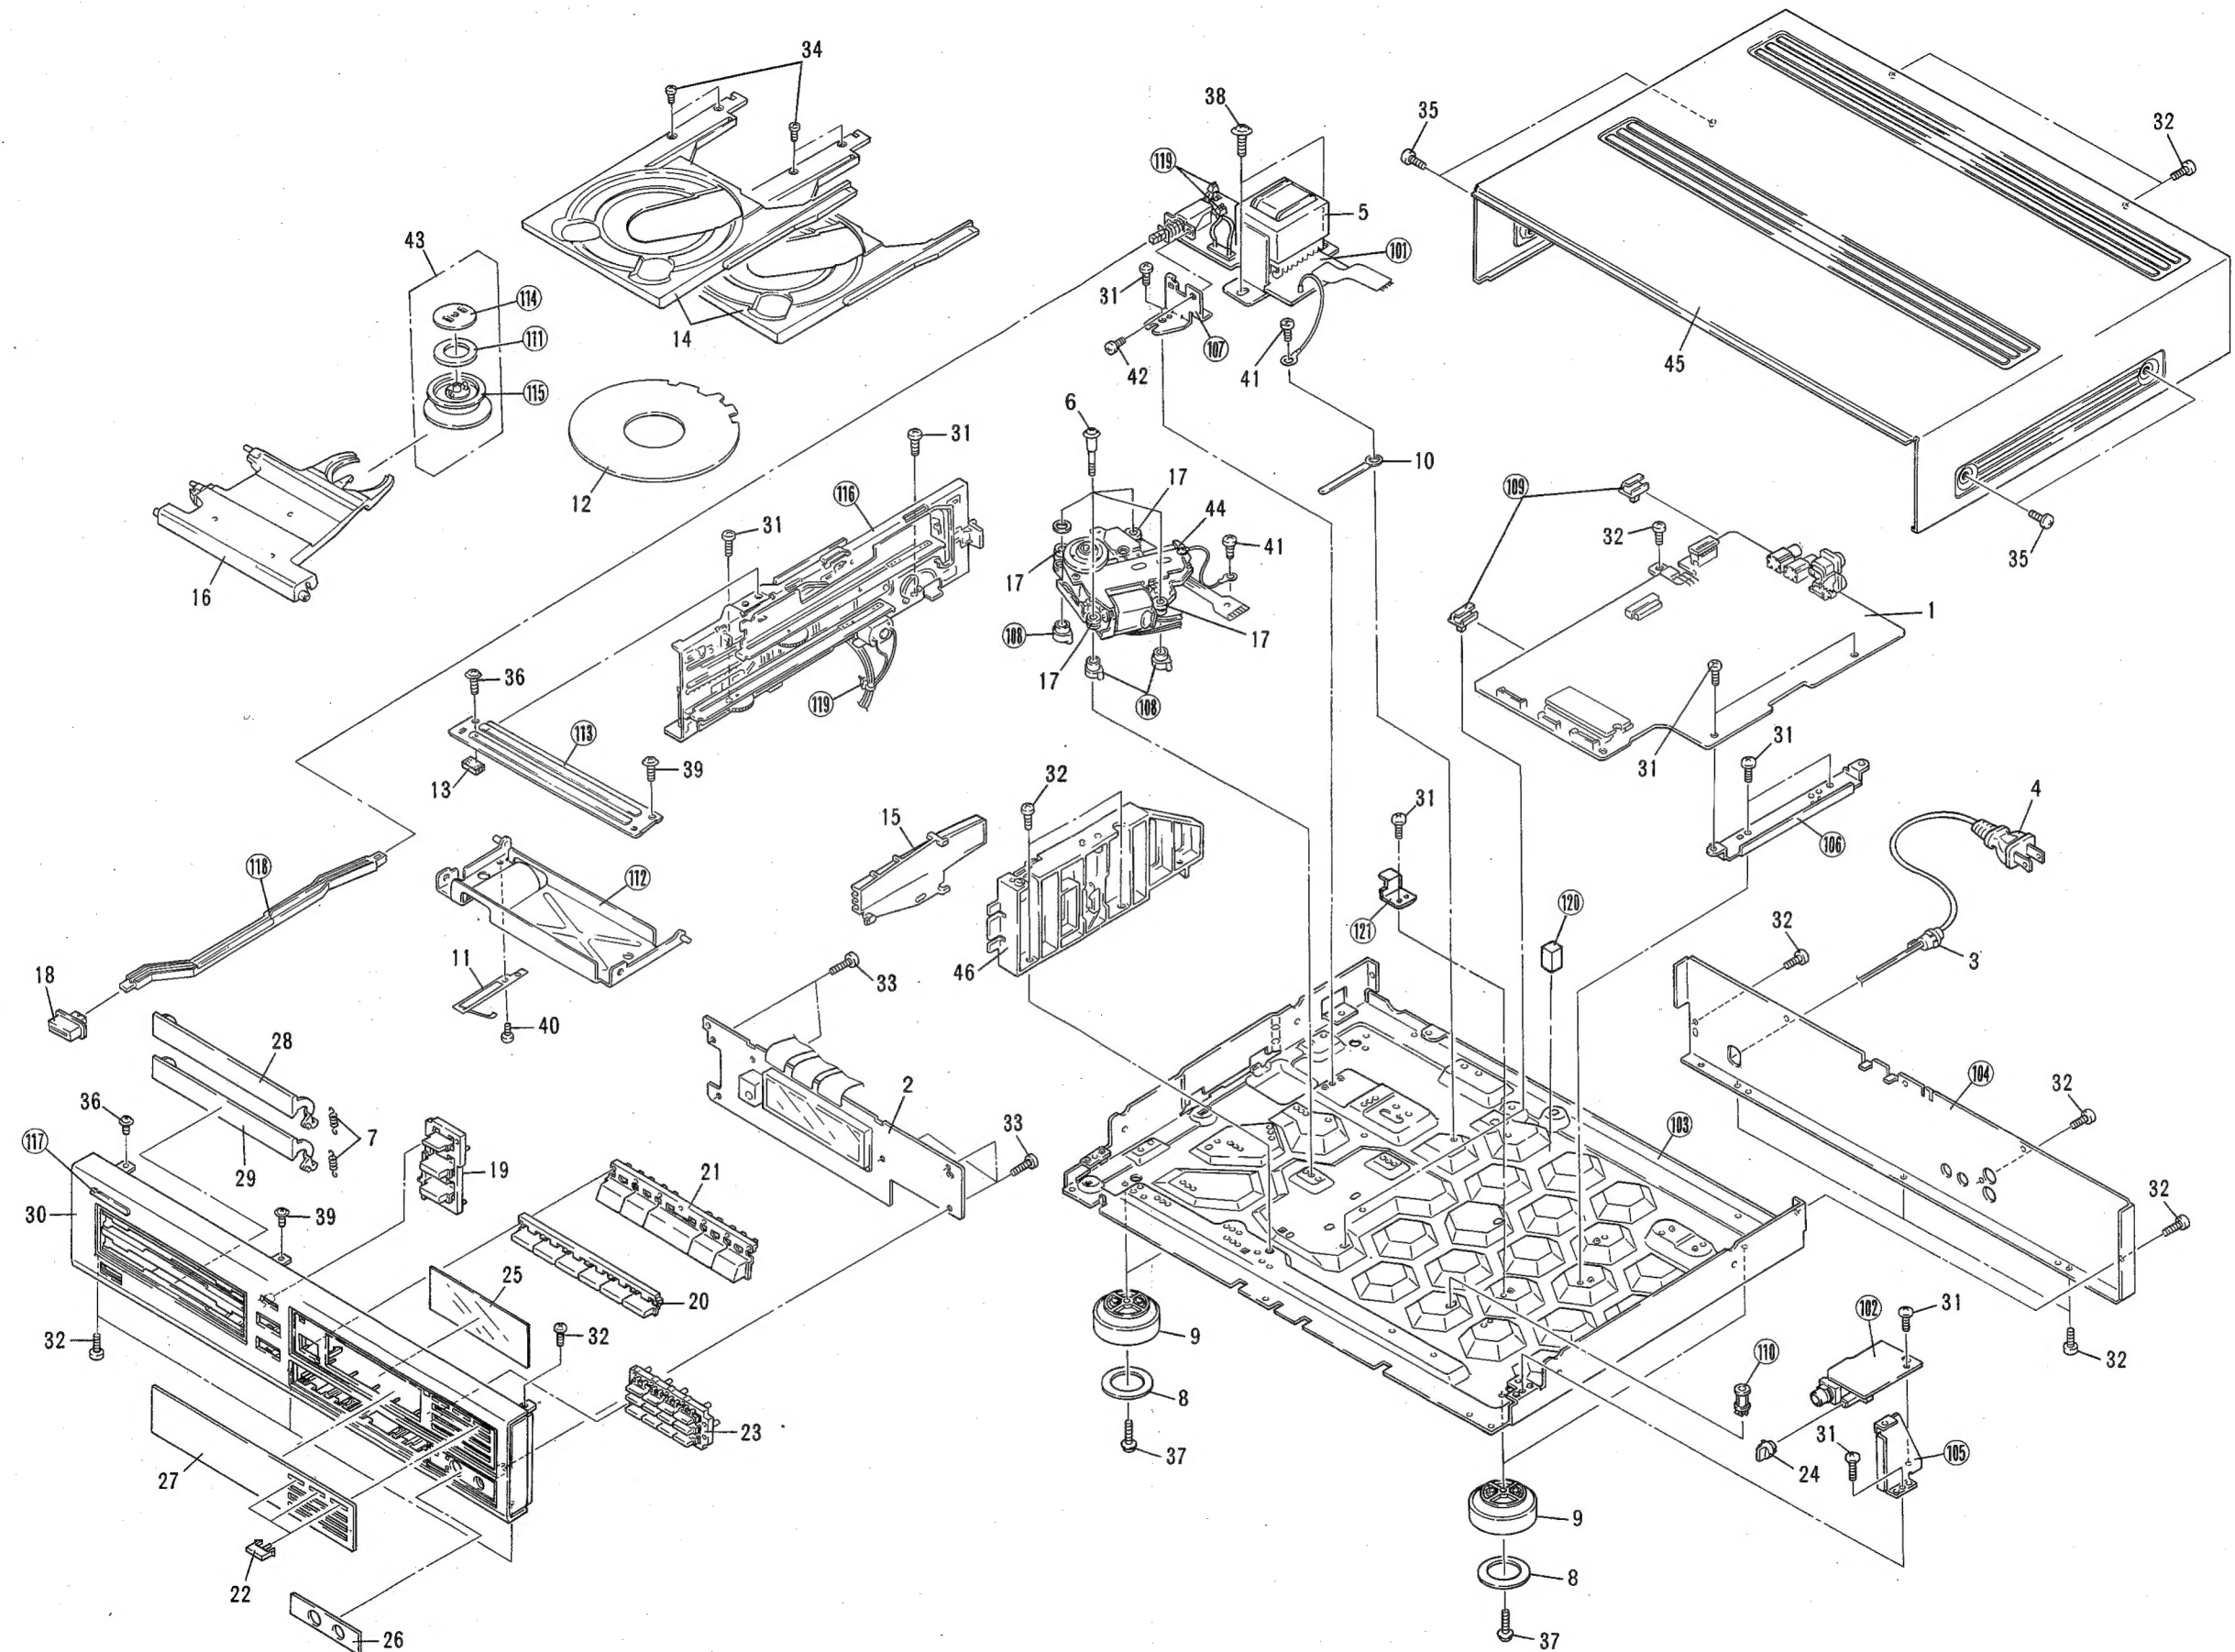

4.2 Mechanism Section

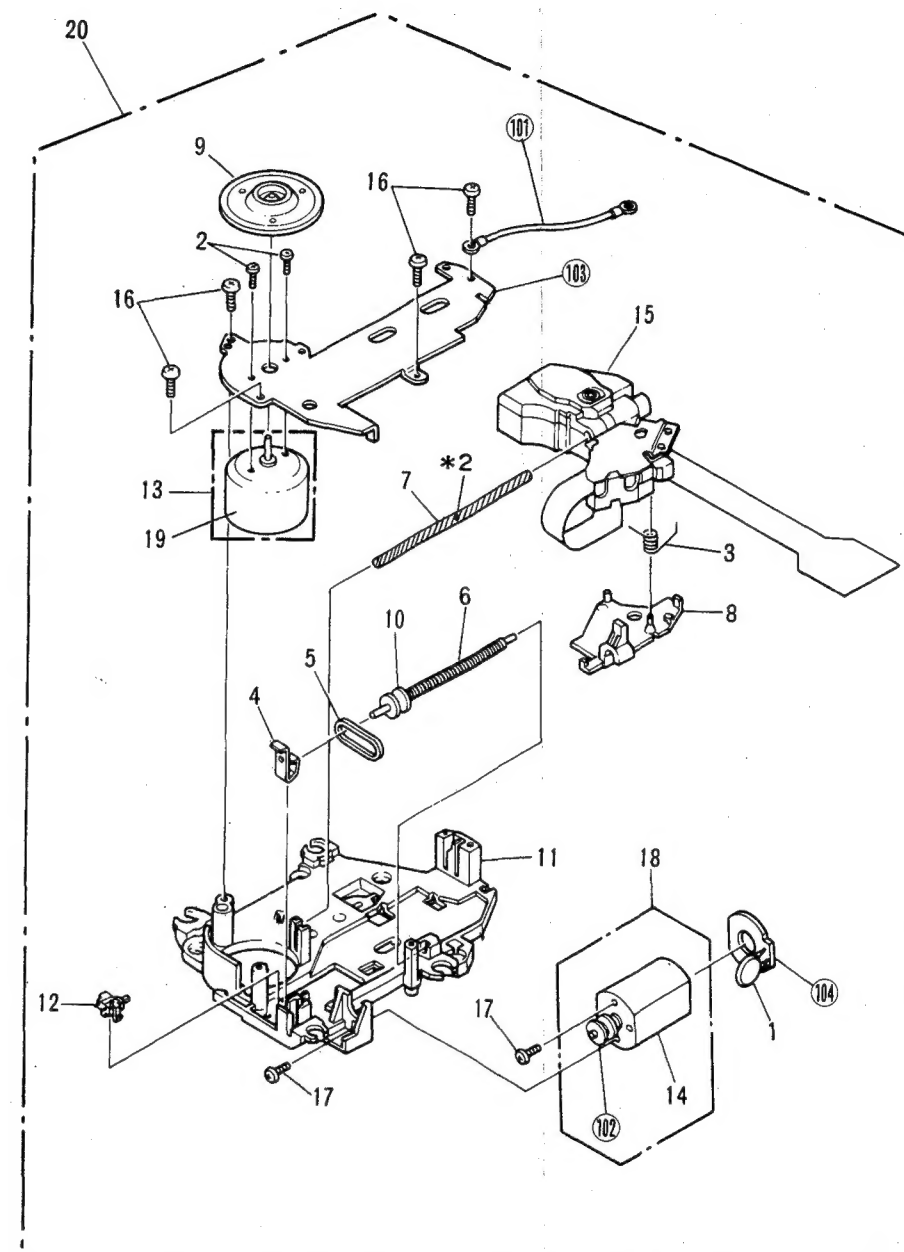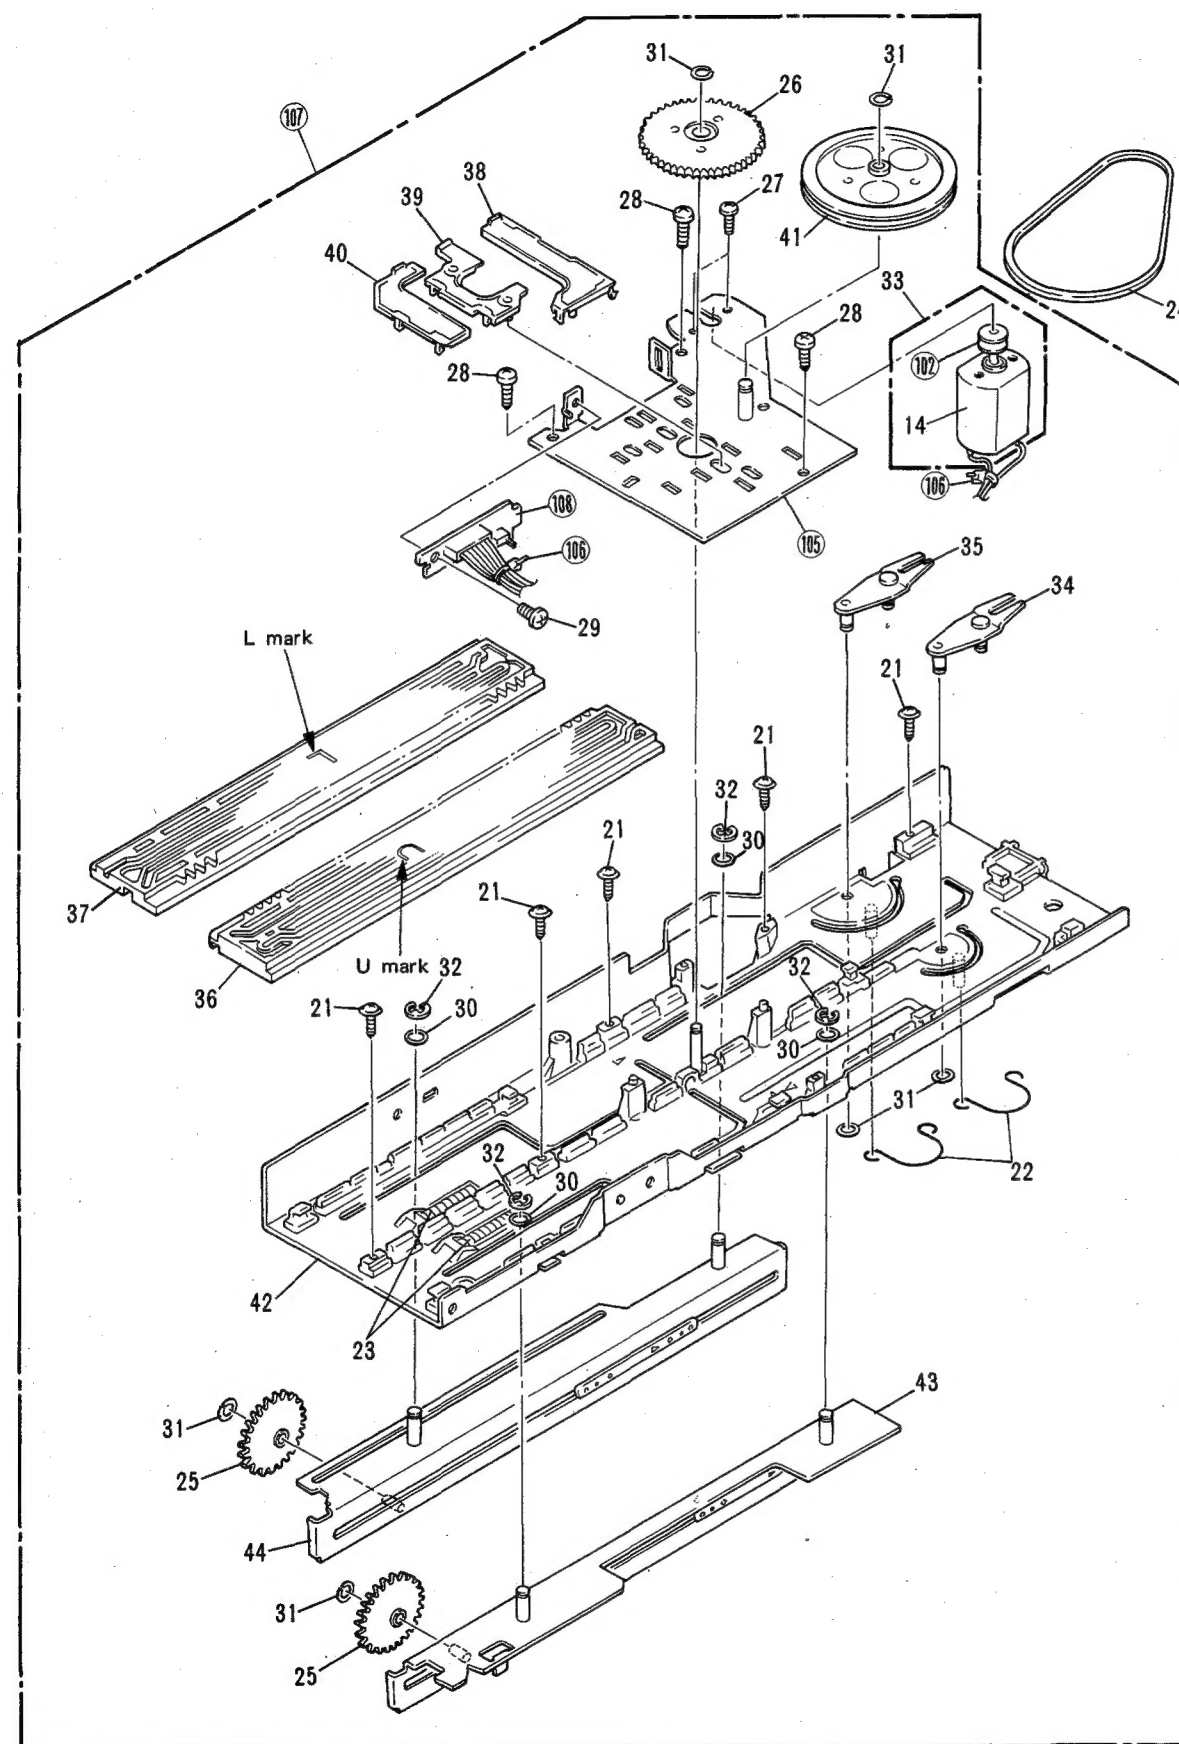

Parts List of Mechanism Section

Mark	No.	Part No.	Description
	1	CGDYX104M25	Semiconductive ceramic capacitor
	2	PBA1037	Screw M2×2.5
	3	PBH1008	Drive spring
	4	PBK1057	Plate spring
	5	PEB1072	Belt
	6	PLA1003	Drive screw
*2	7	PLA1004	Guide bar
	8	PNW1063	Carriage plate
	9	PNW1064	Disc table
	10	PNW1066	Pulley
	11	PNW1520	Mechanism chassis
	12	PSH1003	Slide switch (S101, INSIDE)
	13	PYY1109	Spindle motor assembly (with oil)
	14	PXM1002	Motor (CARRIAGE, LOADING)
	15	PWY1009	Pick-up assembly
	16	BPZ20P080FZK	Screw
	17	PMZ20P030FMC	Screw
	18	PYY1025	Motor assembly (CARRIAGE)
	19	PXM1001	Spindle motor
	20	PYY1091	Servo mechanism assembly
	21	PBA1035	Screw
	22	PBH1074	Spring
	23	PBH1076	Spring
	24	PEB1106	Belt
	25	PNW1478	Sync gear
	26	PNW1486	Gear
	27	PMZ20P030FMC	Screw
	28	PPZ26P080FMC	Screw
	29	PSZ26P050FMC	Screw
	30	WA32L060C035	Washer
	31	WT26D047D025	Washer
	32	YE25FUC	E ring
	33	PYY1089	Motor assembly (LOADING)
	34	PNB1180	Auxiliary arm (U)
	35	PNB1181	Auxiliary arm (L)
	36	PNW1481	Rack (U)
	37	PNW1482	Rack (L)
	38	PNW1483	Switch lever (U)
	39	PNW1484	Switch lever (S)
	40	PNW1485	Switch lever (L)
	41	PNW1487	Gear pulley
	42	PNW1488	Loading base
	43	PXT1025	Slide angle (U) unit
	44	PXT1026	Slide angle (L) unit


Mark	No.	Part No.	Description
	101		Earth lead unit
	102		Motor pulley
	103		Base plate
	104		Carriage M board
	105		Motor base
	106		Binder
	107		Loading base assembly
	108		SW board assembly

*2. When reinstalling the No. 15 Pickup assembly after replacement, apply oils (GEM1002) to No. 7 guide bar. At this time, be sure to apply proper quantity of oils to the guide bar surface evenly.

5. PACKING

Parts List of Packing


Mark	No.	Part No.	Description
	1	PHA1087	Protector (L)
	2	PHA1088	Protector (R)
	3	PHC1043	Spacer (in the tray 2)
	4	PHG1269	Packing case
		PHG1293	Packing case (KC type)
	5	Z23-007	Sheet
	6	PDE-319	Connection cord
	7	PDE1002	Connection cord
	8	PRB1077	Operating instructions (English)
		PRE1078	Operating instructions (English, French) (KC type)
	9	PWW1030	Remote control unit
	10	PZN1001	Battery cover
	101		Battery

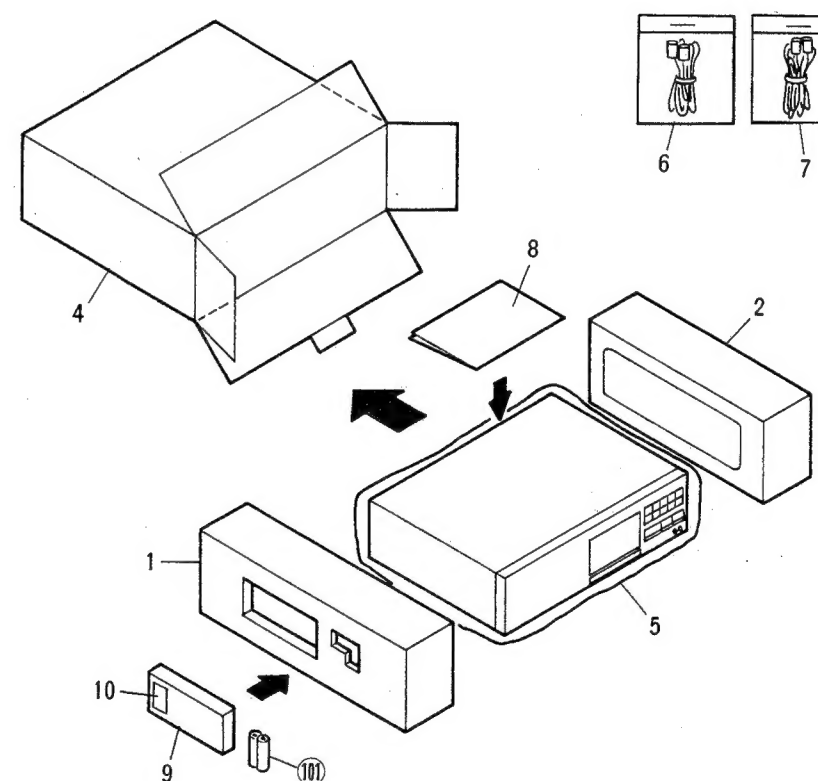



7. P.C. BOARDS CONNECTION DIAGRAM

• View from component side

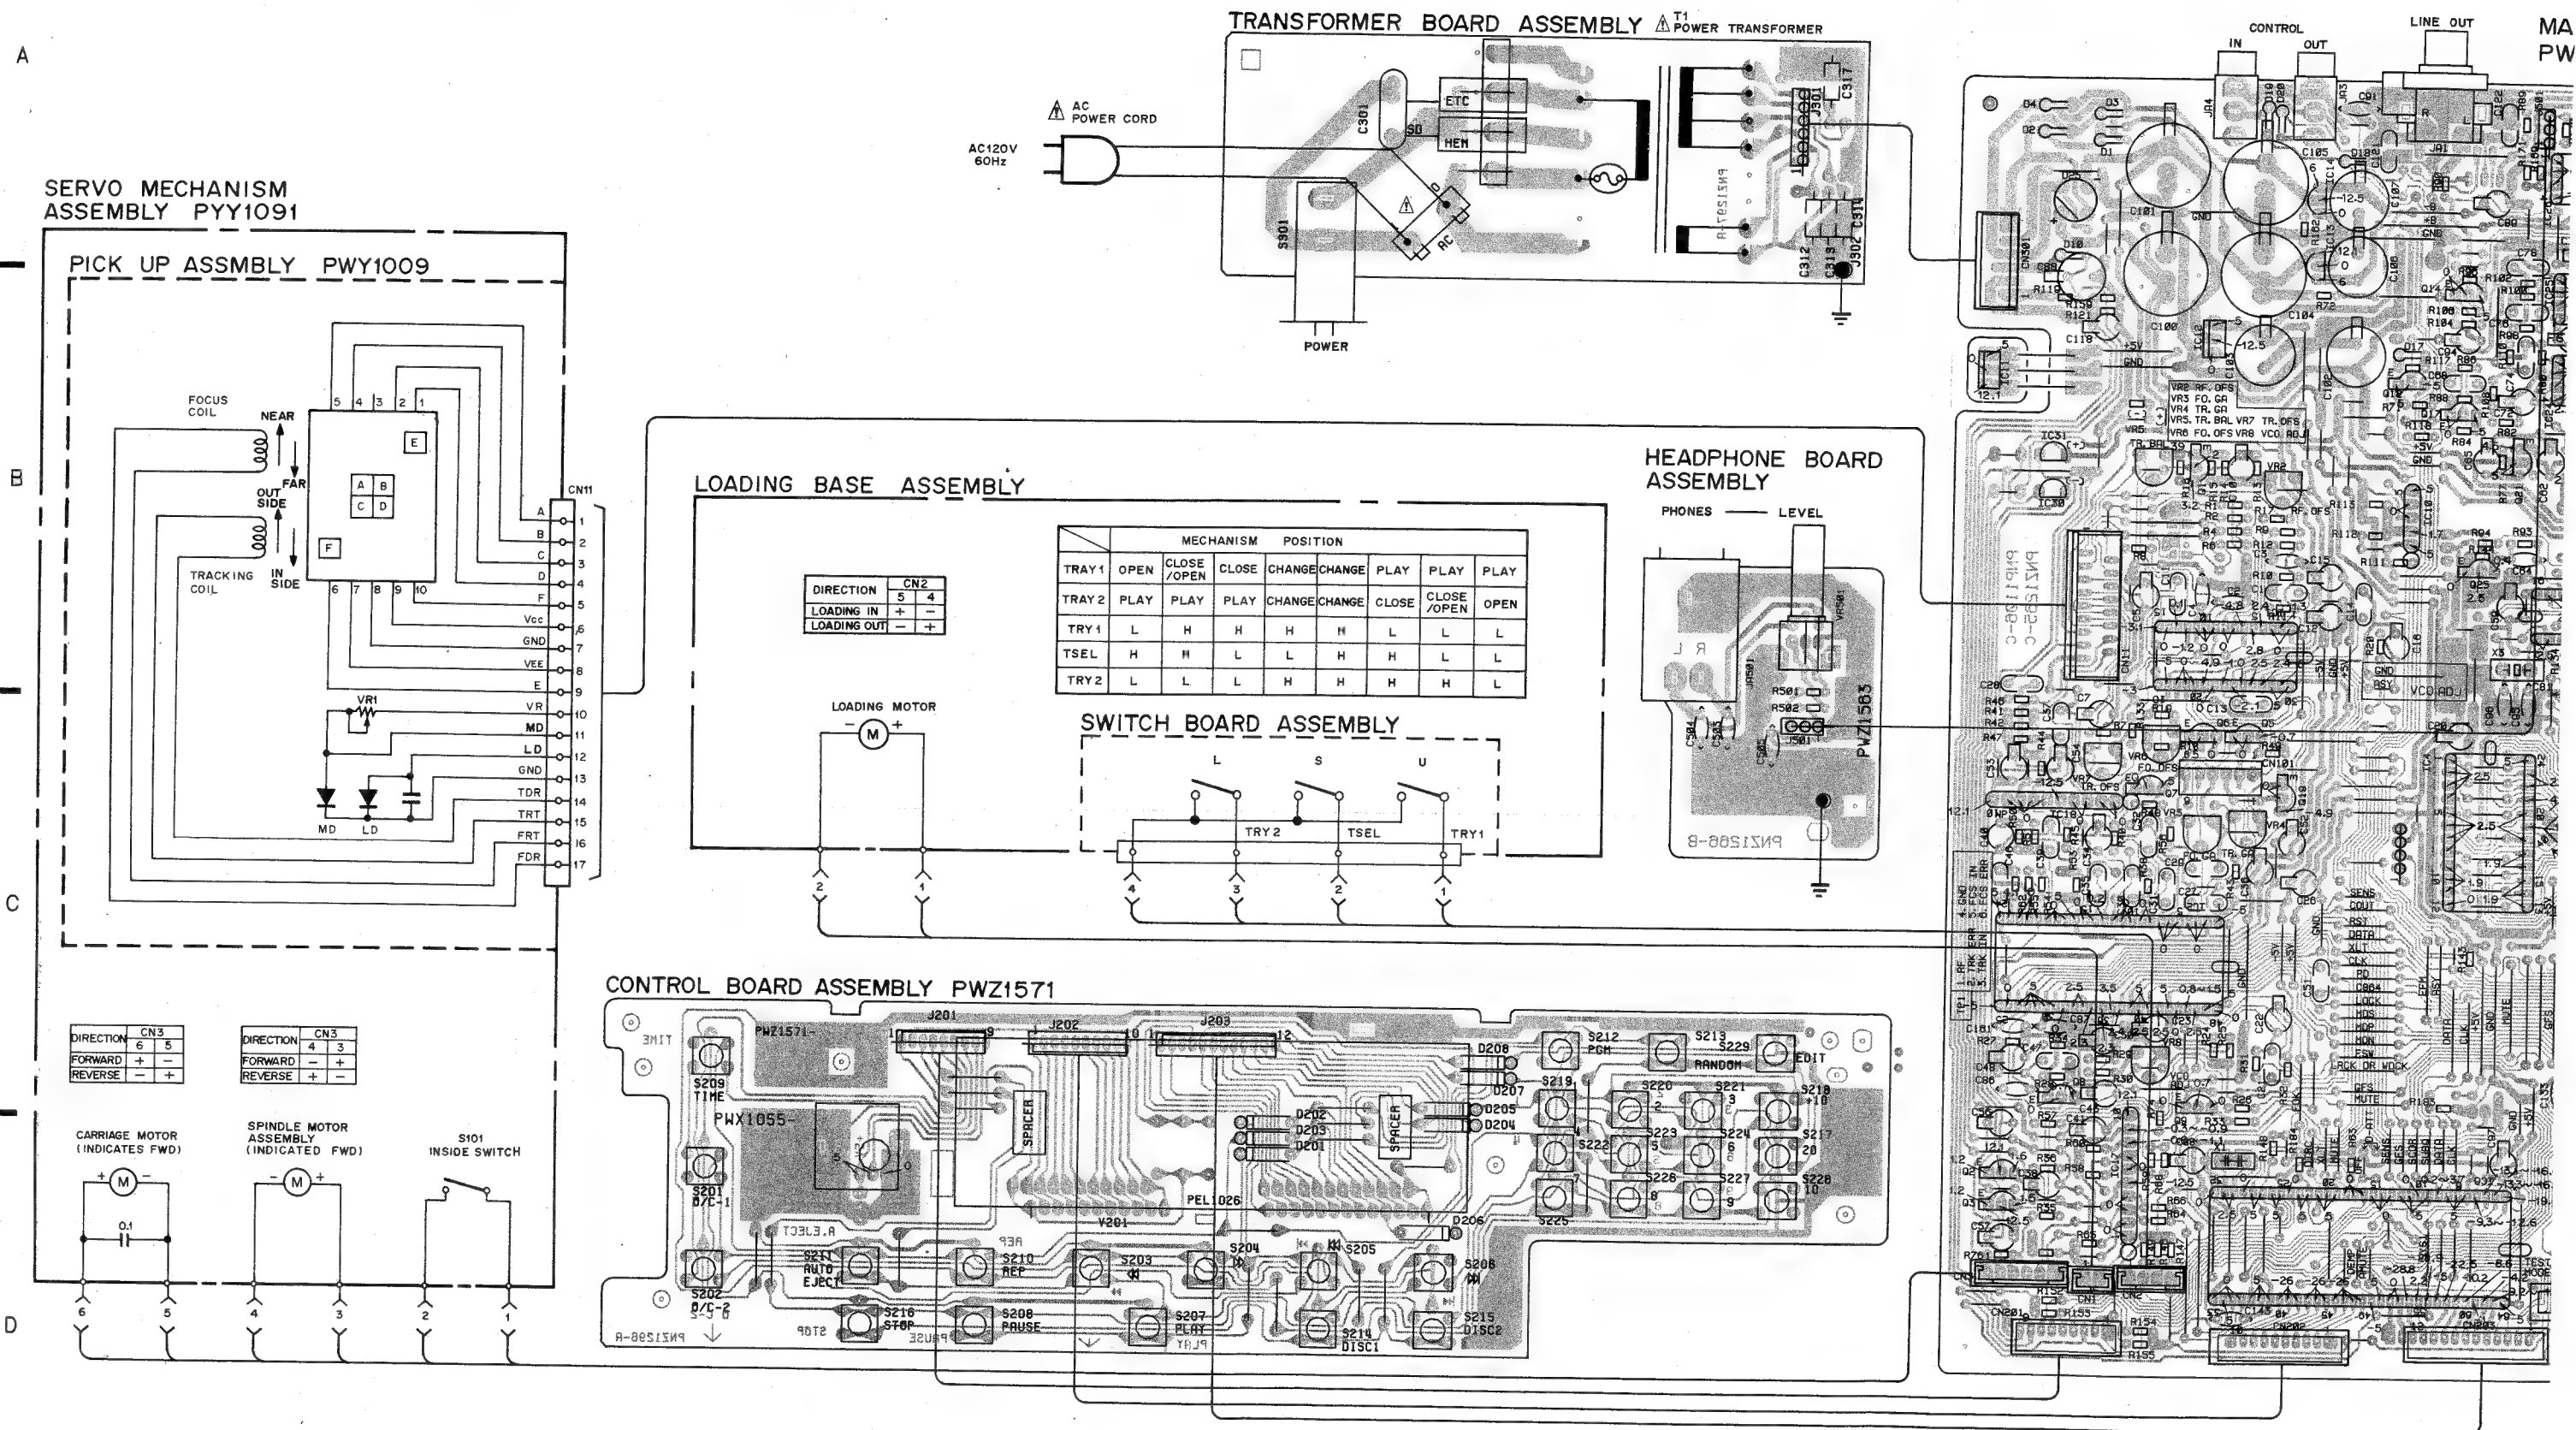


A


- B

TERMINAL VOLTAGE		IC3 (CXDM3002)	
1	5.2	1	5.2
2	5.2	2	5.2
3	5.2	3	5.2
4	5.2	4	5.2
5	5.2	5	5.2
6	5.2	6	5.2
7	5.2	7	5.2
8	5.2	8	5.2
9	5.2	9	5.2
10	5.2	10	5.2
11	5.2	11	5.2
12	5.2	12	5.2
13	5.2	13	5.2
14	5.2	14	5.2
15	5.2	15	5.2
16	5.2	16	5.2
17	5.2	17	5.2
18	5.2	18	5.2
19	5.2	19	5.2
20	5.2	20	5.2
21	5.2	21	5.2
22	5.2	22	5.2
23	5.2	23	5.2
24	5.2	24	5.2
25	5.2	25	5.2
26	5.2	26	5.2
27	5.2	27	5.2
28	5.2	28	5.2
29	5.2	29	5.2
30	5.2	30	5.2
31	5.2	31	5.2
32	5.2	32	5.2
33	5.2	33	5.2
34	5.2	34	5.2
35	5.2	35	5.2
36	5.2	36	5.2
37	5.2	37	5.2
38	5.2	38	5.2
39	5.2	39	5.2
40	5.2	40	5.2
41	5.2	41	5.2
42	5.2	42	5.2
43	5.2	43	5.2
44	5.2	44	5.2
45	5.2	45	5.2
46	5.2	46	5.2
47	5.2	47	5.2
48	5.2	48	5.2
49	5.2	49	5.2
50	5.2	50	5.2
51	5.2	51	5.2
52	5.2	52	5.2
53	5.2	53	5.2
54	5.2	54	5.2
55	5.2	55	5.2
56	5.2	56	5.2
57	5.2	57	5.2
58	5.2	58	5.2
59	5.2	59	5.2
60	5.2	60	5.2


MAIN BOARD ASSEMBLY

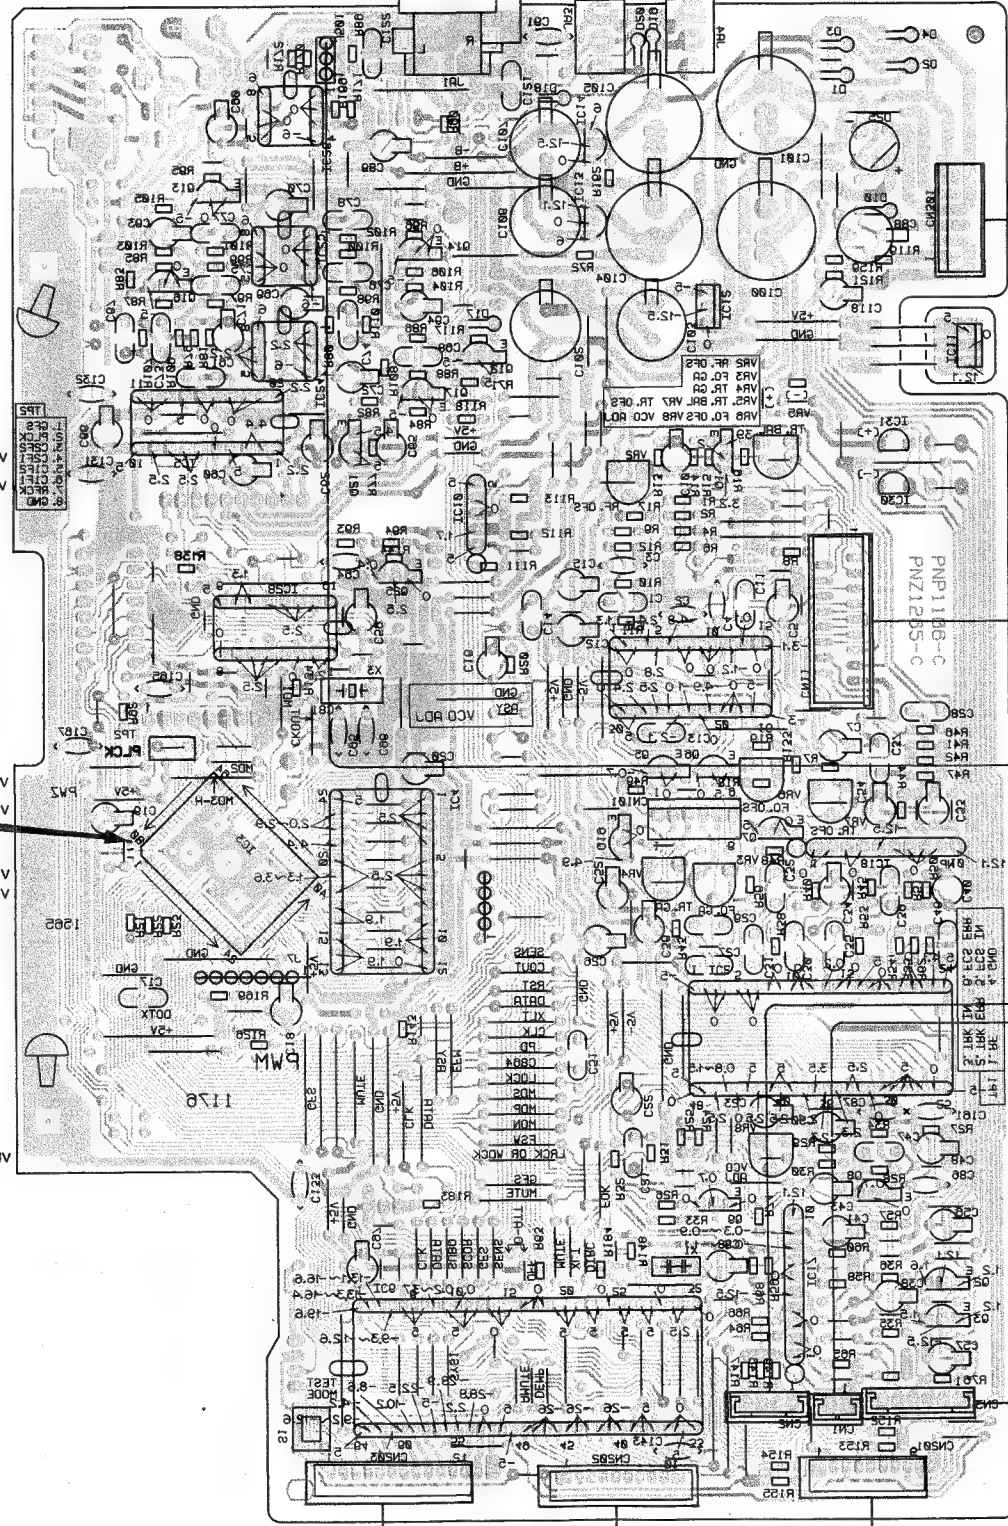



TRANSFORMER BOARD ASSEMBLY

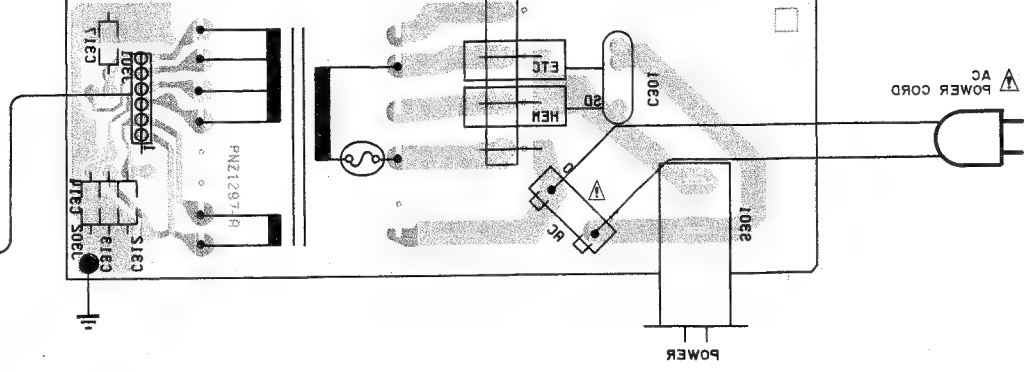

HEADPHONE BOARD ASSEMBLY

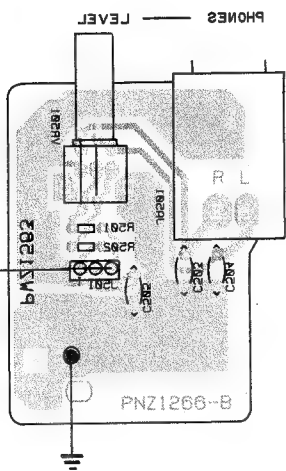


MECHANISM POSITION		TRY1		TRY2		TRY3		TRY4	
OPEN	CLOSE	OPEN	CLOSE	OPEN	CLOSE	OPEN	CLOSE	OPEN	CLOSE
PLAY	PLAY	PLAY	PLAY	PLAY	PLAY	PLAY	PLAY	PLAY	PLAY
CHANGE	CHANGE	CHANGE	CHANGE	CHANGE	CHANGE	CHANGE	CHANGE	CHANGE	CHANGE
OPEN	CLOSE	OPEN	CLOSE	OPEN	CLOSE	OPEN	CLOSE	OPEN	CLOSE

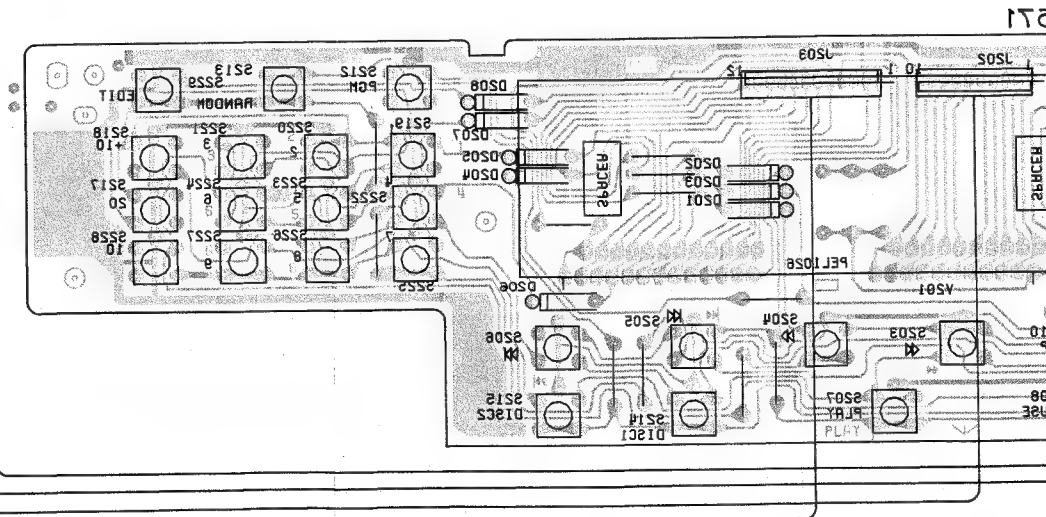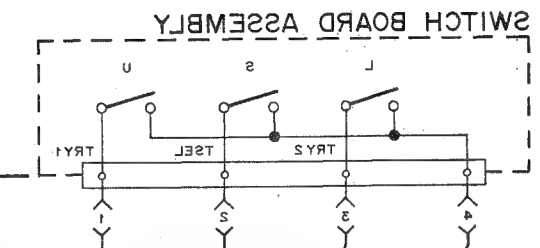



7. P.C. BOARDS CONNECTION DIAGRAM

• View from soldering side


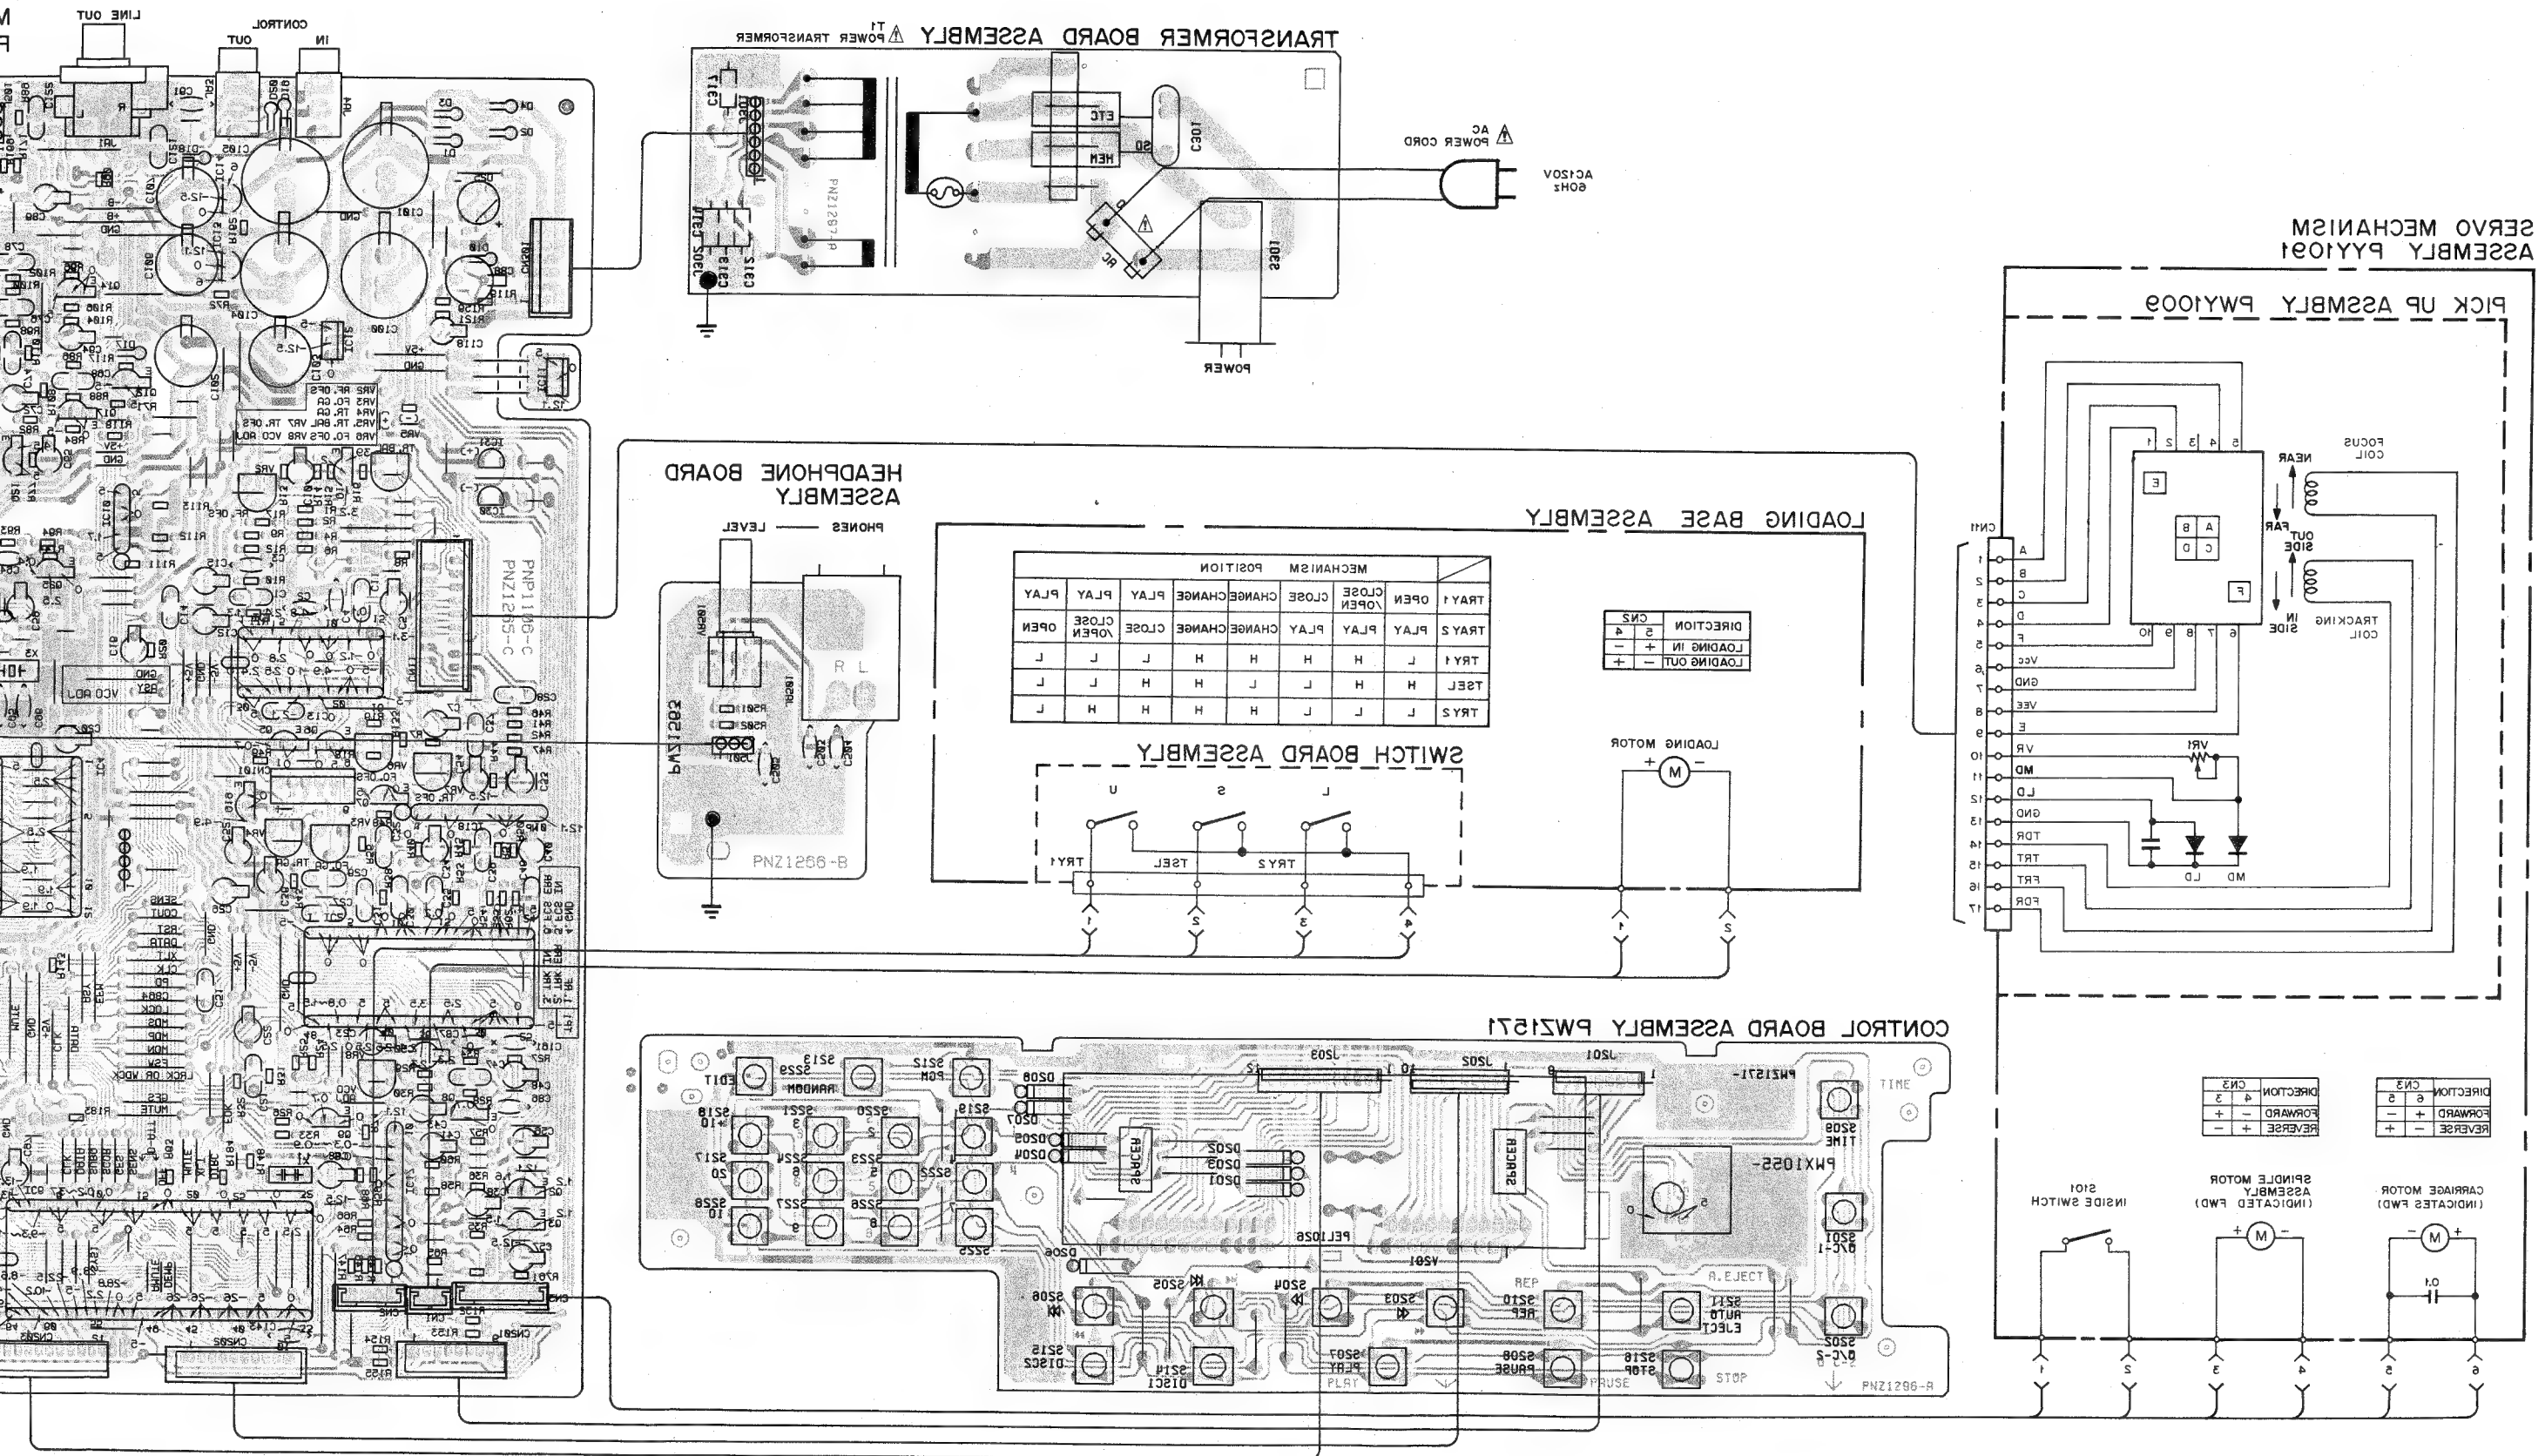


WAVEFORMS

NOTE: The encircled numbers denote measuring points in the circuit and pattern diagrams.

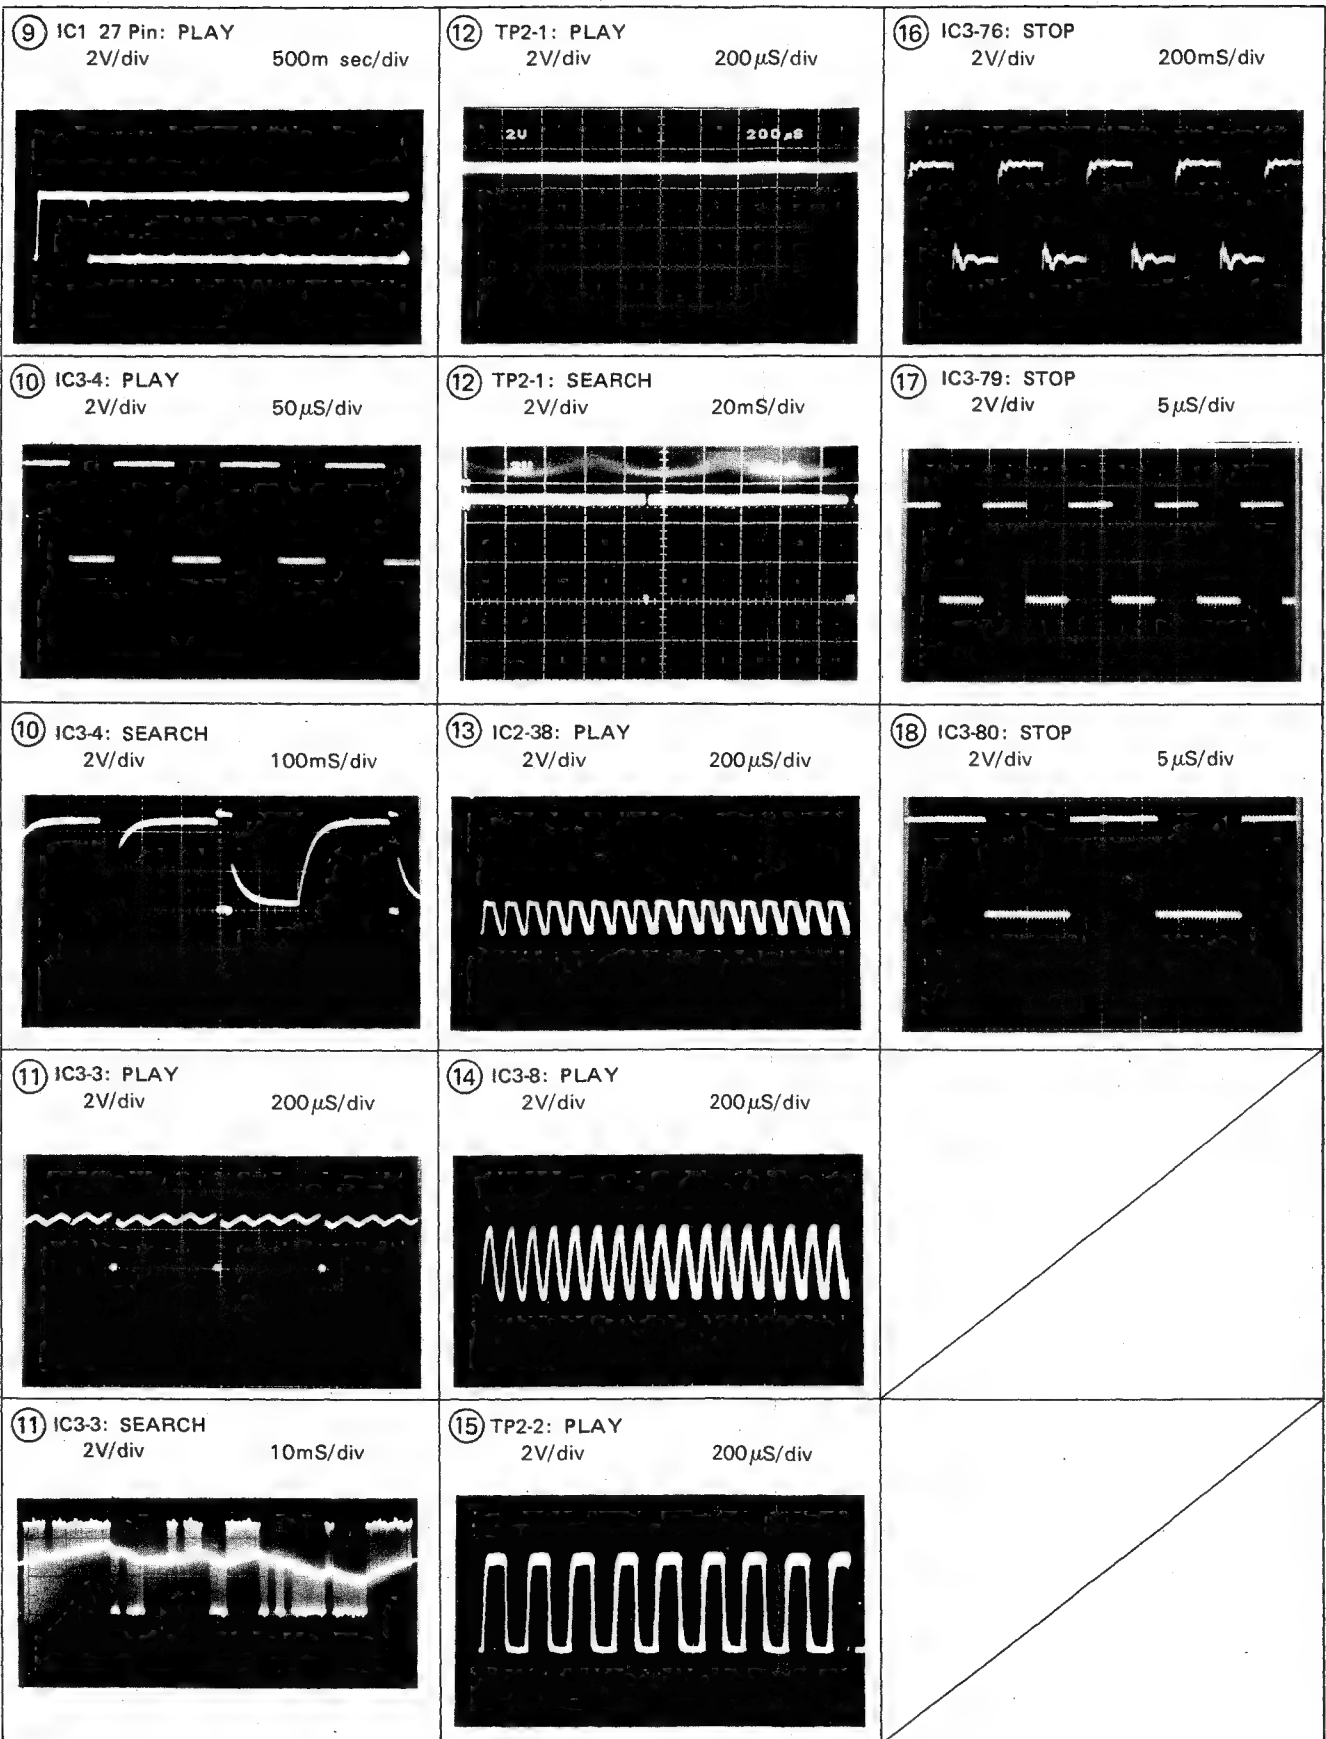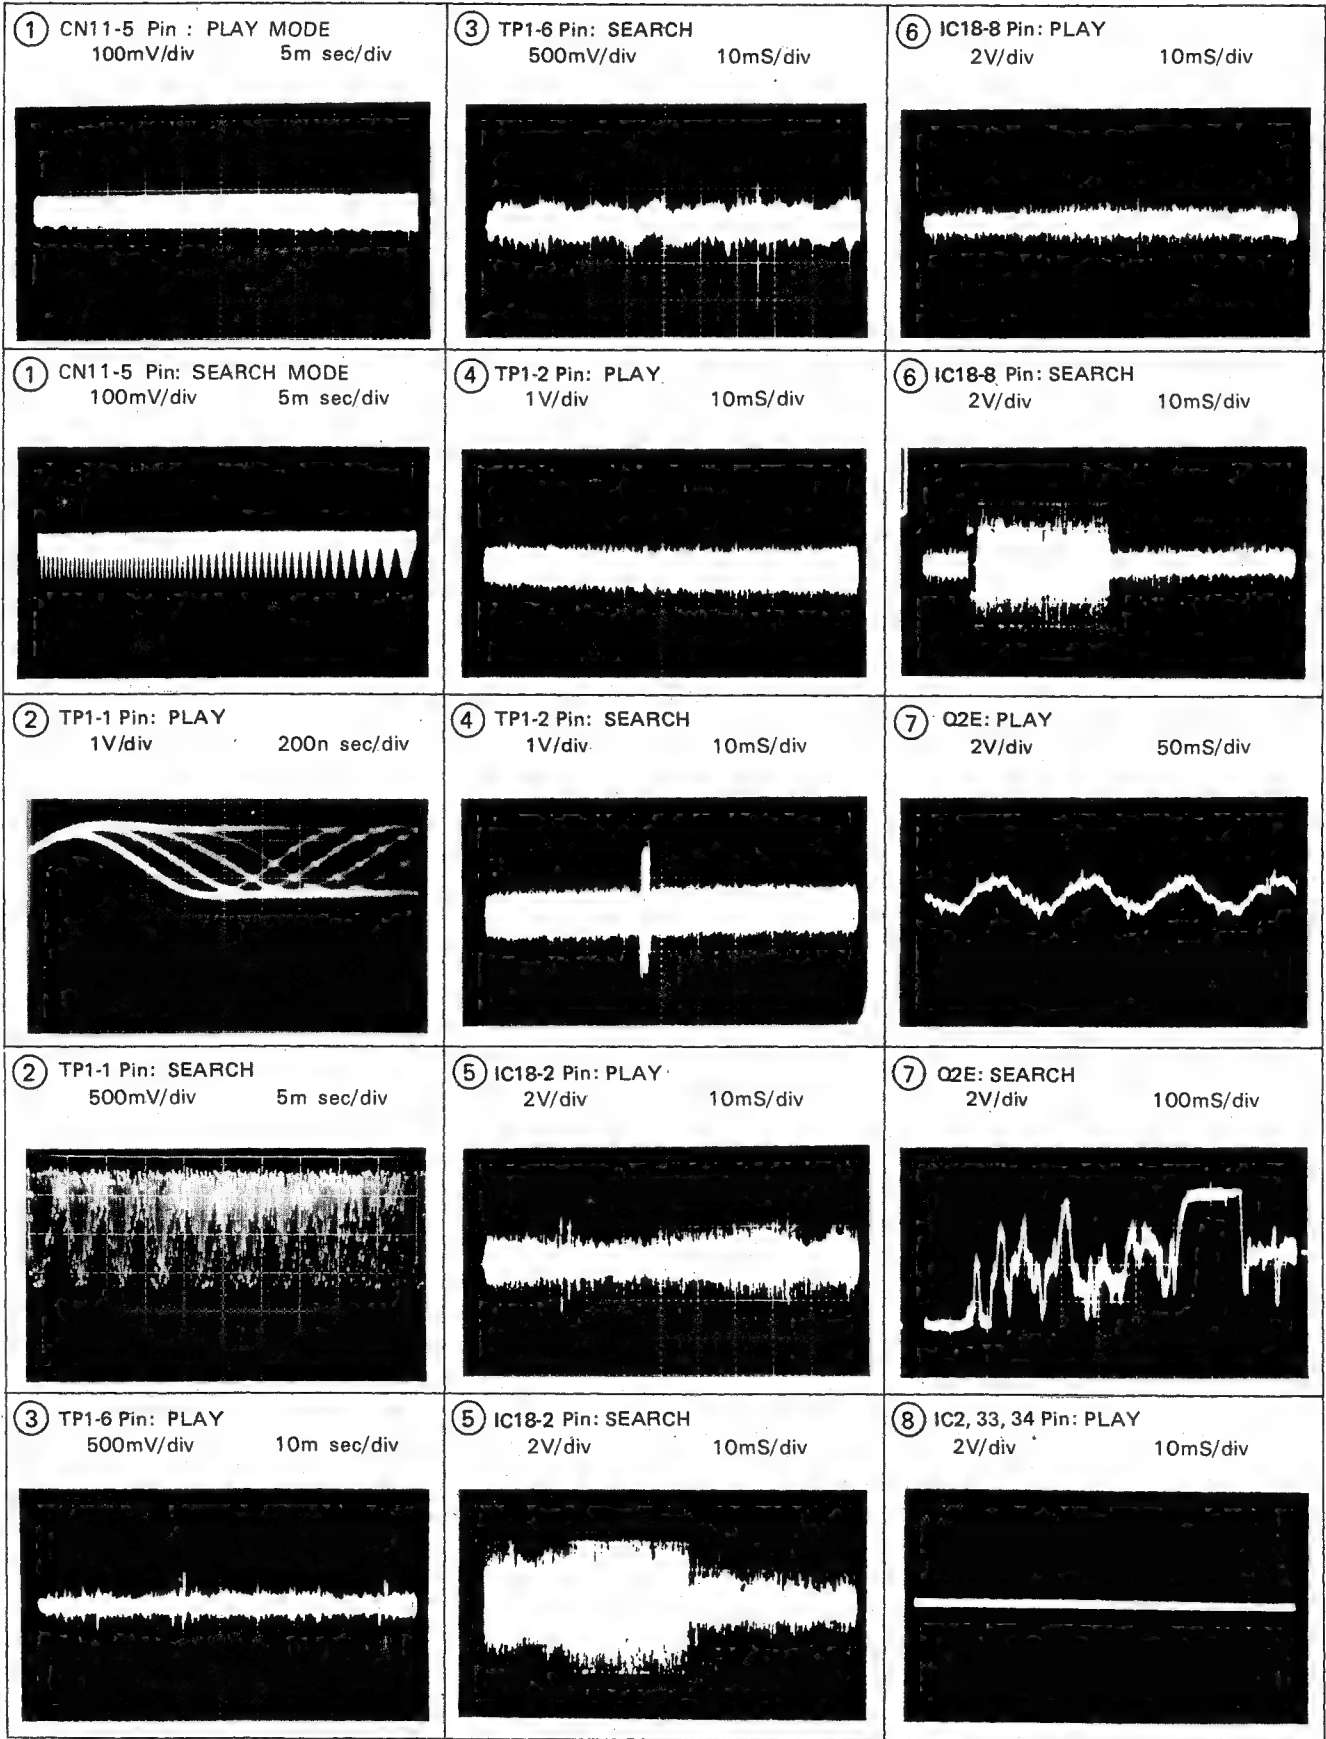

in the circuit and

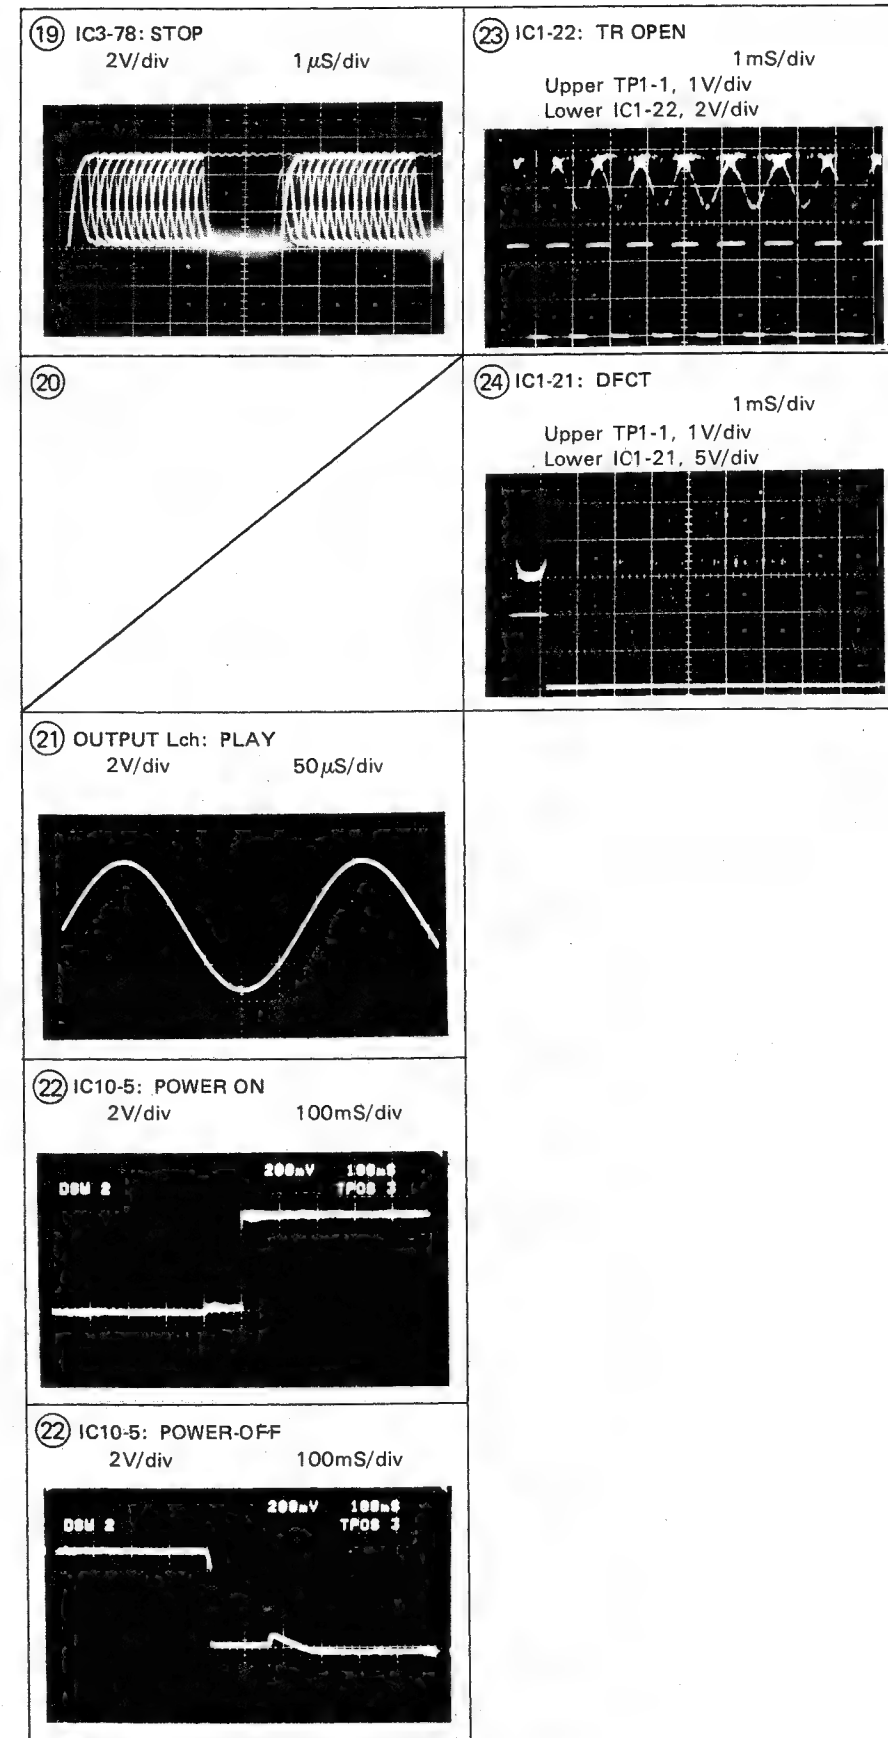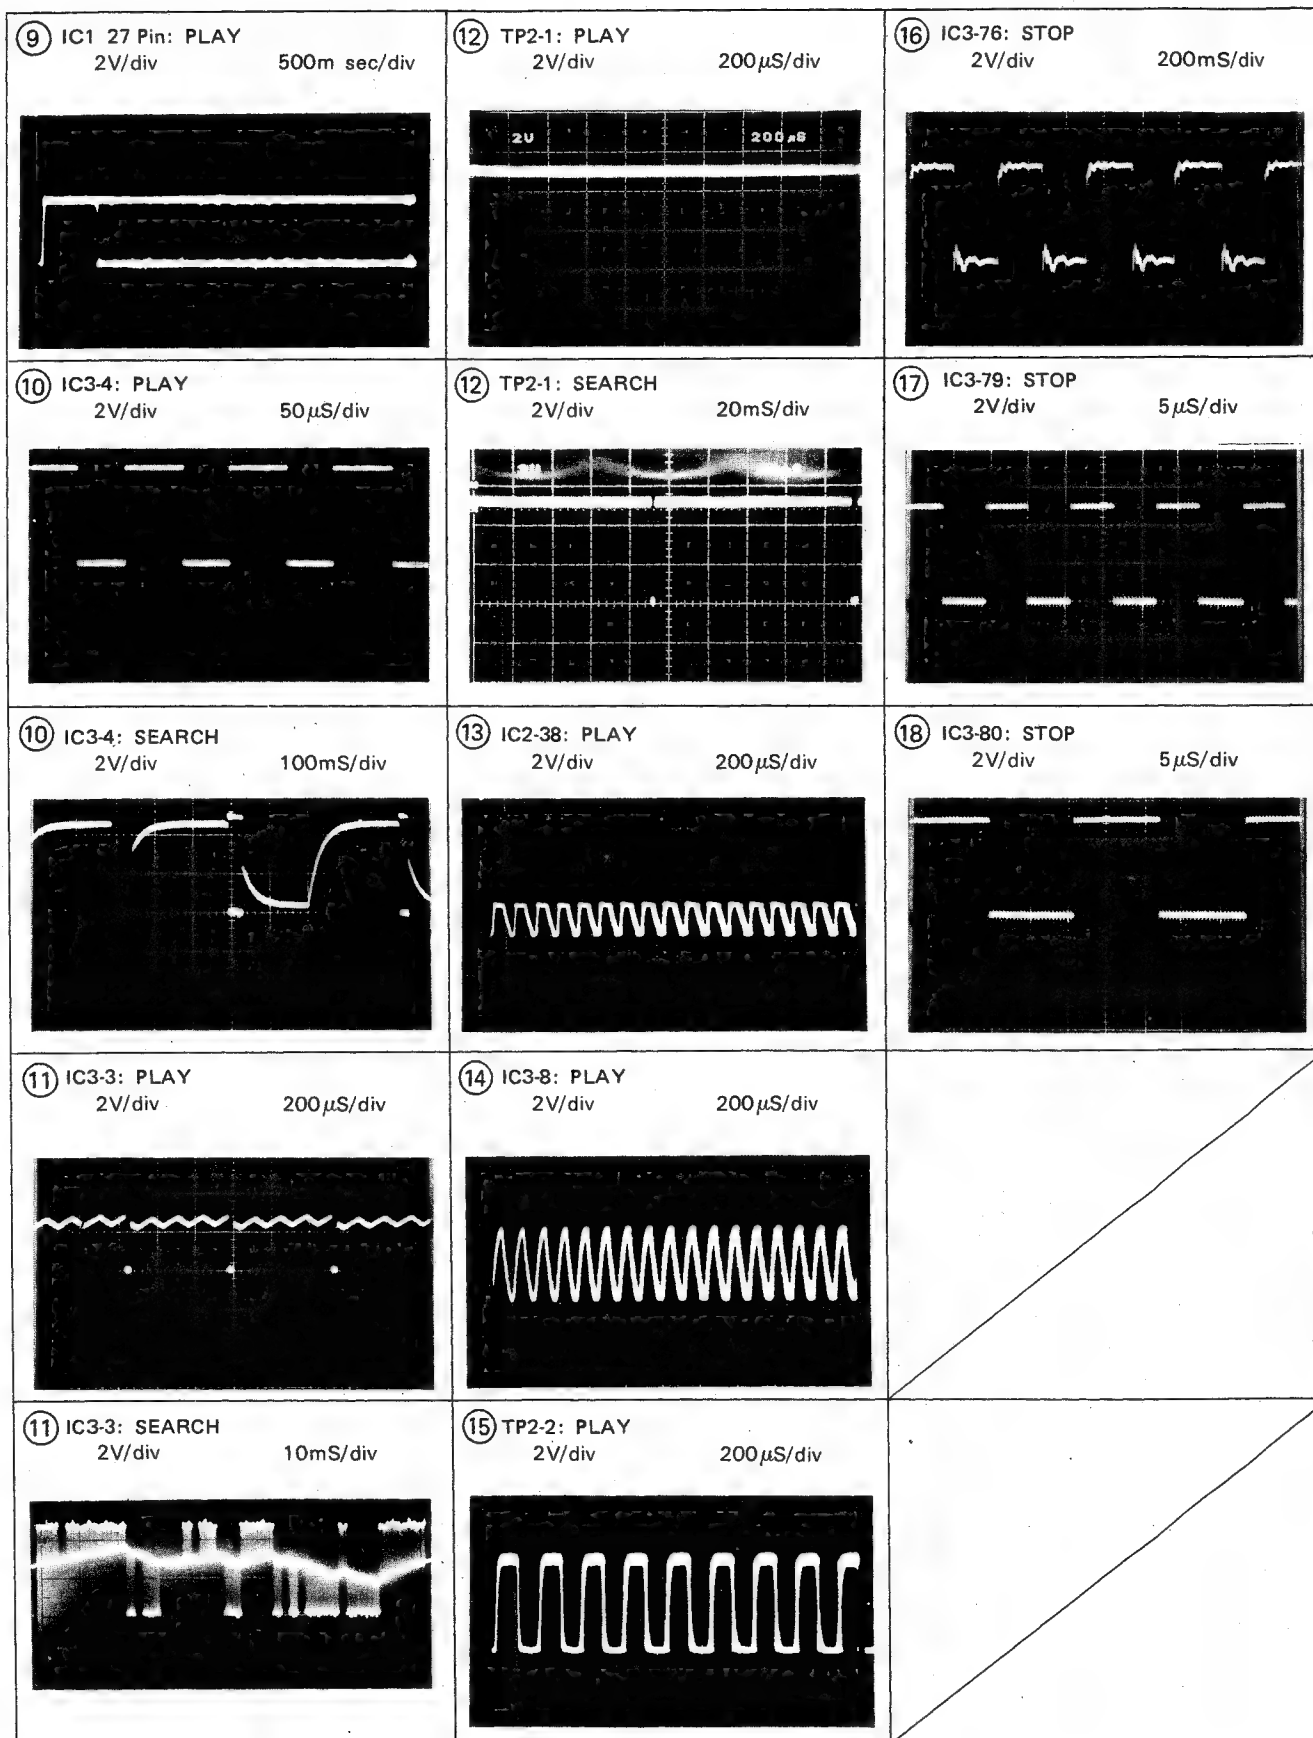

8. ELECTRICAL PARTS LIST

NOTES :

- Parts without part number cannot be supplied.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω	56×10 ¹	561	RD1/4PS	561J
47k Ω	47×10 ³	473	RD1/4PS	473J
0.5 Ω	0R5		RN2H	0R5K
1 Ω	010		RS1P	010K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω	562×10 ¹	5621	RN1/4SR	5621F
---------	---------------------	------	---------	-------

Miscellaneous Parts

P. C. BOARD ASSEMBLIES

Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
⊙	Main board assembly	PWZ1565	Q6	DTA124ES	
⊙	Control board assembly	PWZ1571	Q12, Q19	DTC124ES	
Δ	Transformer board assembly		Q1, Q3	2SA1399	
	Switch board assembly		Q7	2SA933S	
	Headphone board assembly		Q5, Q8, Q9, Q16, Q17, Q21	2SC1740S	

OTHERS

Mark	Symbol & Description	Part No.
Δ	Strain relief	CM-22C
Δ	AC Power cord	PDG1015
Δ	Power transformer	PTT1091
	Semiconductive ceramic capacitor	CGDYX104M25
	S101 Slide switch (INSIDE)	PSH1003
	Spindle motor assembly (with oil)	PYY1109
	Motor (CARRIAGE, LOADING)	PXM1002
	Pick-up assembly	PWY1009
	Motor assembly (CARRIAGE)	PYY1025
	Motor assembly (LOADING)	PYY1089

⊙ Main Board Assembly (PWZ1565)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
	IC1	CXA1081S
	IC2	CXA1082BS
	IC3	CXD1130QZ
Δ	IC30, IC31	ICP-N10
	IC5	LC7881-B
	IC4	LH5116-15
	IC10	M51955AL
	IC24, IC25, IC26	M5218P
	IC13	NJM78L06A
Δ	IC11	NJM7805FA
	IC14	NJM79L06A
Δ	IC12	NJM7905FA
	IC6	PD4184
	IC28	SM5807FP
Δ	IC17, IC18	TA8410K (V15)

Mark	Symbol & Description	Part No.
	Q2	2SC3581
	Q13, Q14	2SD1302
	Q25	2SC3732
	D1-D4, D10	1SR139-400
	D17-D20	1SS254
Δ	D25	2W02-5008-L

SWITCH

Mark	Symbol & Description	Part No.
	S1 Tact switch (TEST)	PSG1002

CAPACITORS

Mark	Symbol & Description	Part No.
	C64	CCCCH100D50
	C95, C96	CCCCH270J50
	C2, C4	CCCCH300J50
	C3	CCCCH390J50
	C87	CCCCH101J50
	C161	CCCCH221J50
	C40	CEANP4R7M25
	C16, C22	CEASR47M50
	C5, C10, C43, C62	CEAS101M10
	C88	CEAS101M35
	C102, C103	CEAS102M10
	C104, C105	CEAS102M16
	C71, C72, C93, C94	CEAS220M50
	C118	CEAS220M35
	C100, C101	CEAS222M16

Mark	Symbol & Description	Part No.
	C48	CEAS3R3M50
	C7, C12, C15, C18, C20, C23,	CEAS330M16
	C26, C36, C38, C41, C50, C52-	
	C54, C56, C57, C59, C60, C65,	
	C66, C69, C70, C89, C90, C97,	
	C98	
	C34	CEAS4R7M50
	C19, C106, C107	CEAS471M10
	C86, C91, C143, C167	CKCYF103Z50
	C131-C133	CKCYF473Z50
	C75, C76	CQMA102J50
	C30, C51	CQMA102K50
	C14, C17, C46, C61	CQMA103K50
	C31, C32, C35, C39	CQMA104K50
	C77, C78	CQMA152J50
	C29	CQMA272J50
	C13	CQMA332J50
	C11, C21, C28, C37	CQMA333K50
	C1, C27, C47, C73, C74	CQMA472J50
	C67, C68	CQMA683J50
	C121, C122	CQSA102J50

RESISTORS

Mark	Symbol & Description	Part No.
	R30	RN 1/4 PQ3601F
	VR2 Semi-fixed resistors (10k)	VRTB6VS103
	VR3-VR7 Semi-fixed resistors (22k)	VRTB6VS223
	VR8 Semi-fixed resistors (1k)	VRTS6VS102
	Other resistors	RD 1/4 PM □□□ J

OTHERS

Mark	Symbol & Description	Part No.
	JA1 Terminal 2P (LIN OUT L/R)	PKB1009
	JA3, JA4 Mini jack (CONTROL IN/OUT)	RKN1004
	X3 Crystal resonator	PSS-012
	X1 Ceramic resonator	VSS1014

⊙ Control Board Assembly (PWZ1571)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
	D201-D208	1SS254

SWITCHES

Mark	Symbol & Description	Part No.
	S201-S229 Tact switch (OPEN/CLOSE DISC I, OPEN/CLOSE DISC II, <<, >>, <<<, >>>, >, ■, TIME, REPEAT, AUTO EJECT, PGM, RANDOM PLAY, DISC I, DISC II, ■, ≥20, +10, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, EDIT)	PSG1003

OTHERS

Mark	Symbol & Description	Part No.
	V201 Fluorescent indicator tube Remote sensor unit	PEL1026 GP1U50X

Δ Transformer Board Assembly

SWITCH

Mark	Symbol & Description	Part No.
Δ	S301 Push switch (POWER)	PSA-009

CAPACITORS

Mark	Symbol & Description	Part No.
Δ	C312-C314, C317 C301 (0.01 μ F/AC400V)	CKPYX103N25 RCG-009

Switch Board Assembly

SWITCHES

Mark	Symbol & Description	Part No.
	S601-S603 Push switch (U, S, L)	PSH1008

Headphone Board Assembly

CAPACITORS

Mark	Symbol & Description	Part No.
	C503, C504 C505	CKCYF102Z50 CKCYF103Z50

RESISTORS

Mark	Symbol & Description	Part No.
	VR501 Variable resistor (LEVEL)	PCS1003
	R501, R502	RD 1/4 PM470J

OTHER

Mark	Symbol & Description	Part No.
	JA501 Jack (PHONES)	RKN1001

9. AD

The adjustr must be n OPEN/CLC during test

• Adjustr

1. Tracki
2. RF lev
3. LD (L
4. Focus
5. Grating
6. Tracki
7. Tanger
8. Focus
9. Tracki
10. VCO f
11. Confin

• Measur

1. Dual tr
2. Laser f
3. Test di
4. Loop g
5. Signal
6. Freque
7. Other

Adjustment

Mark	Symbol & Description	Part No.
	C48 C7, C12, C15, C18, C20, C23, C26, C36, C38, C41, C50, C52- C54, C56, C57, C59, C60, C65, C66, C69, C70, C89, C90, C97, C98 C34 C19, C106, C107 C86, C91, C143, C167	CEAS3R3M50 CEAS330M16 CEAS4R7M50 CEAS471M10 CKCYF103Z50
	C131-C133 C75, C76 C30, C51 C14, C17, C46, C61 C31, C32, C35, C39	CKCYF473Z50 CQMA102J50 CQMA102K50 CQMA103K50 CQMA104K50
	C77, C78 C29 C13 C11, C21, C28, C37 C1, C27, C47, C73, C74	CQMA152J50 CQMA272J50 CQMA332J50 CQMA333K50 CQMA472J50
	C67, C68 C121, C122	CQMA683J50 CQSA102J50

RESISTORS

Mark	Symbol & Description	Part No.
	R30 VR2 Semi-fixed resistors (10k) VR3-VR7 Semi-fixed resistors (22k) VR8 Semi-fixed resistors (1k) Other resistors	RN 1/4 PQ3601F VRTB6VS103 VRTB6VS223 VRTS6VS102 RD 1/4 PM □ □ □ J

OTHERS

Mark	Symbol & Description	Part No.
	JA1 Terminal 2P (LIN OUT L/R) JA3, JA4 Mini jack (CONTROL IN/OUT) X3 Crystal resonator X1 Ceramic resonator	PKB1009 RKN1004 PSS-012 VSS1014

Control Board Assembly (PWZ1571)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
	D201-D208	1SS254

SWITCHES

Mark	Symbol & Description	Part No.
	S201-S229 Tact switch (OPEN/CLOSE DISC I, OPEN/ CLOSE DISC II, <<, >>, <<>>, >><<, ■, TIME, REPEAT, AUTO EJECT, PGM, RANDOM PLAY, DISC I, DISC II, ■, ≥20, +10, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, EDIT)	PSG1003

OTHERS

Mark	Symbol & Description	Part No.
	V201 Fluorescent indicator tube Remote sensor unit	PEL1026 GP1U50X

Transformer Board Assembly

SWITCH

Mark	Symbol & Description	Part No.
△	S301 Push switch (POWER)	PSA-009

CAPACITORS

Mark	Symbol & Description	Part No.
	C312-C314, C317 C301 (0.01 μ F/AC400V)	CKPYX103N25 RCG-009

Switch Board Assembly

SWITCHES

Mark	Symbol & Description	Part No.
	S601-S603 Push switch (U, S, L)	PSH1008

Headphone Board Assembly

CAPACITORS

Mark	Symbol & Description	Part No.
	C503, C504 C505	CKCYF102Z50 CKCYF103Z50

RESISTORS

Mark	Symbol & Description	Part No.
	VR501 Variable resistor (LEVEL) R501, R502	PCS1003 RD 1/4 PM470J

OTHER

Mark	Symbol & Description	Part No.
	JA501 Jack (PHONES)	RKN1001

9. ADJUSTMENTS

The adjustment items for this unit are shown below. Adjustments must be made in the order in which they are listed. As OPEN/CLOSE operation for disc tray 2 cannot be performed during test mode, use tray 1 for adjustments.

Adjustment and check items

- Tracking offset, focus offset and RF offset adjustments
- RF level adjustment
- LD (Laser Diode) power check
- Focus lock and spindle lock check
- Grating adjustment
- Tracking adjustment
- Tangential adjustment
- Focus gain adjustment
- Tracking gain adjustment
- VCO free-run frequency adjustment
- Confirmation of S character (focus error)

Measuring Equipment

- Dual trace oscilloscope
- Laser power meter
- Test disc (YEDS-7)
- Loop gain adjustment filter
- Signal generator
- Frequency counter
- Other general tools

Adjustment points

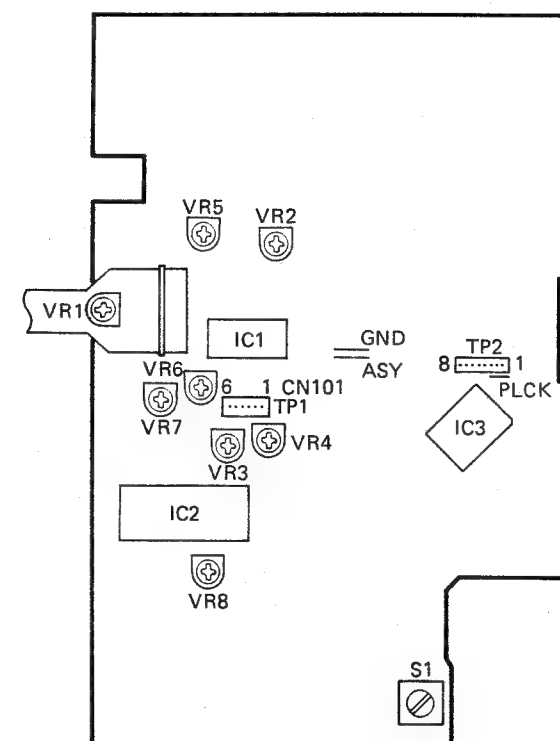


Fig. 9-1.

Test Mode

Test mode setting and cancellation procedures

- To set the test mode, turn ON the power switch (S301) while holding the test mode switch (S1) down.
- The test mode is cancelled by turning the power switch OFF.

The functions of the keys in the test mode are outlined in Table 9-1.


Adjustment VRs (Variable Resistors) and Names

- VR1: Laser power
- VR2: RF offset (RF. OFS)
- VR3: Focus gain (FCS. GAN)
- VR4: Tracking gain (TRK. GAN)
- VR5: Tracking balance (TRK. BAL)
- VR6: Focus offset (FCS.OFS)
- VR7: Tracking offset (TRK. OFS)
- VR8: VCO free-run adjustment (VCO. ADJ)

In the test mode, the servos are closed and opened individually. Consequently, the servos must each be closed one at a time (in serial sequence) in order to set the unit to normal PLAY mode. Note also that during test mode the unit will not enter the PLAY mode when the PAUSE (■) key is pressed alone.

Example: Switching from STOP to PLAY mode.

* In the test mode, the servos must be operated in serial sequence.


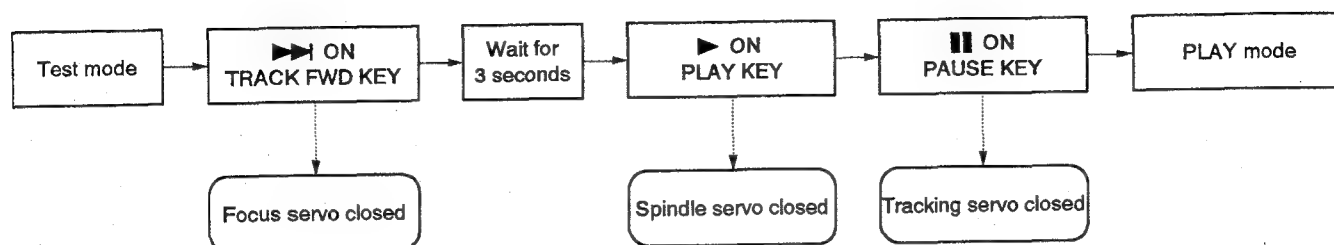




• Key Functions in the Test Mode


Symbol	Key name	Function during test mode	Description
▶▶	TRACK FWD	Focus servo close	Turns ON the laser diode, and raises/lowers the focusing actuator to close the focus servo. After closing disc tray 1, the tray is moved to PLAY position.
▶	PLAY	Spindle servo close	Closes the servo in the CLV-A mode after starting the spindle motor.
■	PAUSE	Tracking servo close/open	Performs toggle operation: closes the tracking servo and sets to PLAY mode when pressed (provided the focus and spindle servos are closed), at which time the PAUSE indicator illuminates; opens the tracking servo when pressed again.
◀	MANUAL SEARCH REV	Carriage reversal (inward movement)	Moves carriage rapidly (3 cm/s) toward the center. Because there is no safety mechanism for stopping the carriage, release the key when the carriage reaches the innermost track.
▶▶	MANUAL SEARCH FWD	Carriage advance (outward movement)	Moves carriage rapidly (3 cm/s) toward the outer edge. Because there is no safety mechanism for stopping the carriage, release the key when the carriage reaches the outermost track.
■	STOP	Stop	Stops all servos and returns system to its initial state.
▲	OPEN/CLOSE Disc I	(Disc tray) open/close	Opens and closes the disc tray. However, pickup does not return to rest when opening, and remains stationary when closing the tray.







Table 9-1.




Step No.	Oscilloscope Setting		Test Points	Adjusting Points	Check Items/ Adjustment Specifications	Adjustment Procedure
	V	H				
1	TRACKING OFFSET, FOCUS OFFSET, RF OFFSET ADJUSTMENT					
			TP1 Pin 2 (TRK. ERR) TP1 Pin 6 (FCS. ERR) TP1 Pin 1 (RF output)	VR5 (TRK. BAL) VR7 (TRK. OFS) VR6 (FCS. OFS) VR2 (RF. OFS)	Tracking offset 45° 0V ± 50 mV Focus offset 0V ± 50 mV RF offset 100 mV ± 50 mV	<ul style="list-style-type: none">• Set to test mode (see page 30).• Turn VR5 TRK. BAL (tracking balance) counterclockwise about 45° from center position.• Adjust VR7 TRK.OFS (tracking offset) so that the TRK. ERR (tracking error) voltage at TP1 Pin 2 becomes 0V ± 50 mV.• Adjust VR6 FCS.OFS (focus offset) so that the FCS.ERR (focus error) voltage at TP1 Pin 6 becomes 0V ± 50 mV.• Adjust VR2 RF.OFS (RF offset) so that the RF output voltage at TP1 Pin 1 becomes 100 mV ± 50 mV. <p>Note: After performing tracking offset adjustment, be sure to perform "6. TRACKING BALANCE ADJUSTMENT."</p>
2	RF LEVEL ADJUSTMENT					
			TP1 Pin 1 (RF output)	VR1 (laser power)	1.5V +0.2V -0V.	<ul style="list-style-type: none">• Set to test mode (see page 30).• Play the test disc, connect the oscilloscope to TP1 Pin 1 (RF output), and measure the P-P voltage of the RF waveform.• Adjust so that the voltage becomes 1.5V +0.2V -0V.
3	LD (LASER DIODE) POWER CHECK					
					Less than 0.13 mW	<ul style="list-style-type: none">• Set to test mode (see page 30).• Press the TRACK FWD. (▶▶) key to turn ON the LD (laser diode).• Place the sensor of the laser power meter directly above the objective lens and confirm that the output power of the LD does not exceed 0.13 mW.

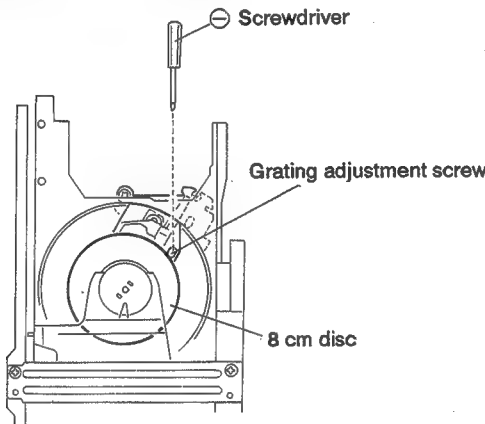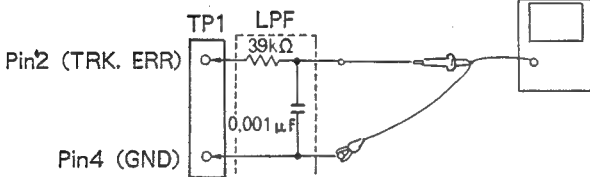Step No.	Oscilloscope Setting		Test Points	Adjusting Points	Check Items/ Adjustment Specifications	Adjustment Procedure
	V	H				
4	FOCUS LOCK AND SPINDLE LOCK CHECK					
	V 0.5V/div	H 100 msec /div	TP1 Pin 1 (RF output)		RF output exists Normal (clockwise) rotation	<ul style="list-style-type: none">• Set test disc.• Set to test mode (see page 30).• Press the MANUAL SEARCH FWD (▶▶) key to move the pickup close to the center of the disc.• Observe the output of TP1 Pin 1 (RF output) on the oscilloscope. Confirm that the RF signal is output after pressing the TRACK FWD (▶▶)key.• Press the PLAY (▶) key and confirm that the disc rotates at constant speed (approx. 30 rpm near center of disc) in the normal (clockwise) direction; make sure that the disc does not rotate too fast or counter-clockwise.
5	GRATING ADJUSTMENT (1) (using an 8 cm disc)					
	 <p>Fig. 9-2.</p>					<p>Note: This adjustment can only be performed using a 8 cm disc having pits over a diameter of 75 mm.</p> <ul style="list-style-type: none">• Set to test mode (see page 30).• Set the 8 cm disc. Shift the pickup to the outermost track so that it is positioned over pits and the pickup grating adjustment hole is visible from the hole in the servo mechanism (see Fig. 9-2.).• Press the TRACK FWD (▶▶) and PLAY (▶) keys in sequence to close the focus servo and spindle servo (do not close the tracking servo).• Observe the waveform output of TP1 Pin 2 TRK.ERR (tracking error) on the oscilloscope, inserting a 4 kHz low-pass filter (see Fig. 9-3.).
	 <p>Fig. 9-3.</p>					

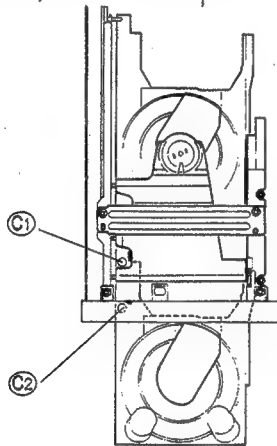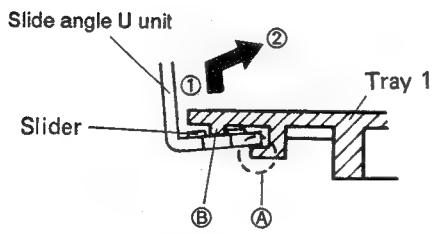Step No.	Oscilloscope Setting		Test Points	Adjusting Points	Check Items/ Adjustment Specifications	Adjustment Procedure
	V	H				
	0.5V/div	5 msec/div	TP1 Pin 2 (TRK. ERR)	Grating Grating	Null Point Maximum amplitude	<ul style="list-style-type: none">Insert \ominus screwdriver into the grating adjustment hole, and turn to find the null point (see Photo 9-1.).Next, slowly turn \ominus screwdriver in counterclockwise direction from the null point and adjust until the waveform (tracking error signal) reaches maximum amplitude (see Photo 9-2.). <p>Note: Use caution since inserting \ominus screwdriver forcefully will cause the pickup unit to float upward.</p> <ul style="list-style-type: none">Finally, confirm that there is no major fluctuation in the P-P voltage of the tracking error signal (do not insert the cutoff 4 kHz low-pass filter) when the pickup is shifted to the innermost track and when the pickup is shifted to the outermost track. If there is a difference of more than $\pm 10\%$, re-adjust by turning the grating adjustment screw to the maximum amplitude point of the tracking error signal.
5 GRATING ADJUSTMENT (2) (without 8 cm disc)						
	 <p>Fig. 9-4.</p>  <p>Fig. 9-5.</p>					<p>Perform this adjustment when an 8 cm disc is not available and Grating adjustment (1) cannot be performed. Remove the tray 1 before performing this adjustment.</p> <ul style="list-style-type: none">Removal of tray 1<ol style="list-style-type: none">Set tray 1 to OPEN position.Remove screws $\textcircled{C1}$, $\textcircled{C2}$ holding tray 1 in Fig. 9-4.Move tray 1 in the direction of arrow in Fig. 9-5, and as detaching projection \textcircled{B} of tray 1, free slide angle U unit from hook \textcircled{A} of tray 1.Pull out tray 1 as raising its side of slide angle U unit slightly.

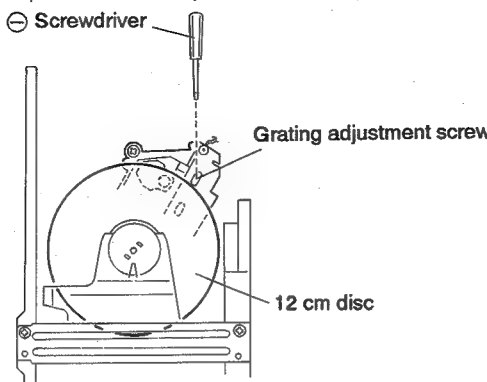Step No.	Oscilloscope Setting		Test Points	Adjusting Points	Check Items/ Adjustment Specifications	Adjustment Procedure
	V	H				
			<div></div> <p>Fig. 9-6.</p>			<p>Note: This adjustment can only be performed using a disc having pits up to a diameter 115 mm. The test disc (YEDS-7) cannot be used.</p> <ul style="list-style-type: none">• Set to test mode (see page 30).• Set a disc. Shift the pickup to the outermost track so that it is positioned over pits and the pickup grating adjustment hole is visible from the hole in the servo mechanism (see Fig. 9-6.).• Press the TRACK FWD (▶▶) and PLAY (▶) keys in sequence to close the focus servo and spindle servo (do not close the tracking servo).• Observe the waveform output of TP1 Pin 2 TRK. ERR (tracking error) on the oscilloscope, inserting a 4 kHz low-pass filter (see Fig. 9-7.).
	0.5V/div	5 msec/div	TP1 Pin 2 (TRK. ERR)	Grating Grating	Null Point Maximum amplitude	<ul style="list-style-type: none">• Insert ⊖ screwdriver into the grating adjustment hole, and turn to find the null point (see Photo 9-1.).• Next, slowly turn ⊖ screwdriver in counterclockwise direction from the null point and adjust until the waveform (tracking error signal) reaches maximum amplitude (see Photo 9-2.). <p>Note: Use caution since inserting ⊖ screwdriver forcefully will cause the pickup unit to float upward.</p> <ul style="list-style-type: none">• Finally, confirm that there is no major fluctuation in the P-P voltage of the tracking error signal (do not insert the cutoff 4 kHz low-pass filter) when the pickup is shifted to the innermost track and when the pickup is shifted to the outermost track. If there is a difference of more than ± 10%, re-adjust by turning the grating adjustment screw to the maximum amplitude point of the tracking error signal.

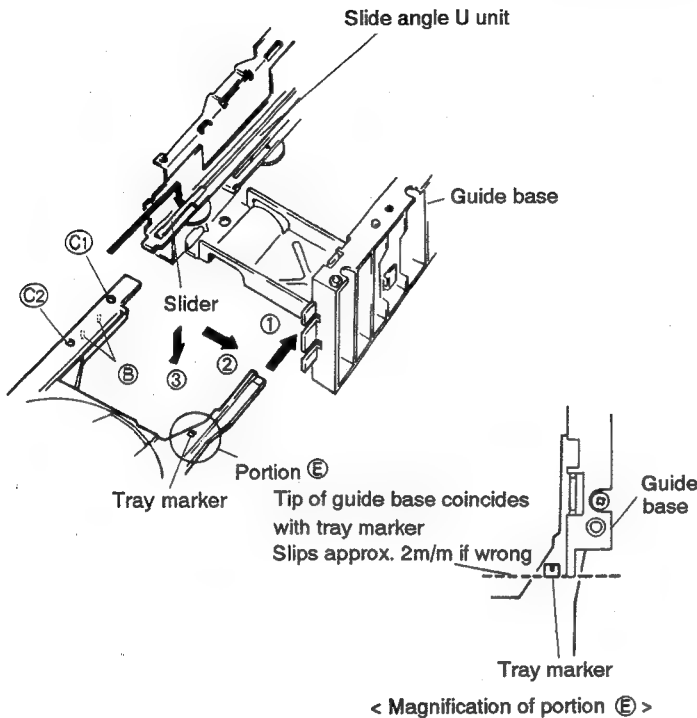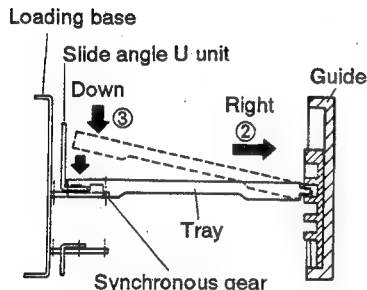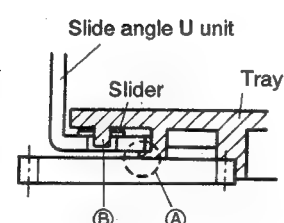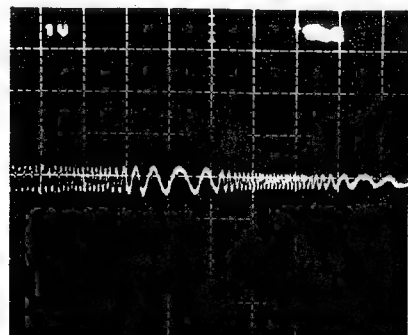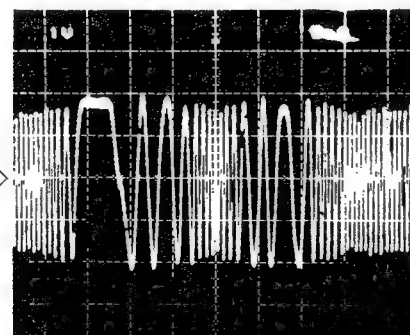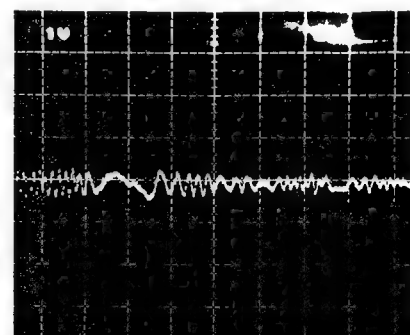Step No.	Oscilloscope Setting		Test Points	Adjusting Points	Check Items/ Adjustment Specifications	Adjustment Procedure
	V	H				
	<div><p>Slide angle U unit</p><p>Guide base</p><p>Slider</p><p>Tray marker</p><p>Portion E</p><p>Tip of guide base coincides with tray marker Slips approx. 2m/m if wrong</p><p>Tray marker</p><p>Guide base</p><p>< Magnification of portion E ></p><p>Fig. 9-8.</p><div><p>Loading base</p><p>Slide angle U unit</p><p>Down</p><p>Right</p><p>Tray</p><p>Synchronous gear</p><p>Fig. 9-9.</p><div><p>Slide angle U unit</p><p>Slider</p><p>Tray</p><p>B</p><p>A</p><p>Fig. 9-10.</p></div></div></div>					<p>After completing adjustments, attach tray 1 in the following process. Remove front panel previously as it disturbs attachment of tray 1.</p> <ol style="list-style-type: none">1. Set slide angle U unit to the foremost position (where opening of tray 1 is completed).2. Set slider to the foremost position as shown in Fig. 9-8.3. As shown by dotted line in Fig. 9-9 , insert tray 1 aslant to the position that mounting holes of slider and tray 1 coincide (make sure that slider does not move backward).4. Down tray 1 as pulling it to the right (toward guide). Do it as holding slider from below with finger.5. Adjust position of tray 1 so that hook (A) and projection (B) are properly fixed as shown in Fig. 9-10. Also do it so that to engage synchronous gear with gear of tray 1.6. Make sure that mounting holes of slider are being positioned in the center of tray 1's screw holes, and tighten screws in order of (C1, C2).7. After completing attachment of tray 1, with tray 1's complete-open state, make sure that mutual position shown in the portion E 's enlarged illustration is being satisfied. If it does not, the adjustment must be made again from the beginning.
	<div><p>Photo 9-1. Null point waveform</p><div><p>Photo 9-2. Maximum amplitude</p><div><p>Photo 9-3. Waveform off Null Point</p></div></div></div>					

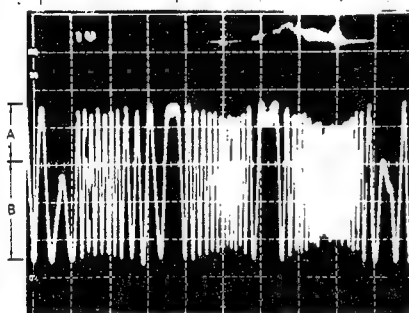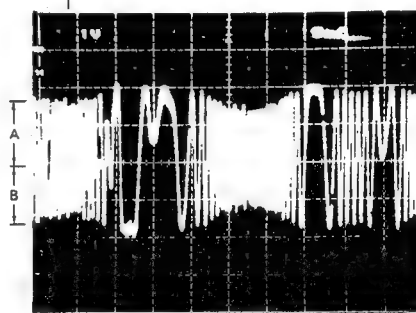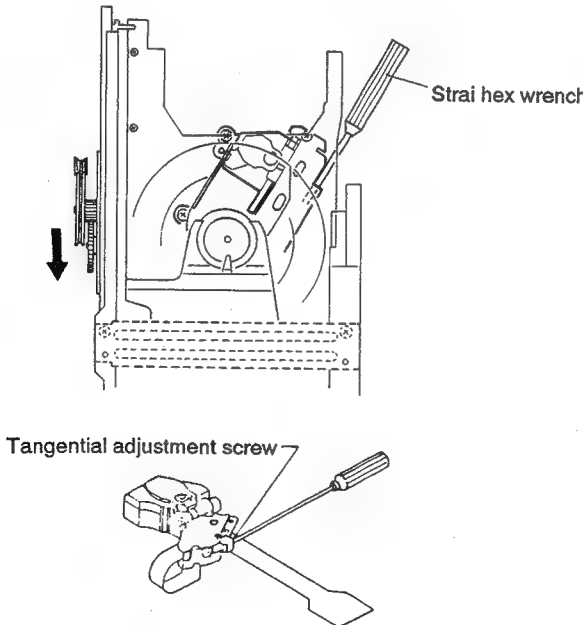Step No.	Oscilloscope Setting		Test Points	Adjusting Points	Check Items/ Adjustment Specifications	Adjustment Procedure
	V	H				
6	TRACKING BALANCE ADJUSTMENT					
	0.5V/div	5 msec/div	TP1 Pin 2 (TRK. ERR)	VR5 (TRK. BAL)		<ul style="list-style-type: none">• Set the test disc.• Set to test mode (see page 30).• Press the MANUAL SEARCH FWD (▶▶) key to position the carriage near the center of the disc.• Press the TRACK FWD (▶▶) key and then the PLAY (▶) key to cause the disc to rotate.• Observe the waveform output by TP1 Pin 2 TRK.ERR (tracking error) on the oscilloscope and adjust VR5 TRK. BAL (tracking balance) so that the DC component disappears from the tracking error signal.
						
	Photo 9-4. With DC component					Photo 9-5. Without DC component
7	TANGENTIAL ADJUSTMENT					
						<ul style="list-style-type: none">• Set to test mode (see page 30).• Open tray 1 and set the disc.• Close tray 1.• Press the MANUAL SEARCH FWD (▶▶) key to position the pickup at the outermost track.• Rotate gear-pulley by hand in the direction indicated by the arrow and move tray 2 up so that the tangential adjustment screw section becomes visible.• Insert a hexagonal wrench into the tangential adjustment screw section from the right-aslant in the rear of mechanism.• Press the MANUAL SEARCH REV (◀◀) key to position the pickup somewhere at the middle of the tracks.• Press the TRACK FWD (▶▶) key, PLAY (▶) key, and PAUSE (■) key in that order to close all the servos (the pause indicator will illuminate).
	Fig. 9-11.					

Step No.	Oscilloscope Setting		Test Points	Adjusting Points	Check Items/ Adjustment Specifications	Adjustment Procedure
	V	H				
		200 ns/div	TP1 Pin 1 (RF output)	Tangential adjustment screw	Sharpest possible eye pattern	<ul style="list-style-type: none"> Observe the waveform output by TP1 Pin 1 (RF output) on the oscilloscope and adjust the tangential adjustment screw to achieve the sharpest possible eye pattern. The correct adjustment point is halfway between the two points where the eye pattern becomes blurred when rotating the tangential adjustment screw clockwise and then counterclockwise. When the whole waveform becomes clear, concentrate on sharpening the fine lines forming the diamond shape at the center of the eye pattern (see Photo 9-6.). Adjust until the diamond shape consists of single thin lines.


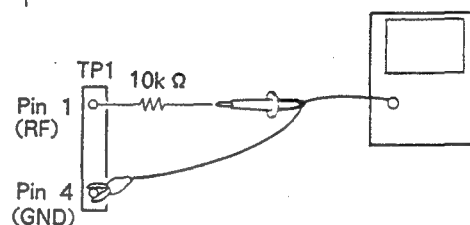


Fig. 9-12.

Note: Use a hexagonal wrench to keep the pickup in raised position while performing this adjustment.

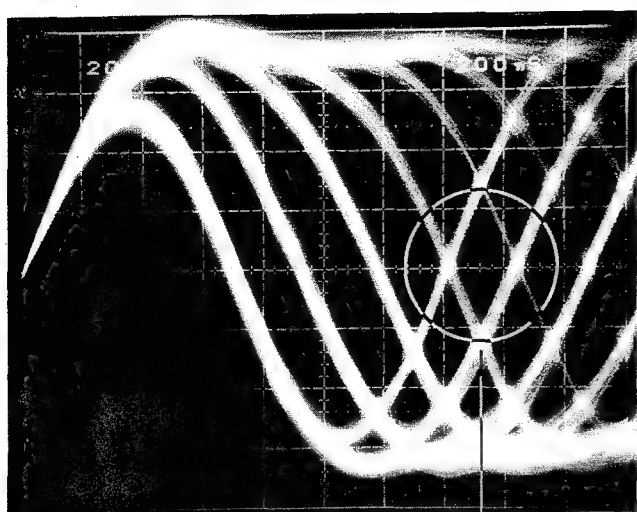

Part to be observed

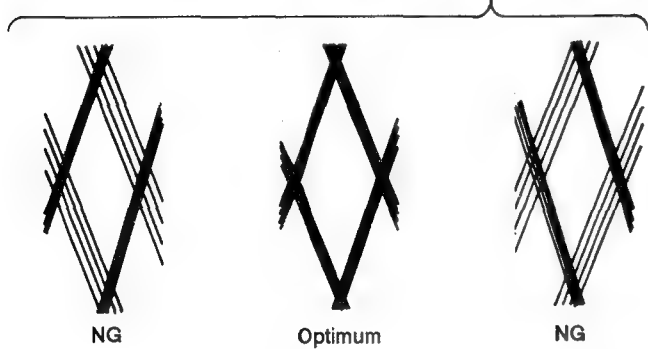


Photo 9-6.

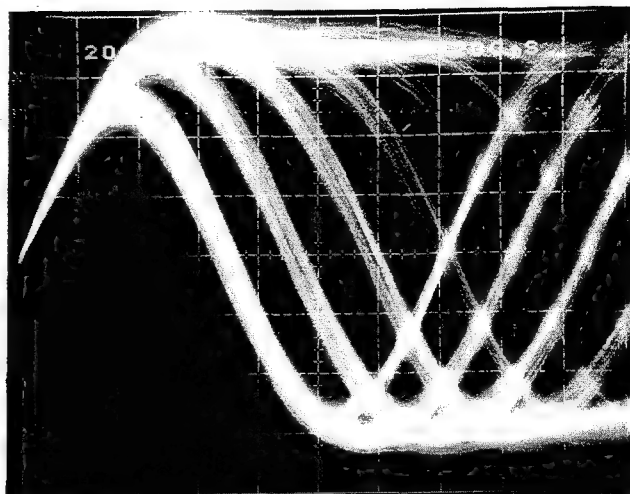


Photo 9-7.

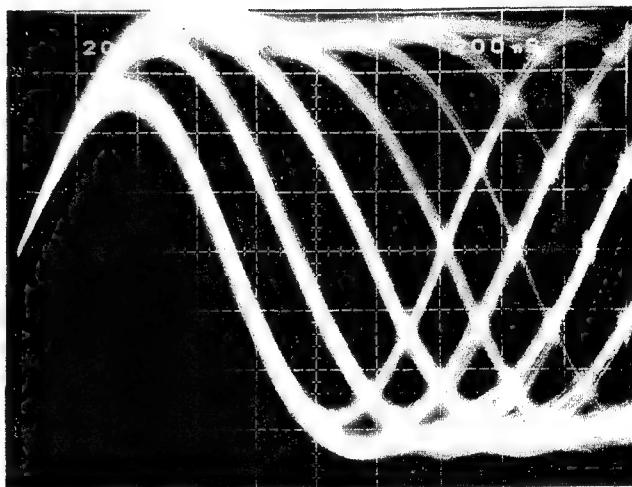


Photo 9-8.

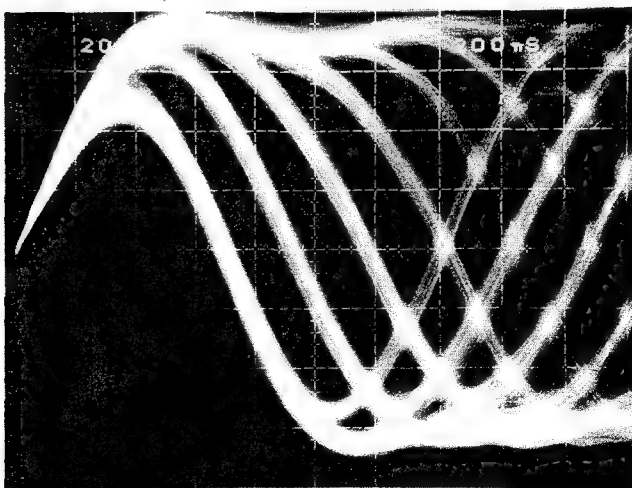
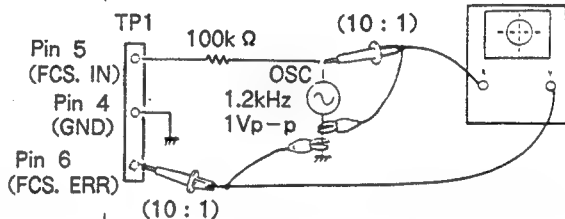
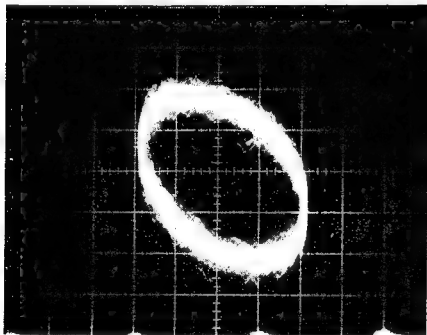
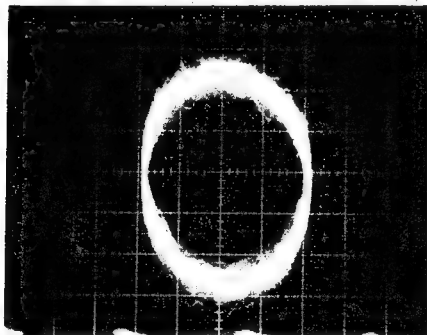
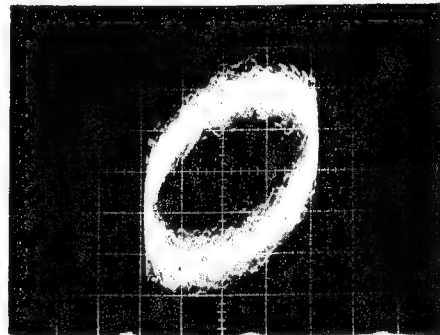
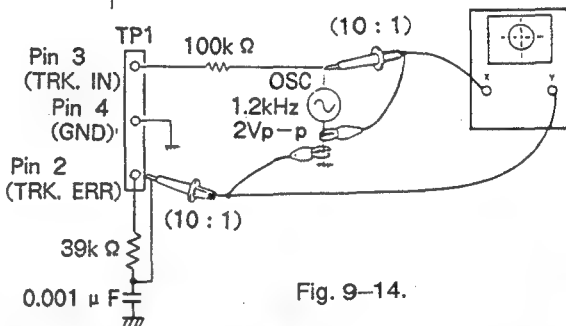
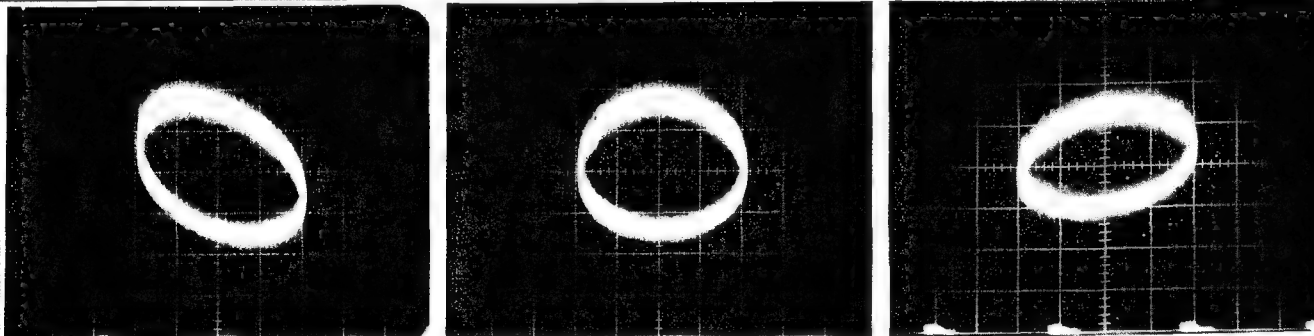


Photo 9-9.

Step No.	Oscilloscope Setting		Test Points	Adjusting Points	Check Items/ Adjustment Specifications	Adjustment Procedure
	V	H				
8	FOCUS GAIN ADJUSTMENT					
	CH1 (X) , CH2 (Y) 20 mV/div, 5 mV/div (probe: 10:1)	X-axis TP1 Pin 5 (FCS. IN) Y-axis TP1 Pin 6 (FCS. ERR)	VR3 (FCS. GAN)	Phase difference of 90°	<ul style="list-style-type: none">• With the oscillator power turned OFF, connect the oscilloscope and oscillator as shown in Fig. 9-13.• Set to normal PLAY mode.• Turn ON the power of the oscillator and set it to output a 1.2 kHz 1 Vp-p signal. <p>Note: Some oscillators discharge a DC voltage when power is turned on. In that case it is recommended to connect the oscillator after it has been turned on.</p> <ul style="list-style-type: none">• Adjust VR3 FCS.GAN (focus gain) so that the Lissajous figures form a horizontal circle on the oscilloscope (phase difference of 90°). <div></div> <p>Fig. 9-13.</p>	
<div><div><p>High gain Photo 9-10.</p></div><div><p>Optimum gain Photo 9-11.</p></div><div><p>Low gain Photo 9-12.</p></div></div>						

Step No.	Oscilloscope Setting		Test Points	Adjusting Points	Check Items/ Adjustment Specifications	Adjustment Procedure
	V	H				
9	TRACKING GAIN ADJUSTMENT					
	CH1 (X) , CH2 (Y) 50 mV/div, 5 mV/div (probe: 10:1)	X-axis TP1 Pin 3 (TRK. IN) Y-axis TP1 Pin 2 (TRK. OUT)	VR4 (TRK. GAN)	Phase difference of 90°	<ul style="list-style-type: none">With the oscillator power turned OFF, connect the oscilloscope and oscillator as shown in Fig. 9-14.Set to normal PLAY mode.Turn ON the power of the oscillator and set it to output a 1.2 kHz 2 Vp-p signal. <p>Note: Some oscillators discharge a DC voltage when power is turned on. In that case it is recommended to connect the oscillator after it has been turned on.</p> <ul style="list-style-type: none">Adjust VR4 TRK. GAN (tracking gain) so that the Lissajous figures form a horizontal circle on the oscilloscope (phase difference of 90°).	 <p>Fig. 9-14.</p>
						
<div>High gain Photo 9-13.</div> <div>Optimum gain Photo 9-14.</div> <div>Low gain Photo 9-15.</div>						

Step No.	Oscilloscope Setting		Test Points	Adjusting Points	Check Items/ Adjustment Specifications	Adjustment Procedure
	V	H				
10	VCO FREE-RUN FREQUENCY ADJUSTMENT					
			TP2 Pin 2 (PLCK)	VR8 (VCO. ADJ)	4.275 ± 0.025 MHz	<ul style="list-style-type: none">• Set to test mode (see page 30).• Short-circuit the ASY and GND jumpers with ⊖ screwdriver or similar tool (see Fig. 9-1.).• Connect a frequency counter capable of measuring frequencies of 10 MHz and above to the PLCK jumper.• Adjust VR8 VCO. ADJ (VCO free-run adjustment) so that the frequency counter reading becomes 4.275 ± 0.025 MHz.
11	CONFIRMATION OF S CHARACTER (FOCUS ERROR)					
			TP1 Pin 6 (FCS. ERR)			<ul style="list-style-type: none">• Set to test mode (see page 30).• Short-circuit TP1 Pin 5 FCS. IN (focus in) and Pin 4 GND.• Observe the waveform output by TP1 Pin 6 FCS. ERR (focus error) when pressing the TRACK FWD (▶▶) key.

9. RÉGLAGES

Les éléments à régler pour cette unité sont indiqués ci-dessous. Les réglages doivent être effectués dans l'ordre où ils sont indiqués. L'opération d'ouverture/fermeture (OPEN/CLOSE) pour le plateau de disc 2 ne pouvant pas être effectuée pendant le mode d'essai, utiliser le plateau 1 pour les réglages.

• Éléments à régler et à contrôler

1. Réglage du décalage de suivi de piste, du décalage de focalisation et du décalage RF
2. Réglage du niveau RF
3. Contrôle de la puissance de la diode laser (LD)
4. Contrôle du verrouillage de focalisation et du verrouillage de moyeu
5. Réglage du réseau
6. Réglage de l'équilibrage du suivi de piste
7. Réglage tangentiel
8. Réglage du gain de focalisation
9. Réglage du gain de suivi de piste
10. Réglage de la fréquence continue du VCO
11. Vérification de la caractéristique S (erreur de focalisation)

• Matériel de mesure

1. Oscilloscope double trace
2. Appareil de mesure pour puissance laser
3. Disc d'essai (YEDS-7)
4. Filtre de réglage pour gain de boucle
5. Générateur de signal
6. Fréquencemètre
7. Outillage général divers

Points de réglage

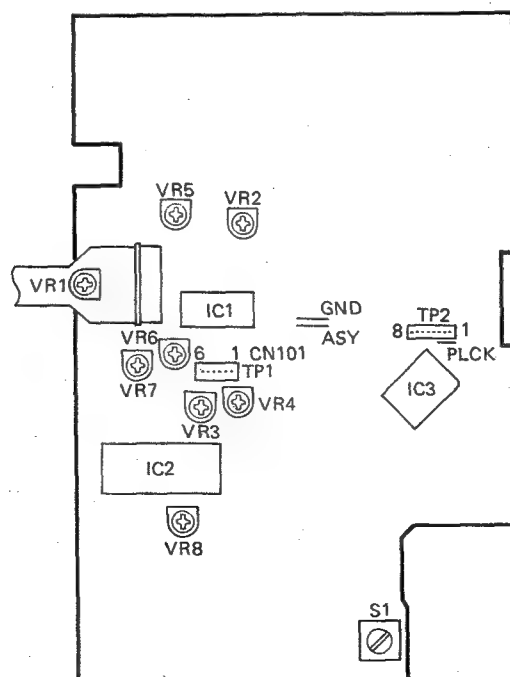


Fig. 9-1.

• Mode d'essai

Méthodes de réglage et d'annulation du mode d'essai

- (1) Pour régler le mode d'essai, activer (ON) le contacteur d'alimentation (S301) tout en maintenant enfoncé le contacteur de mode d'essai (S1).
- (2) Le mode d'essai est annulé en désactivant (OFF) le contacteur d'alimentation.

Les fonctions des touches dans le mode d'essai sont indiquées dans le tableau 9-1.


• Résistances variables (VR) de réglage et leurs noms

- VR1: Puissance laser
- VR2: Décalage RF (RF. OFS)
- VR3: Gain de focalisation (FCS. GAN)
- VR4: Gain de suivi de piste (TRK. GAN)
- VR5: Équilibrage de suivi de piste (TRK. BAL)
- VR6: Décalage de focalisation (FCS. OFS)
- VR7: Décalage de suivi de piste (TRK. OFS)
- VR8: Réglage du VCO (VCO. ADJ)

Dans le mode d'essai, les circuits d'asservissement sont fermés et ouverts individuellement. Par conséquent, les circuits d'asservissement doivent être fermés l'un après l'autre (séquentiellement) afin de régler l'unité dans le mode de lecture (PLAY) normal. Noter également que pendant le mode d'essai, l'unité ne passe pas dans le mode de lecture (PLAY) lorsque seule la touche de PAUSE (■) est enfoncée.

Exemple: Commutation du mode d'arrêt (STOP) au mode de lecture (PLAY).

* Dans le mode d'essai, les circuits d'asservissement doivent être fermés séquentiellement.


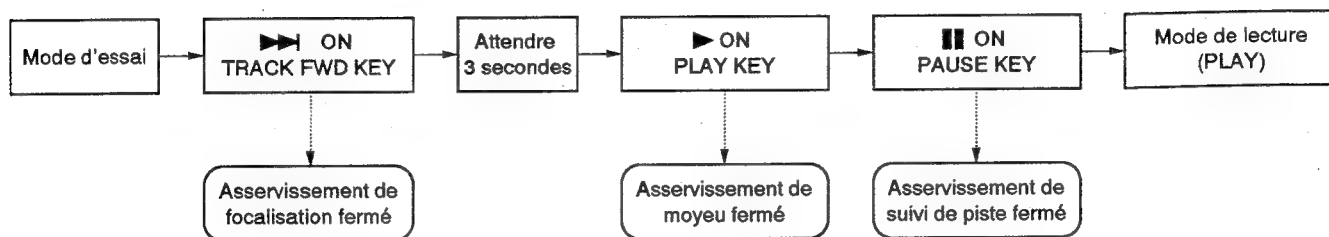




• Fonctions des touches dans le mode d'essai

Symbole	Désignation de touche	Fonction pendant le mode d'essai	Description
▶▶	TRACK FWD	Asservissement de focalisation fermé	Fait s'allumer la diode laser et soulève/abaisse l'actionneur de focalisation pour fermer l'asservissement de focalisation. Après la fermeture du plateau de disc 1, le plateau est amené sur la position de lecture (PLAY).
▶	PLAY	Asservissement de moyeu fermé	Ferme l'asservissement dans le mode CLV-A après le démarrage du moteur de moyeu.
■	PAUSE	Asservissement de suivi de piste fermé/ouvert	Réalise l'opération de bascule: ferme l'asservissement de suivi de piste et règle sur le mode de lecture (PLAY) lorsque la touche est enfoncée (si les asservissements de focalisation et de moyeu sont fermés) et le voyant de PAUSE s'allume; ouvre l'asservissement de suivi de piste lorsqu'elle est de nouveau enfoncée.
◀◀	MANUAL SEARCH REV	Retour du chariot (mouvement vers l'intérieur)	Déplace le chariot rapidement (3 cm/s.) vers le centre du disc. Comme il n'y a pas de mécanisme de sécurité pour arrêter le chariot, relâcher la touche lorsque le chariot atteint la piste la plus intérieure.
▶▶	MANUAL SEARCH FWD	Avance du chariot (mouvement vers l'extérieur)	Déplace le chariot rapidement (3 cm/s.) vers le bord extérieur du disc. Comme il n'y a pas de mécanisme de sécurité pour arrêter le chariot, relâcher la touche lorsque le chariot atteint la piste la plus extérieure.
■	STOP	Arrêt	Arrête tous les asservissements et ramène le système à son état initial.
▲	OPEN/CLOSE Disc I	Ouverture/fermeture (plateau de disc)	Ouvre et ferme le plateau de disc. Le capteur ne revient cependant pas à sa position de repos lors de l'ouverture et il reste stationnaire lors de la fermeture du plateau.


Tableau 9-1.

Etape No.	Réglage de l'oscilloscope		Points d'essai	Points de réglage	Points de contrôle/ spécifications de réglage	Méthode de réglage
	V	H				
1.	REGLAGE DU DECALAGE DE SUIVI DE PISTE, DU DECALAGE DE FOCALISATION ET DU DECALAGE RF					
			TP1 Broche 2 (TRK. ERR)	VR5 (TRK. BAL) VR7 (TRK. OFS)	Décalage de suivi de piste 45° 0V ± 50 mV	<ul style="list-style-type: none">• Régler sur le mode d'essai (voir page 43).• Tourner VR5 TRK. BAL (équilibrage de suivi de piste), dans le sens inverse des aiguilles d'une montre, d'environ 45° depuis la position centrale.• Régler VR7 TRK. OFS (décalage de suivi de piste) de sorte que la tension à la broche 2 de TP1 TRK. ERR (erreur de suivi de piste) devienne 0V ± 50 mV.• Régler VR6 FCS. OFS (décalage de focalisation) de sorte que la tension à la broche 6 de TP1 FCS. ERR (erreur de focalisation) devienne 0V ± 50 mV.• Régler VR2 RF. OFS (décalage RF) de sorte que la tension de sortie RF à la broche 1 de TP1 devienne 100 mV ± 50 mV. <p>Note: Après avoir effectué le réglage du décalage de suivi de piste, toujours effectuer "6. REGLAGE DE L'EQUILIBRAGE DE SUIVI DE PISTE".</p>
			TP1 Broche 6 (FCS. ERR)	VR6 (FCS. OFS)	Décalage de focalisation 0V ± 50 mV	
			TP1 Broche 1 (RF output)	VR2 (RF. OFS)	Décalage RF 100 mV ± 50 mV	
2.	REGLAGE DU NIVEAU RF					
			TP1 Broche 1 (RF output)	VR1 (puissance laser)	1,5V +0,2V -0V	<ul style="list-style-type: none">• Régler sur le mode d'essai (voir page 43).• Reproduire le disc d'essai, raccorder l'oscilloscope à la broche 1 de TP1 (sortie RF) et mesurer la tension c-c de la forme d'onde RF.• Régler de sorte que la tension devienne 1,5V +0,2V -0V.
3.	CONTROLE DE LA PUISSANCE DE LA DIODE LASER (LD)					
					Moins de 0,13 mW	<ul style="list-style-type: none">• Régler sur le mode d'essai (voir page 43).• Appuyer sur la touche d'avance de piste (TRACK FWD) (▶▶) pour faire s'allumer la diode laser (LD).• Placer le détecteur de l'appareil de mesure pour puissance laser directement au-dessus de l'objectif et vérifier que la puissance de sortie de la diode laser ne dépasse pas 0,13 mW.

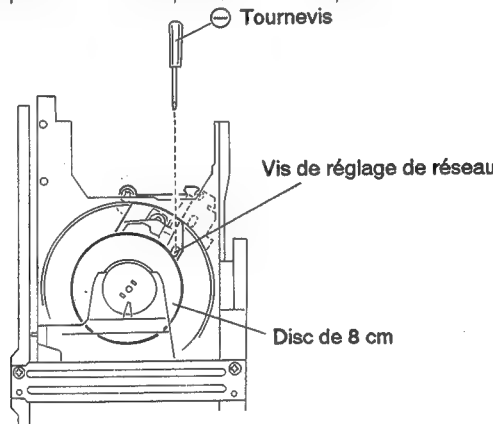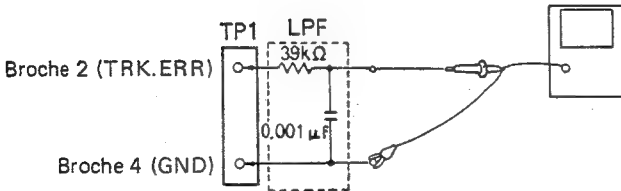Etape No.	Réglage de l'oscilloscope		Points d'essai	Points de réglage	Points de contrôle/ spécifications de réglage	Méthode de réglage
	V	H				
4.	CONTROLE DU VERROUILLAGE DE FOCALISATION ET DU VERROUILLAGE DE MOYEU					
	V 0,5V/div.	H 100 ms. /div.	TP1 Broche 1 (sortie RF)	Présence d'une sortie RF Rotation normale (sens des aiguilles d'une montre)	<ul style="list-style-type: none">• Mettre en place le disc d'essai.• Régler sur le mode d'essai (voir page 43).• Appuyer sur la touche de recherche manuelle en avant (MANUAL SEARCH FWD) (▶▶) pour amener le capteur près du centre du disc.• Observer la sortie de la broche 1 de TP1 (sortie RF) sur l'oscilloscope. Vérifier que le signal RF est sorti après avoir appuyé sur la touche d'avance de piste (TRACK FWD) (▶▶).• Appuyer sur la touche de lecture (PLAY ▶) et vérifier que le disc tourne à une vitesse constante (approx. 30 tr/mn. près du centre du disc) dans le sens normal (sens des aiguilles d'une montre); vérifier que le disc ne tourne pas trop rapidement ou dans le sens inverse des aiguilles d'une montre.	
5.	REGLAGE DU RESEAU (1) (en utilisant un disc de 8 cm)					
	 <p>Fig. 9-2.</p>				<p>Note: Ce réglage ne peut être effectué qu'en utilisant un disc de 8 cm ayant des microcuvettes sur un diamètre de 75 mm.</p> <ul style="list-style-type: none">• Régler sur le mode d'essai (voir page 43).• Mettre en place le disc de 8 cm. Amener le capteur sur la piste la plus extérieure de sorte qu'il soit positionné sur les microcuvettes et que le trou de réglage du réseau du capteur soit visible par le trou dans le mécanisme d'asservissement (voir Fig. 9-2).• Appuyer en séquence sur les touches d'avance de piste (TRACK FWD) (▶▶) et de lecture (PLAY) (▶) pour fermer l'asservissement de focalisation et l'asservissement de moyeu (ne pas fermer l'asservissement de suivi de piste).• Observer la forme d'onde sortie de la broche 2 de TP1 TRK. ERR (erreur de suivi de piste) sur l'oscilloscope, en insérant un filtre passe-bas de 4 kHz (voir la Fig. 9-3).	
	 <p>Fig. 9-3.</p>					

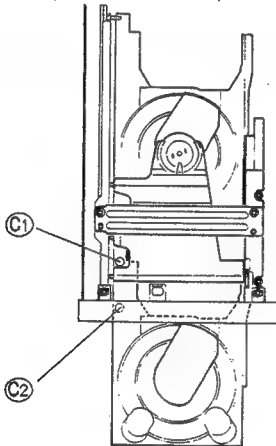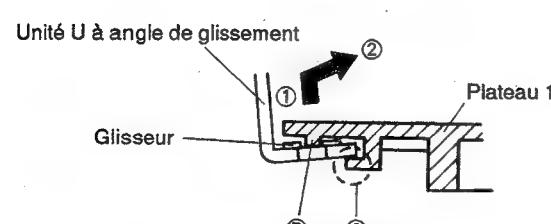Etape No.	Réglage de l'oscilloscope		Points d'essai	Points de réglage	Points de contrôle/spécifications de réglage	Méthode de réglage
	V	H				
	0,5V/div.	5 ms./div.	TP1 Broche 2 (TRK. ERR)	Réseau Réseau	Point zéro Amplitude maximum	<ul style="list-style-type: none"> Insérer un tournevis (–) dans le trou de réglage de réseau et tourner pour trouver le point zéro (voir la Photo 9–1). Tourner ensuite lentement le tournevis (–) dans le sens inverse des aiguilles d'une montre depuis le point zéro et régler jusqu'à ce que la forme d'onde (signal d'erreur de suivi de piste) atteigne son amplitude maximum (voir la Photo 9–2). <p>Note: Prendre des précautions car l'insertion de force du tournevis (–) fait flotter l'unité du capteur vers le haut.</p> <ul style="list-style-type: none"> Vérifier, finalement, qu'il n'y a pas de fluctuation majeure dans la tension c–c du signal d'erreur de suivi de piste (ne pas insérer de filtre de coupure passe-bas 4 kHz) lorsque le capteur est déplacé sur la piste la plus intérieure et lorsque le capteur est déplacé sur la piste la plus extérieure. S'il y a une différence de plus de $\pm 10\%$, rerégler en tournant la vis de réglage du réseau jusqu'au point d'amplitude maximum du signal d'erreur de suivi de piste.
5 REGLAGE DU RESEAU (2) (sans disc de 8 cm)						
	 <p>Fig. 9–4.</p>  <p>Fig. 9–5.</p>					<p>Effectuer ce réglage lorsqu'un disc de 8 cm n'est pas disponible et que le réglage du réseau (1) ne peut pas être effectué. Déposer le plateau 1 avant d'effectuer ce réglage.</p> <p>Dépose du plateau 1</p> <ol style="list-style-type: none"> Régler le plateau I sur la position ouverture (OPEN) Déposer les vis (C1) et (C2) qui fixent le plateau dans la Fig. 9–4. Déplacer le plateau dans la direction de la flèche de la Fig. 9–5. et en détachant la protubérance (B) du plateau 1, libérer l'unité en U à angle de glissement du crochet (A) du plateau 1. Retirer le plateau en soulevant légèrement le côté de l'unité en U à angle de glissement.

Etape No.	Réglage de l'oscilloscope		Points d'essai	Points de réglage	Points de contrôle/spécifications de réglage	Méthode de réglage
	V	H				
						<p>Note: Ce réglage ne peut être effectué qu'en utilisant un disc ayant des microcuvettes sur un diamètre de 115 mm maximum. Le disc d'essai (YEDS-7) ne peut pas être utilisé.</p> <ul style="list-style-type: none">• Régler sur le mode d'essai (voir page 43).• Mettre en place un disc. Amener le capteur sur la piste la plus extérieure de sorte qu'il soit positionné sur les microcuvettes et que le trou de réglage du réseau du capteur soit visible par le trou dans le mécanisme d'asservissement (voir Fig. 9-6).• Appuyer en séquence sur les touches d'avance de piste (TRACK FWD) (▶▶) et de lecture (PLAY) (▶) pour fermer l'asservissement de focalisation et l'asservissement de moyeu (ne pas fermer l'asservissement de suivi de piste).• Observer la forme d'onde sortie de la broche 2 de TP1 TRK. ERR (erreur de suivi de piste) sur l'oscilloscope, en insérant un filtre passe-bas de 4 kHz (voir la Fig. 9-7).

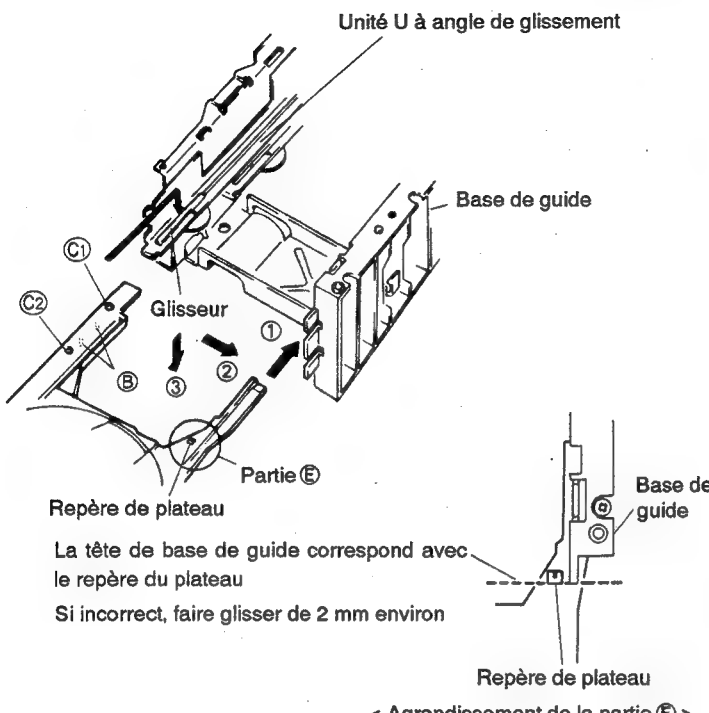Etape No.	Réglage de l'oscilloscope		Points d'essai	Points de réglage	Points de contrôle/ spécifications de réglage	Méthode de réglage
	V	H				
	 <p>Unité U à angle de glissement</p> <p>Base de guide</p> <p>Glisseur</p> <p>Partie E</p> <p>Repère de plateau</p> <p>La tête de base de guide correspond avec le repère du plateau</p> <p>Si incorrect, faire glisser de 2 mm environ</p> <p>Repère de plateau</p> <p>< Agrandissement de la partie E ></p> <p>Fig. 9-8.</p> <p>Base de chargement</p> <p>Unité U à angle de glissement</p> <p>Abaissier</p> <p>Droite</p> <p>Guide</p> <p>Plateau</p> <p>Engrenage synchrone</p> <p>Fig. 9-9.</p> <p>Unité U à angle de glissement</p> <p>Glisseur</p> <p>Plateau</p> <p>B</p> <p>A</p> <p>Fig. 9-10.</p>					<p>Après avoir terminé les réglages, remettre le plateau de 1 de la manière suivante. Déposer le panneau frontal précédemment monté, qui gêne la mise en place du plateau de 1.</p> <ol style="list-style-type: none"> 1. Régler l'unité ensemble en U à angle de glissement sur la position la plus avancée (où l'ouverture du plateau est totale). 2. Régler le glisseur sur la position la plus avancée comme indiqué sur la Fig. 9-8. 3. Comme indiqué par la ligne en pointillés de la Fig. 9-9, insérer l'oblique de plateau 1 à la position où les trous de montage du glisseur et du plateau 1 correspondent. (S'assurer que le glisseur ne revient pas en arrière). 4. Abaisser le plateau 1 tout en le tirant sur la droite (vers le guide). Procéder ainsi tout en soutenant le glisseur d'un doigt. 5. Régler la position du plateau 1 afin que le crochet A et la protubérance B soient fixés correctement, comme indiqué sur la Fig. 9-10. De plus, s'assurer que l'engrenage synchrone s'engage bien avec l'engrenage du plateau 1. 6. S'assurer que les trous de montage du glisseur sont bien positionnés sur les trous de vis du plateau 1 et resserrer la vis C1, puis la vis C2. 7. Après avoir terminé le montage du plateau 1, ouvrir complètement le plateau 1 et vérifier si la position mutuelle indiquée sur l'illustration agrandie de la partie E est bien correcte. <p>Sinon, les réglages doivent être recommencés depuis le début.</p>

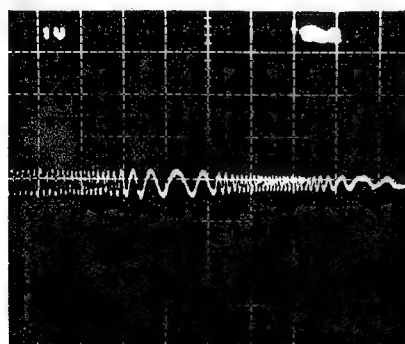


Photo 9-1. Forme d'onde de point zéro

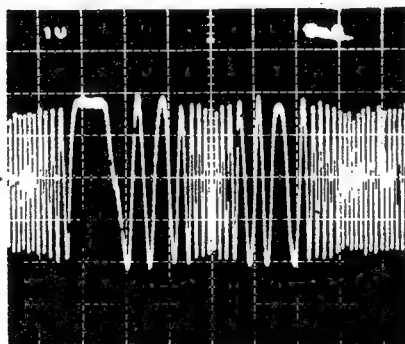


Photo 9-2. Amplitude maximum

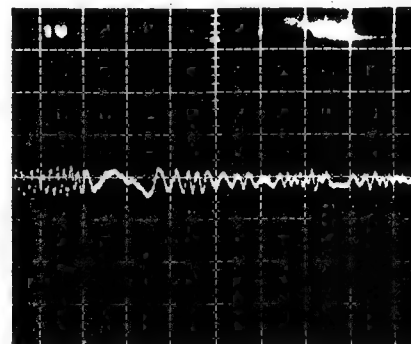
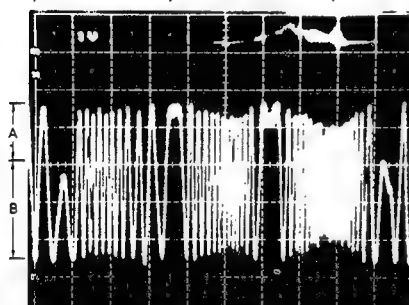
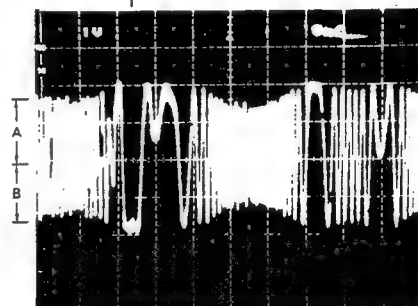
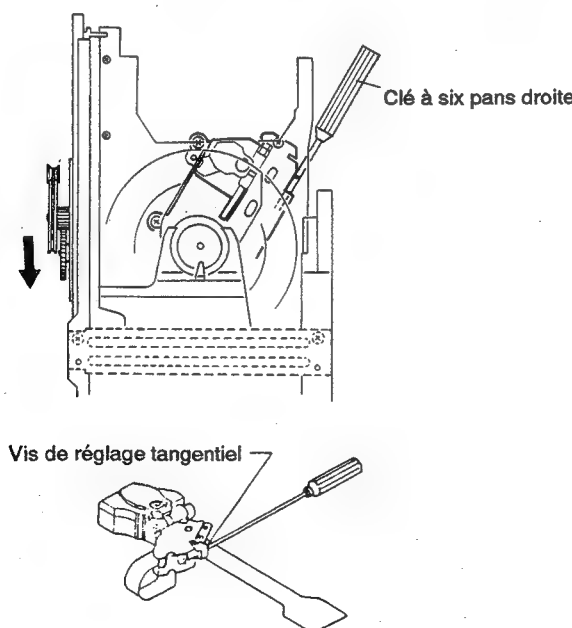


Photo 9-3. Forme d'onde sans point zéro


Etape No.	Réglage de l'oscilloscope		Points d'essai	Points de réglage	Points de contrôle/spécifications de réglage	Méthode de réglage
	V	H				
6.	REGLAGE DE L'EQUILIBRAGE DU SUIVI DE PISTE					
	0,5V/div.	5 ms./div.	TP1 Broche 2 (TRK.ERR)	VR5 (TRK.BAL)		<ul style="list-style-type: none">• Mettre en place le disc d'essai.• Régler sur le mode d'essai (voir page 43).• Appuyer sur la touche de recherche manuelle en avant (MANUAL SEARCH FWD) (▶▶) pour positionner le chariot près du centre du disc.• Appuyer sur la touche d'avance de piste (TRACK FWD) (▶▶) puis sur la touche de lecture (PLAY) (▶) pour faire tourner le disc.• Observer la forme d'onde sortie par la broche 2 de TP1 TRK. ERR (erreur de suivi de piste) sur l'oscilloscope et régler VR5 TRK. BAL (équilibrage du suivi de piste) de sorte que la composante CC disparaisse du signal d'erreur de suivi de piste.
						Photo 9-4. Avec composante CC
						Photo 9-5. Sans composante CC
7.	REGLAGE TANGENTIEL					
						<ul style="list-style-type: none">• Régler sur le mode d'essai (voir page 43).• Ouvrir le plateau 1 et mettre en place le disc.• Fermer le plateau 1.• Appuyer sur la touche de recherche manuelle en avant (MANUAL SEARCH FWD) (▶▶) pour positionner le capteur sur la piste la plus extérieure.• Tourner à la main la poulie d'engrenage dans le sens indiqué par la flèche et déplacer le plateau 2 vers le haut de sorte que la section de la vis de réglage tangentiel devienne visible.• Insérer une clé à six pans dans la section de la vis de réglage tangentiel depuis l'oblique droite à l'arrière du mécanisme.• Appuyer sur la touche de recherche manuelle en arrière (MANUAL SEARCH REV) (◀◀) pour positionner le capteur vers le milieu des pistes.• Appuyer sur la touche d'avance de piste (TRACK FWD) (▶▶), la touche de lecture (PLAY) (▶) et la touche de PAUSE (■), dans cet ordre, pour fermer tous les asservissements (le voyant de pause s'allume).
	Fig. 9-11.					

Etape No.	Réglage de l'oscilloscope		Points d'essai	Points de réglage	Points de contrôle/ spécifications de réglage	Méthode de réglage
	V	H				
		200 ns./div.	TP1 Broche 1 (sortie RF)	Vis de réglage tangentiel	Mire la plus nette possible	<ul style="list-style-type: none"> Observer la forme d'onde sortie par la broche 1 de TP1 (sortie RF) sur l'oscilloscope et ajuster la vis de réglage tangentiel afin d'obtenir la mire la plus nette possible. Le point d'ajustement correct se situe à mi-chemin entre les deux points où la mire devient floue lorsque la vis de réglage tangentiel est tournée dans le sens des aiguilles d'une montre puis dans le sens inverse. Lorsque toute la forme d'onde devient claire, se concentrer sur la netteté des lignes fines composant la forme de diamant au centre de la mire (voir Photo 9-8). Ajuster jusqu'à ce que la forme de diamant soit constituée de fines lignes séparées.

The diagram illustrates the test setup for the oscilloscope adjustment. It shows a probe connected to TP1 (Broche 1 RF) and Broche 4 (GND). A 10kΩ resistor is connected between Broche 1 (RF) and Broche 4 (GND). The probe tip is shown touching Broche 1, and the ground lead is connected to Broche 4. A small box with a square inside represents the oscilloscope.

Fig. 9-12.

Note: Utiliser une clé à six pans pour maintenir le capteur en position élevée pendant que ce réglage est effectué.

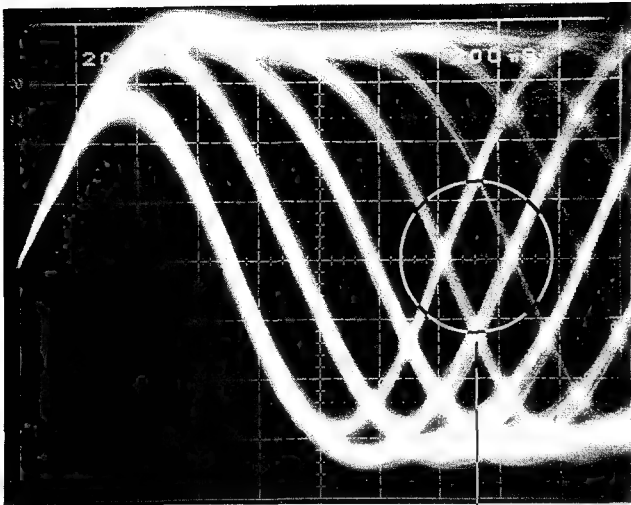

Partie à observer

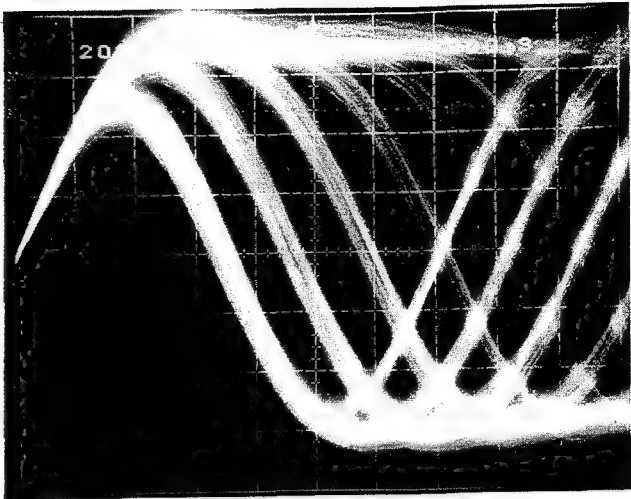


Photo 9-7.

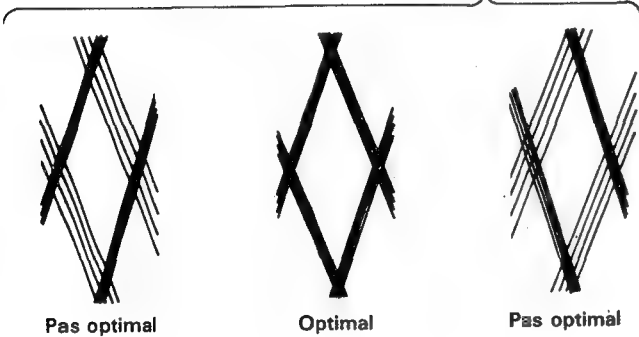


Photo 9-6.

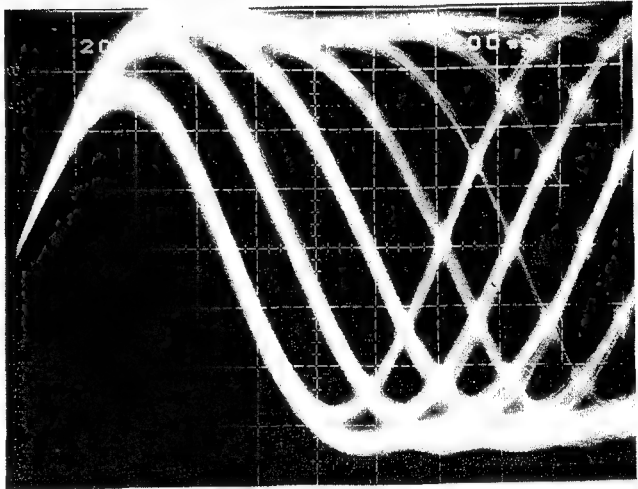


Photo 9-8.

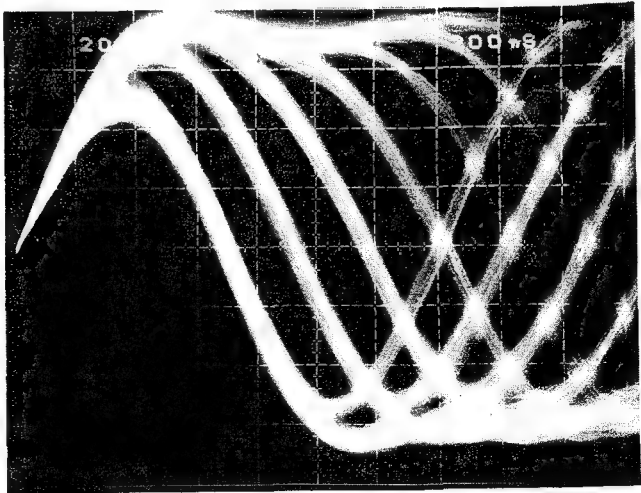
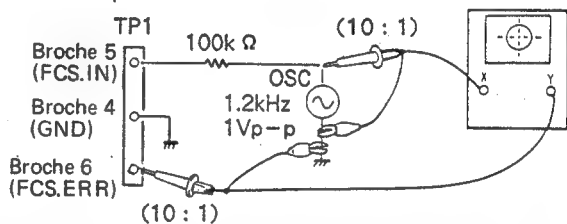
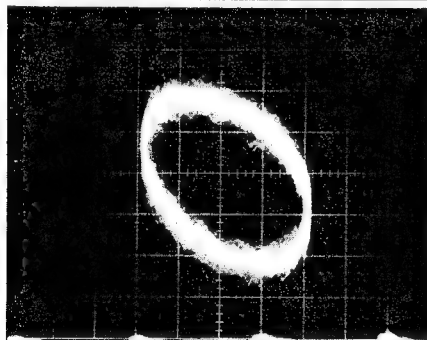
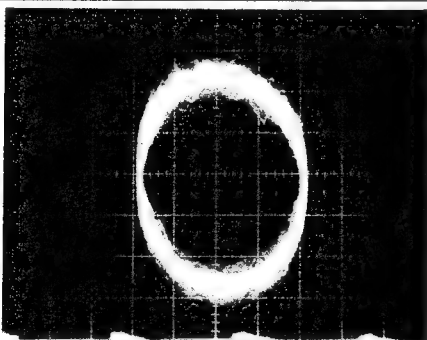
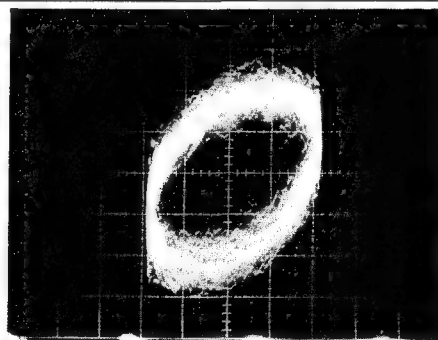
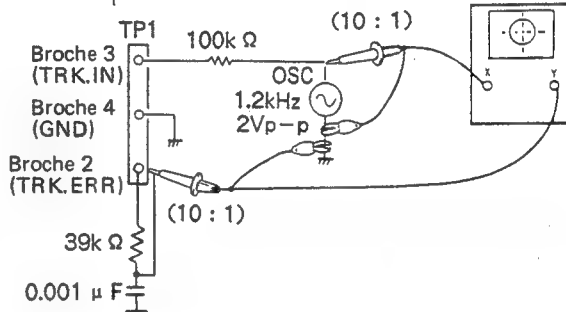
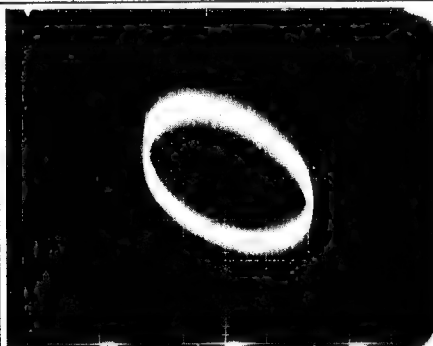
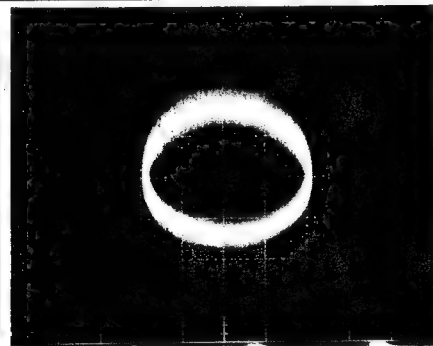
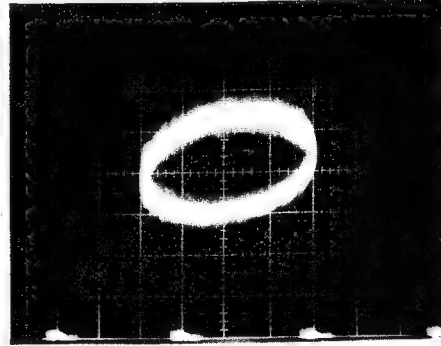


Photo 9-9.

Etape No.	Réglage de l'oscilloscope		Points d'essai	Points de réglage	Points de contrôle/ spécifications de réglage	Méthode de réglage
	V	H				
8.	REGLAGE DU GAIN DE FOCALISATION					
	CH1 (X), CH2 (Y) 20 mV/div. 5 mV/div. (sonde: 10:1)	Axe X TP1 Broche 5 (FCS. IN) Axe Y TP1 Broche 6 (FCS. ERR)	VR3 (FCS. GAN)	Différence de phase de 90°	<ul style="list-style-type: none">• L'alimentation de l'oscillateur étant coupée (OFF), raccorder l'oscilloscope et l'oscillateur comme indiqué sur la Fig. 9-13.• Régler sur le mode de lecture (PLAY) normal.• Mettre l'oscillateur sous tension (ON) et le régler pour sortir un signal de 1,2 kHz 1 Vc-c. <p>Note: Certains oscillateurs déchargent une tension CC lorsque l'alimentation est activée. Dans ce cas, il est recommandé de raccorder l'oscillateur après qu'il a été mis sous tension.</p> <ul style="list-style-type: none">• Régler VR3 FCS. GAN (gain de focalisation) de sorte que les figures Lissajous forment un cercle horizontal sur l'oscilloscope (différence de phase de 90°). <div></div> <p>Fig. 9-13.</p>	
<div><p>Gain élevé Photo 9-10.</p></div> <div><p>Gain optimum Photo 9-11.</p></div> <div><p>Gain bas Photo 9-12.</p></div>						

Etape No.	Réglage de l'oscilloscope		Points d'essai	Points de réglage	Points de contrôle/ spécifications de réglage	Méthode de réglage
	V	H				
9.	REGLAGE DU GAIN DE SUIVI DE PISTE					
	CH1 (X), CH2 (Y) 50 mV/div. 5 mV/div. (sonde: 10:1)	Axe X TP1 Broche 3 (TRK. IN) Axe Y TP1 Broche 2 (TRK. OUT)	VR4 (TRK. GAN)	Différence de phase de 90°	<ul style="list-style-type: none">• L'alimentation de l'oscillateur étant coupée (OFF), raccorder l'oscilloscope et l'oscillateur comme indiqué sur la Fig. 9-14.• Régler sur le mode de lecture (PLAY) normal.• Mettre l'oscillateur sous tension (ON) et le régler pour sortir un signal de 1,2 kHz 2 Vc-c. <p>Note: Certains oscillateurs déchargent une tension CC lorsque l'alimentation est activée. Dans ce cas, il est recommandé de raccorder l'oscillateur après qu'il a été mis sous tension.</p> <ul style="list-style-type: none">• Régler VR4 TRK.GAN (gain de suivi de piste) de sorte que les figures Lissajous forment un cercle horizontal sur l'oscilloscope (différence de phase de 90°).	
Fig. 9-14.						
<div><div><p>Gain élevé Photo 9-13.</p></div><div><p>Gain optimum Photo 9-14.</p></div><div><p>Gain bas Photo 9-15.</p></div></div>						

Etape No.	Réglage de l'oscilloscope		Points d'essai	Points de réglage	Points de contrôle/ spécifications de réglage	Méthode de réglage
	V	H				
10.	REGLAGE DE LA FREQUENCE CONTINUELLE DU VCO					
			TP2 Broche 2 (PLCK)	VR8 (VCO. ADJ)	4,275 ± 0,025 MHz	<ul style="list-style-type: none">• Régler sur le mode d'essai (voir page 43).• Court-circuiter les ponts ASY et GND avec un tournevis (-) ou un outil similaire (voir Fig. 9-1).• Raccorder un fréquencemètre capable de mesurer des fréquences de 10 MHz et plus au pont PLCK.• Régler VR8 VCO. ADJ (réglage continu du VCO) de sorte que l'indication du fréquencemètre devienne 4,275 ± 0,025 MHz.
11.	VERIFICATION DE LA CARACTERISTIQUE S (ERREUR DE FOCALISATION)					
			TP1 Broche 6 (FCS. ERR)			<ul style="list-style-type: none">• Régler sur le mode d'essai (voir page 43).• Court-circuiter les broches de TP1 FCS et la broche 4 GND.• Observer la forme d'onde sortie par la broche 6 de TP1 FCS. ERR (erreur de focalisation) lorsque la touche d'avance de piste (TRACK FWD) (▶▶) est enfoncée.

9. AJUSTE

La lista de abajo muestra los ítems de ajuste de esta unidad. Los ajustes deben efectuarse en el orden indicado. Dado que la operación de apertura/cerrado de la bandeja de disco 2 no puede efectuarse en el modo de prueba, emplee la bandeja 1 para el ajuste.

• Ítems de ajuste y confirmación

1. Ajuste de error de seguimiento, enfoque y RF
2. Ajuste de nivel de RF
3. Confirmación de potencia del diodo laser (LD)
4. Confirmación de enclavamiento de enfoque y eje
5. Ajuste de retículo
6. Ajuste de seguimiento
7. Ajuste tangencial
8. Ajuste de ganancia de enfoque
9. Ajuste de ganancia de seguimiento
10. Ajuste de frecuencia propia del oscilador controlado por tensión
11. Confirmación de carácter S (error de enfoque)

• Equipo de medición

1. Osciloscopio de doble trazo
2. Medidor de potencia de laser
3. Disco de prueba (YEDS-7)
4. Filtro de ajuste de ganancia de bucle
5. Generador de señales
6. Contador de frecuencia
7. Herramientas de uso general

Puntos de ajuste

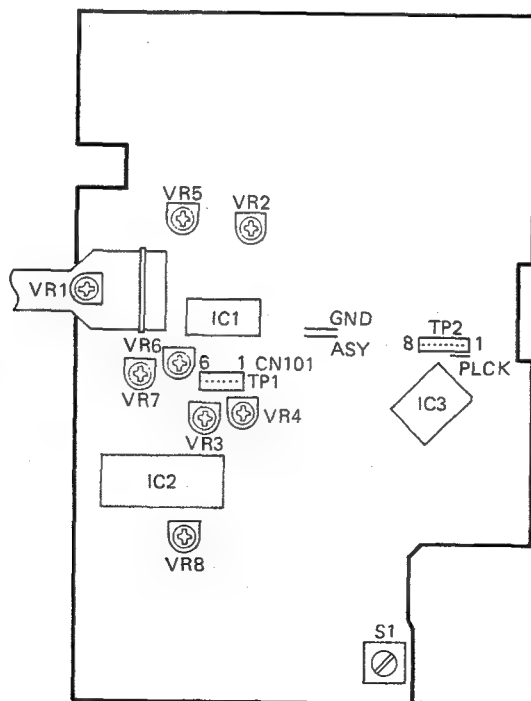


Fig. 9-1.

• Modo de prueba

Cómo establecer y cancelar el modo de prueba

- (1) Para establecer el modo de prueba, coloque el interruptor de encendido (S301) en ON mientras mantiene el interruptor de modo de prueba (S1) presionado.
- (2) Para cancelar el modo de prueba, coloque el interruptor de encendido en OFF.

Las funciones de las teclas en el modo de prueba están indicadas en la tabla 9-1.


• Resistores variables (VR) de ajuste y sus nombres

- VR1: Potencia de laser
 VR2: Error de RF (RF. OFS)
 VR3: Ganancia de enfoque (FCS. GAN)
 VR4: Ganancia de seguimiento (TRK. GAN)
 VR5: Equilibrio de seguimiento (TRK. BAL)
 VR6: Error de enfoque (FCS. OFS)
 VR7: Error de seguimiento (TRK. OFS)
 VR8: Frecuencia propia de oscilador controlado por tensión (VCO. ADJ)

En el modo de prueba, los servos se abren y cierran independientemente. Por lo tanto, deben cerrarse uno a la vez (consecutivamente) para que la unidad permanezca en el modo de reproducción normal. Advierta también que en el modo de prueba la unidad no entrará en el modo de reproducción si se presiona solamente la tecla de pausa (||).

Ejemplo: Cambiando del modo de parada al de reproducción

* En el modo de prueba, los servos deben activarse en forma consecutiva.


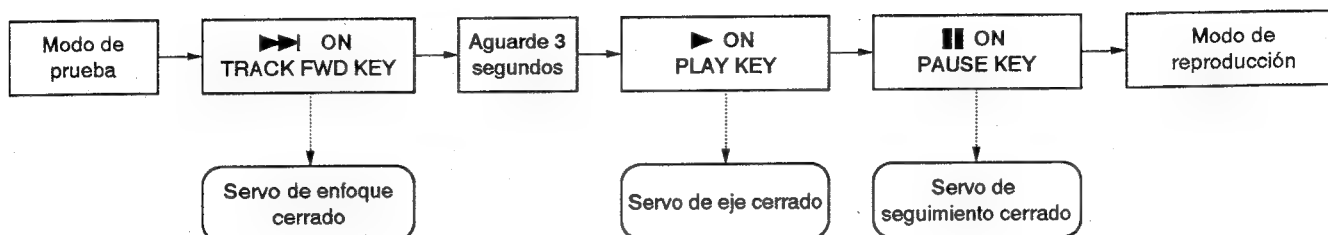


• Funciones de las teclas en el modo de prueba

Símbolo	Nombre de la tecla	Función en el modo de prueba	Descripción
⏮	TRACK FWD	Cerrar el servo de enfoque	Enciende el diodo laser y levanta/baja el actuador de enfoque para cerrar el servo de enfoque. Después de cerrar la bandeja de disco 1, la bandeja se mueve a la posición de reproducción.
▶	PLAY	Cerrar el servo de eje	Cierra el servo en el modo CLV-A después de arrancar el motor de eje.
	PAUSE	Abrir/cerrar el servo de seguimiento	Efectúa una operación de conexión oscilante: Cierra el servo de seguimiento y establece el modo de reproducción cuando se la presiona una vez (siempre y cuando los servos de enfoque y eje estén cerrados), iluminándose al mismo tiempo el indicador PAUSE, y abre el servo de seguimiento cuando se la presiona nuevamente.
⏪	MANUAL SEARCH REV	Transportar el carro hacia el centro	Mueve el carro rápidamente (3 cm/s) hacia el centro del disco. Dado que no hay un sistema de seguridad para detener el carro, suelte la tecla cuando el carro llegue a la última pista del disco.
⏩	MANUAL SEARCH FWD	Transportar el carro hacia afuera	Mueve el carro rápidamente (3 cm/s) hacia el borde exterior del disco. Dado que no hay un sistema de seguridad para detener el carro, suelte la tecla cuando éste llegue al borde exterior del disco.
■	STOP	Parada	Detiene todos los servos y vuelve el sistema a su estado inicial.
▲	OPEN/CLOSE Disc I	Abrir/cerrar la bandeja de disco	Abre y cierra la bandeja de disco. El captador no vuelve a la posición de reposo al abrir la bandeja, y permanece quieto al cerrarla.



Tabla 9-1.

Paso N°	Ajuste del osciloscopio		Puntos de confirmación	Puntos de ajuste	Items de confirmación/ Especificaciones de ajuste	Procedimiento de ajuste
	V	H				
1	AJUSTE DE ERROR DE SEGUIMIENTO, ENFOQUE Y RF					
			Patilla 2 de TP1 1 (TRK. ERR) Patilla 6 de TP1 1 (FCS. ERR) Patilla 1 de TP1 (RF. output)	VR5 (TRK. BAL) VR7 (TRK. OFS) VR6 (FCS. OFS) VR2 (RF. OFS)	Error de seguimiento 45 ° 0V ± 50 mV Error de enfoque 0V ± 50 mV Error de RF 100 mV ± 50 mV	<ul style="list-style-type: none">Establezca el modo de prueba (vea la página 56).Gire VR5 TRK. BAL (equilibrio de seguimiento) en sentido antihorario a unos 45 ° de la posición central.Ajuste VR7 TRK. OFS (error de seguimiento) de modo que la tensión de error de seguimiento (TRK. ERR) en la patilla 2 de TP1 sea 0V ± 50 mV.Ajuste VR6 FCS. OFS (error de enfoque) de modo que la tensión de error de enfoque (FCS. ERR) en la patilla 6 de TP1 sea 0V ± 50 mV.Ajuste VR2 RF. OFS (error de RF) de modo que la tensión de salida de RF en la patilla 1 de TP1 sea 100 mV ± 50 mV. <p>Nota: Después de ajustar el error de seguimiento, no deje de ajustar el equilibrio de seguimiento como se indica en la sección 6.</p>
2	AJUSTE DE NIVEL DE RF					
			Patilla 1 de TP1 (RF output)	VR1 (potencia de laser)	1,5V +0,2V -0V	<ul style="list-style-type: none">Establezca el modo de prueba (vea la página 56).Reproduzca el disco de prueba, conecte el osciloscopio a la patilla 1 de TP1 (salida de RF) y mida la tensión p-p de la onda de RF.Ajuste de modo que la tensión sea 1,5V +0,2V -0V.
3	CONFIRMACION DE POTENCIA DE DIODO LASER (LD)					
					Menor que 0,13 mW	<ul style="list-style-type: none">Establezca el modo de prueba (vea la página 56).Presione la tecla TRACK FWD (▶▶) para encender el diodo laser.Coloque el sensor del medidor de potencia de laser exactamente sobre la lente del objetivo y confirme que la potencia de salida del laser no exceda 0,13 mW.

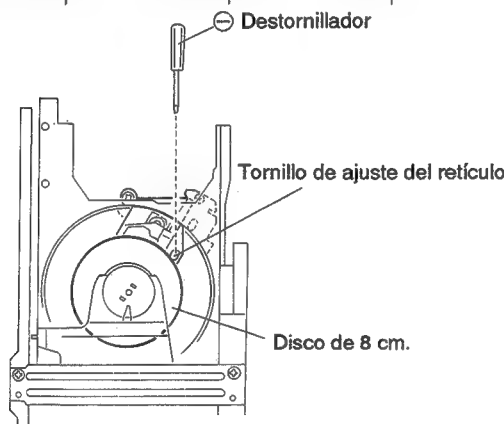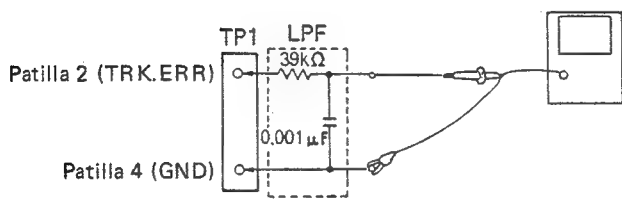Paso N°	Ajuste del osciloscopio		Puntos de confirmación	Puntos de ajuste	Items de confirmación/ Especificaciones de ajuste	Procedimiento de ajuste
	V	H				
4	CONFIRMACION DE ENCLAVAMIENTO DE ENFOQUE Y EJE					
	V 0,5V/div.	H 100 ms /div.	Patilla 1 de TP1 (salida de RF)	Existe salida de RF Rotación normal (en sentido horario)		<ul style="list-style-type: none">• Coloque el disco de prueba.• Establezca el modo de prueba (vea la página 56).• Presione la tecla MANUAL SEARCH FWD (▶▶) y mueva el captador hasta cerca del centro del disco.• Observe la salida de la patilla 1 de TP1 en el osciloscopio. Confirme que la señal de RF sea emitida después de presionar la tecla TRACK FWD (▶▶I).• Presione la tecla PLAY (▶) y confirme que el disco gire a velocidad constante (aprox. 30 rpm con el captador cerca del centro del disco) en el sentido normal (horario); asegúrese de que el disco no gire demasiado rápido ni en sentido opuesto.
5	AJUSTE DE RETICULO (1) (empleando un disco de 8 cm)					
					<p>Nota: Este ajuste sólo puede efectuarse usando un disco de 8 cm con hoyos sobre un diámetro de 75 mm.</p> <ul style="list-style-type: none">• Establezca el modo de prueba (vea la página 56).• Coloque el disco de 8 cm. Mueva el captador a la pista exterior, ubicándolo sobre la zona con hoyos de modo que el orificio de ajuste de retículo de captador pueda verse por el orificio del servomecanismo (vea la Fig. 9-2).• Presione las teclas TRACK FWD (▶▶I) y PLAY (▶) consecutivamente para cerrar los servos de enfoque y eje (no cierre el servo de seguimiento).• Observe la forma de onda emitida por la patilla 2 de TP1 (TRK. ERR, error de seguimiento) en el osciloscopio, insertando un filtro de paso bajo de 4 kHz (vea la Fig. 9-3).	
						
	Fig. 9-3.					

Paso N°	Ajuste del osciloscopio		Puntos de confirmación	Puntos de ajuste	Items de confirmación/ Especificaciones de ajuste	Procedimiento de ajuste
	V	H				
	0,5 V/div.	5 ms/div.	Patilla 2 de TP1 (TRK.ERR)	Retículo Retículo	Punto cero Amplitud máxima	<ul style="list-style-type: none">• Inserte un destornillador en el orificio de ajuste del retículo, y gírelo hasta encontrar el punto cero (vea la Foto 9-1).• A continuación, gire lentamente el destornillador en sentido antihorario a partir del punto cero hasta que la forma de onda (señal de error de seguimiento) adquiera amplitud máxima (vea la Foto 9-2). <p>Nota: Inserte el destornillador cuidadosamente, pues hacerlo con demasiada fuerza haría levantar la unidad de captador.</p> <ul style="list-style-type: none">• Finalmente, confirme que no hayan mayores fluctuaciones en la tensión p-p de la señal de error de seguimiento (sin insertar el filtro de paso bajo de 4 kHz) al mover el captador a la pista interior o a la exterior. Si hubiera una diferencia mayor que $\pm 10\%$, repita el ajuste girando el tornillo de ajuste de retículo al punto de amplitud máxima de la señal de error de seguimiento.

5 AJUSTE DE RETICULO (2) (sin disco de 8 cm)

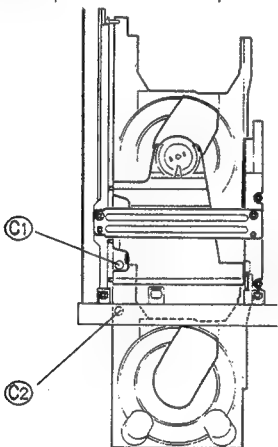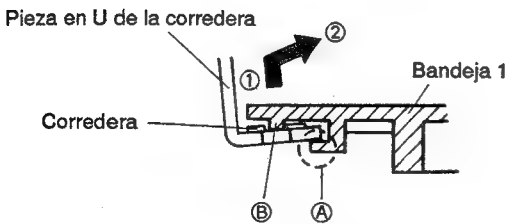 <p>Fig. 9-4.</p>  <p>Pieza en U de la corredera</p> <p>Corredera</p> <p>Bandeja 1</p> <p>Fig. 9-5.</p>					<p>Utilice este método cuando no disponga de un disco de 8 cm y el procedimiento de ajuste de retículo (1) no sea posible.</p> <p>Antes de comenzar, extraiga la bandeja 1.</p> <ul style="list-style-type: none">• Extracción de la bandeja 1. <ol style="list-style-type: none">1. Poner la bandeja en la posición abierta (OPEN).2. Sacar los tornillos (C1) y (C2) sujetando la bandeja como se ilustra en la Fig. 9-4.3. Mover la bandeja en la dirección de la flecha como se indica en la Fig. 9-5. y, retirando la parte sobresaliente (B) de la misma, desenganchar la pieza en U del gancho (A).4. Tirar de la bandeja levantando ligeramente la pieza en U de la corredera.
---	--	--	--	--	---

Paso N°	Ajuste del osciloscopio		Puntos de confirmación	Puntos de ajuste	Items de confirmación/ Especificaciones de ajuste	Procedimiento de ajuste
	V	H				
						<p>Nota: El disco empleado para este ajuste debe tener hoyos hasta un diámetro de 115 mm. El disco de prueba (YEDS-7) no puede utilizarse.</p> <ul style="list-style-type: none"> • Establezca el modo de prueba (vea la página 56). • Coloque el disco. Mueva el captador a la pista exterior, ubicándolo sobre la zona con hoyos de modo que el orificio de ajuste de retículo de captador pueda verse por el orificio del servomecanismo (vea la Fig. 9-6). • Presione las teclas TRACK FWD (▶▶) y PLAY (▶) consecutivamente para cerrar los servos de enfoque y eje (no cierre el servo de seguimiento). <p>• Observe la forma de onda emitida por la patilla 2 de TP1 (TRK.ERR, error de seguimiento) en el osciloscopio, insertando un filtro de paso bajo de 4 kHz (vea la Fig. 9-7).</p>
						<p>• Inserte un destornillador en el orificio de ajuste del retículo, y gírelo hasta encontrar el punto cero (vea la Foto 9-1).</p> <p>• A continuación, gire lentamente el destornillador en sentido antihorario a partir del punto cero hasta que la forma de onda (señal de error de seguimiento) adquiera amplitud máxima (vea la Foto 9-2).</p> <p>Nota: Inserte el destornillador cuidadosamente, pues hacerlo con demasiada fuerza haría levantar la unidad de captador.</p> <p>• Finalmente, confirme que no hayan mayores fluctuaciones en la tensión p-p de la señal de error de seguimiento (sin insertar el filtro de paso bajo de 4 kHz) al mover el captador a la pista interior o a la exterior. Si hubiera una diferencia mayor que $\pm 10\%$, repita el ajuste girando el tornillo de ajuste de retículo al punto de amplitud máxima de la señal de error de seguimiento.</p>

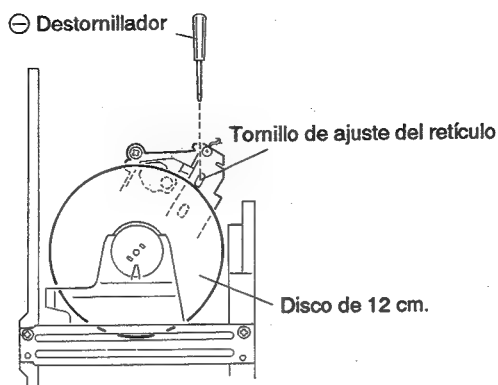


Fig. 9-6.

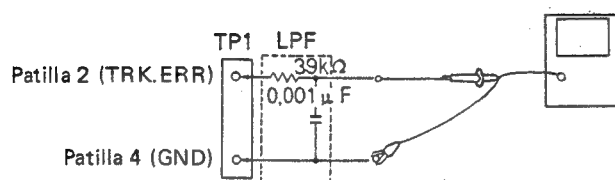


Fig. 9-7.

0,5 V/div.

5 ms/div.

Patilla 2 de TP1 (TRK.ERR)

Retículo

Retículo

Punto cero

Amplitud máxima

Paso N°	Ajuste del osciloscopio		Puntos de confirmación	Puntos de ajuste	Items de confirmación/ Especificaciones de ajuste	Procedimiento de ajuste
	V	H				
						<p>Después de terminar todos los ajustes, fijar la bandeja 1 de la manera siguiente:</p> <p>En primer lugar, desmontar el panel frontal, pues impide el montaje de la bandeja 1.</p> <ol style="list-style-type: none">1. Poner la pieza en U en la posición más avanzada (bandeja totalmente abierta).2. Poner la corredera en la posición más avanzada como se ilustra en la Fig. 9-8.3. Como ilustra la línea punteada en la Fig. 9-9, introducir la bandeja hasta la posición en que sus agujeros coincidan con los de la corredera (asegúrese de que la corredera no se deslice hacia atrás).4. Bajar la bandeja empujándola hacia la derecha (hacia la guía), mientras se sostiene la corredera desde abajo con un dedo.5. Ajustar la posición de la bandeja de manera que el gancho A y la parte sobresaliente B queden en la posición correcta según se ilustra en la Fig. 9-10. Comprobar que el engranaje de sincronización engrana correctamente con el de la bandeja.6. Comprobar que los agujeros de montaje de la corredera coinciden con los del centro de la bandeja. Apretar los tornillos C1 y C2 en este orden.7. Después de terminar el montaje, abrir completamente la bandeja y comprobar que las piezas ocupan las posiciones ilustradas en la porción E ampliada. Si la posición no es satisfactoria, se debe repetir el ajuste nuevamente desde el comienzo.

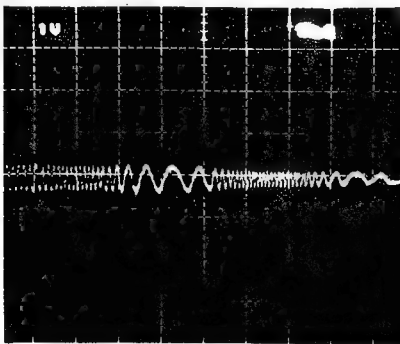


Foto 9-1. Forma de onda de punto cero

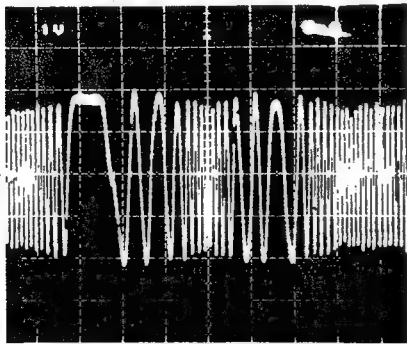


Foto 9-2. Amplitud máxima

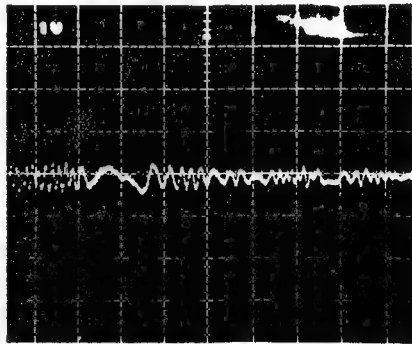
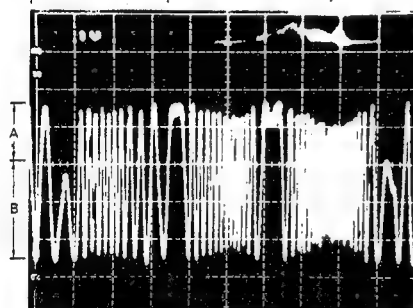
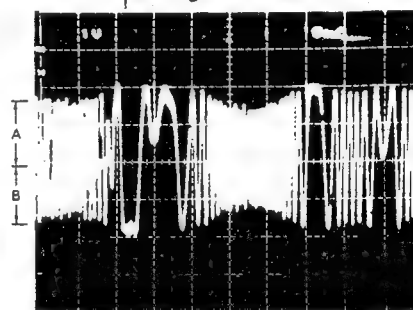
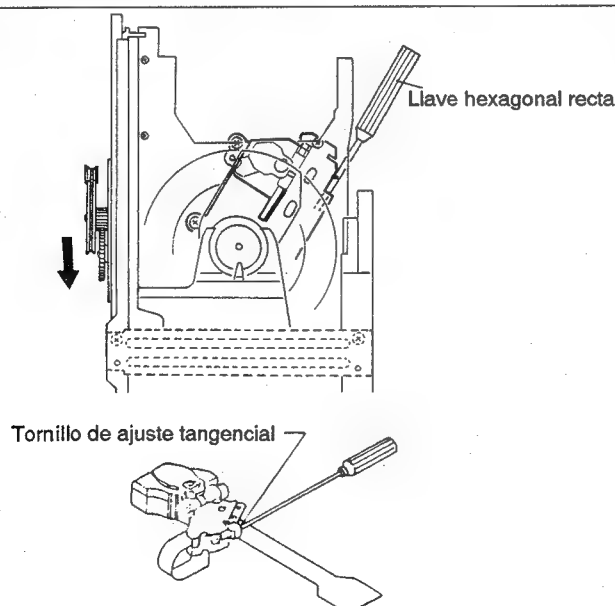


Foto 9-3. Forma de onda fuera del punto cero

Paso N°	Ajuste del osciloscopio		Puntos de confirmación	Puntos de ajuste	Items de confirmación/ Especificaciones de ajuste	Procedimiento de ajuste
	V	H				
6	AJUSTE DE EQUILIBRIO DE SEGUIMIENTO					
	0,5 V/div.	5 ms/div.	Patilla 2 de TP1 (TRK. ERR)	VR5 (TRK. BAL)		<ul style="list-style-type: none">• Coloque el disco de prueba.• Establezca el modo de prueba (vea la página 56).• Presione la tecla MANUAL SEARCH FWD (▶▶) y mueva el carro hasta cerca del centro del disco.• Presione la tecla TRACK FWD (▶▶) y después la tecla PLAY (▶) para hacer girar al disco.• Observe la forma de onda emitida por la patilla 2 de TP1, TRK. ERR (error de seguimiento) en el osciloscopio, y ajuste VR5 TRK. BAL (equilibrio de seguimiento) de modo que la componente de CC desaparezca de la señal de error de seguimiento.
<div><div></div><div>Foto 9-4. Con componente de CC</div></div> <div><div></div><div>Foto 9-5. Sin componente de CC</div></div>						
7	AJUSTE TANGENCIAL					
	<div></div> <div>Fig. 9-11.</div>					<ul style="list-style-type: none">• Establezca el modo de prueba (vea la página 56).• Abra la bandeja 1 y coloque el disco.• Cierre la bandeja 1.• Presione la tecla MANUAL SEARCH FWD (▶▶) y mueva el captador hasta la pista exterior.• Gire la polea engranaje con la mano en el sentido indicado por la flecha, y mueva la bandeja 2 hacia arriba de modo que la sección del tornillo de ajuste tangencial quede a la vista.• Inserte una llave hexagonal en la sección del tornillo de ajuste tangencial desde la derecha y en forma oblicua, a través de la parte posterior del mecanismo.• Presione la tecla MANUAL SEARCH REV (◀◀) para ubicar el captador en un lugar cualquiera en medio del disco.• Presione las teclas TRACK FWD (▶▶), PLAY (▶) y PAUSE (■) en este orden para cerrar todos los servos (se encenderá el indicador de pausa).

Paso N°	Ajuste del osciloscopio		Puntos de confirmación	Puntos de ajuste	Items de confirmación/ Especificaciones de ajuste	Procedimiento de ajuste
	V	H				
		200 ns/div.	TP1 Patilla 1 (salida de RF)	Tornillo de ajuste tangencial	Imagen de prueba más nítida posible	<ul style="list-style-type: none"> • Observe la forma de onda emitida por la patilla 1 de TP1 (salida de RF) en el osciloscopio y ajuste el tornillo de ajuste tangencial hasta obtener la imagen de prueba más nítida posible. • El punto de ajuste correcto se encuentra entre los dos puntos en que la imagen de prueba se vuelve borrosa al girar el tornillo de ajuste tangencial en sentido horario y después en sentido antihorario. Cuando la forma de onda se aclare en su totalidad, trate de hacer nítidas las líneas finas que forman la figura de diamante en el centro de la imagen de prueba (vea la Foto 9-6). Ajuste hasta que la figura de diamante esté compuesta de líneas finas simples.


TP1 10k Ω

Patilla 1 (RF)

Patilla 4 (GND)

Fig. 9-12.

Nota: Emplee una llave hexagonal para mantener el captador levantado durante este ajuste.

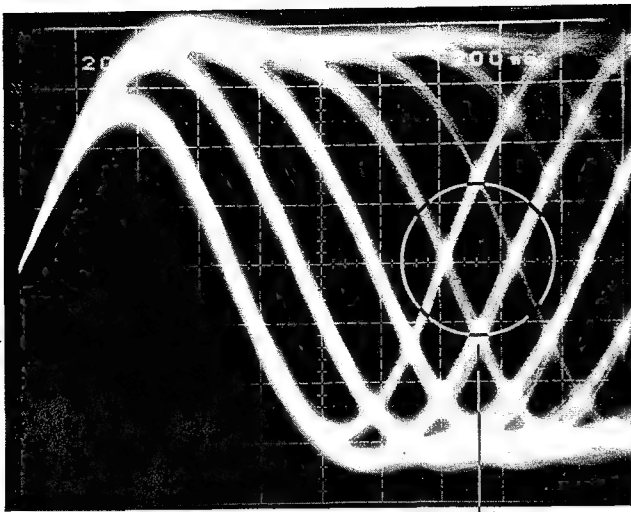

Parte a ser observada

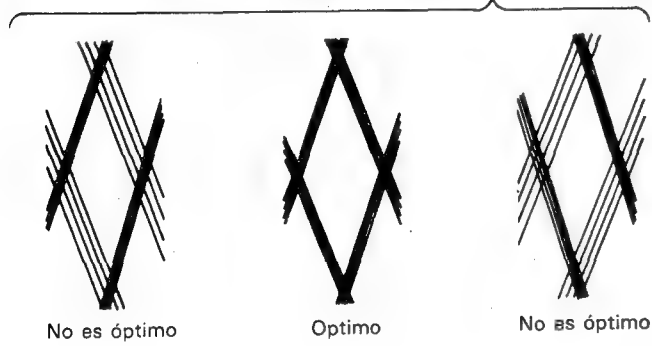


Foto 9-6.

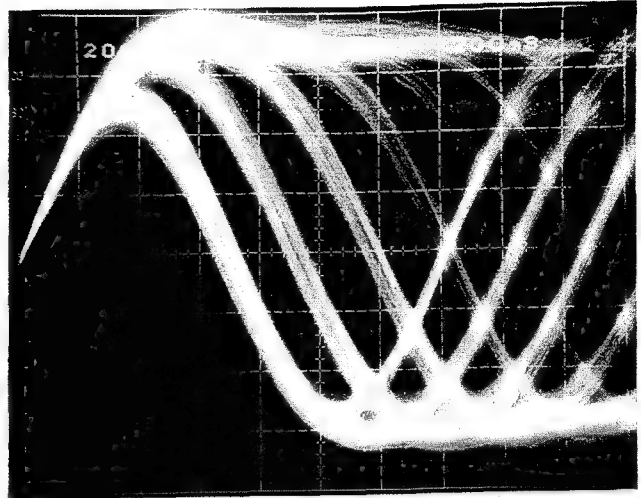


Foto 9-7.

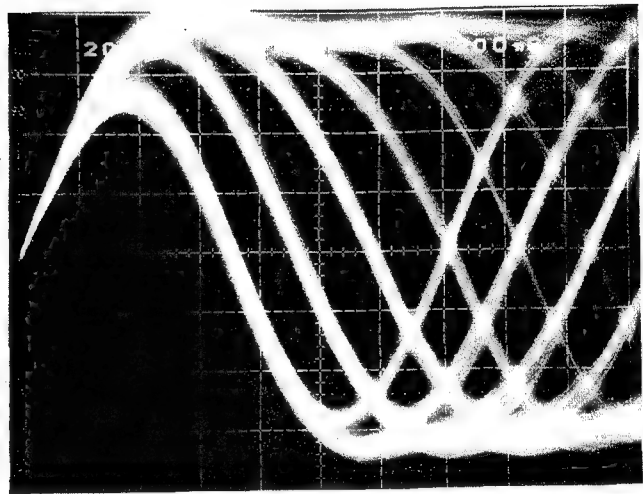


Foto 9-8.

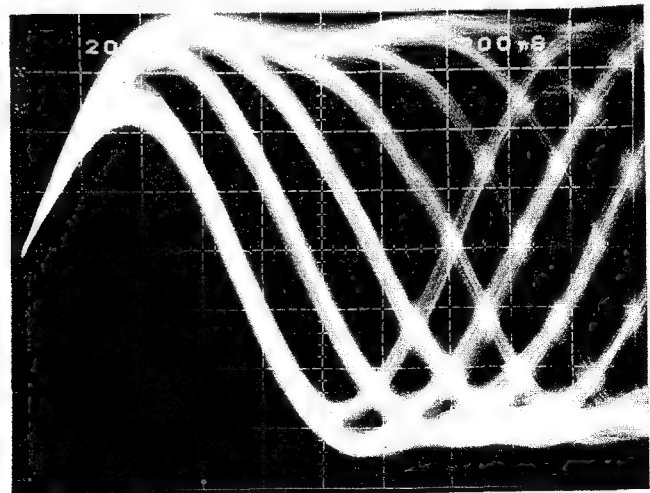


Foto 9-9.

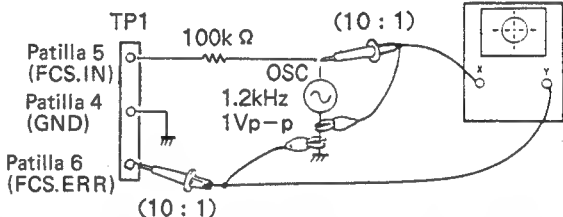
Paso N°	Ajuste del osciloscopio		Puntos de confirmación	Puntos de ajuste	Items de confirmación/ Especificaciones de ajuste	Procedimiento de ajuste
	V	H				
8	AJUSTE DE GANANCIA DE ENFOQUE					
	Canal 1 (x), canal 2 (y) 20 mV/div., 5 mV/div. (sonda: 10:1)	Eje de las "x" Patilla 5 de TP1 (FCS.IN) Eje de las "y" Patilla 6 de TP1 (FCS.ERR)	VR3 (FCS.GAN)	Diferencia de fase 90°	<ul style="list-style-type: none">Con el oscilador apagado, conecte el osciloscopio y el oscilador como lo ilustra la Fig. 9-13.Establezca el modo de reproducción normal.Encienda el oscilador y ajústelo para emitir una señal de 1,2 kHz y 1 Vp-p. <p>Nota: Algunos osciladores descargan una tensión de CC al ser encendidos. En este caso es recomendable conectar el oscilador después de encenderlo.</p> <ul style="list-style-type: none">Ajuste VR3 (FCS. GAN, ganancia de enfoque) de modo que la figura de Lissajous se vea como un círculo horizontal en el osciloscopio (diferencia de fase 90°).	

Fig. 9-13.



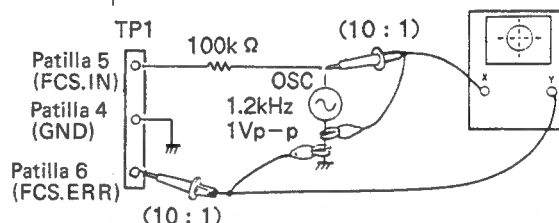



Fig. 9-13.

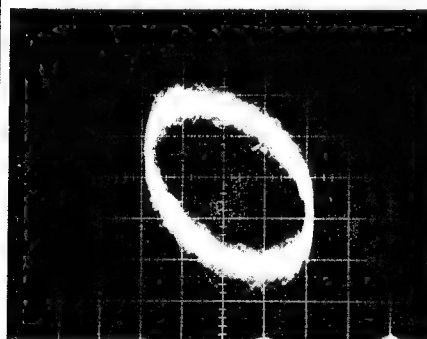



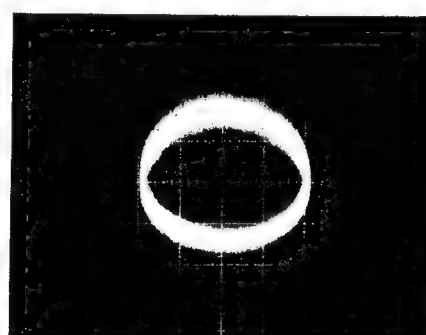
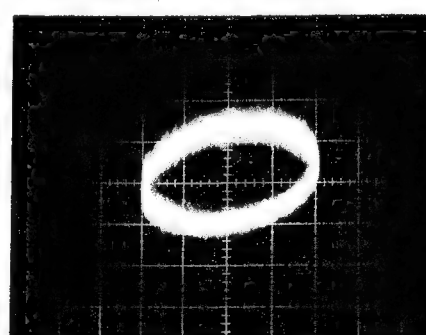
Alta ganancia
Foto 9-10.

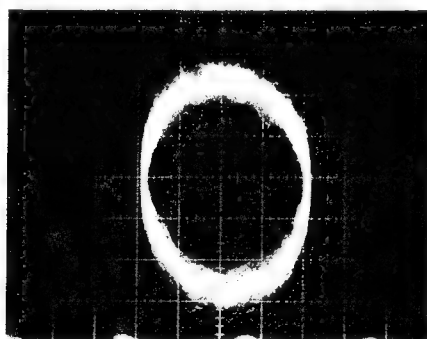

Ganancia óptima
Foto 9-11.

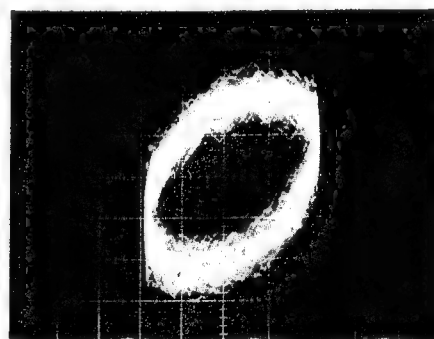

Baja ganancia
Foto 9-12.

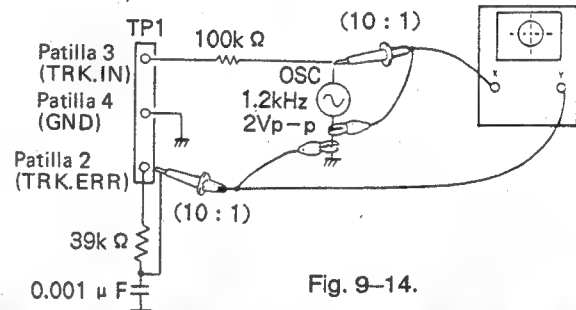Paso N°	Ajuste del osciloscopio		Puntos de confirmación	Puntos de ajuste	Items de confirmación/ Especificaciones de ajuste	Procedimiento de ajuste
	V	H				
9	AJUSTE DE GANANCIA DE SEGUIMIENTO					
	Canal 1 (x), canal 2 (y) 50 mV/div., 5 mV/div. (sonda: 10:1)	Eje de las "x" Patilla 3 de TP1 (TRK. IN) Eje de las "y" Patilla 2 de TP1 (TRK. OUT)	VR4 (TRK. GAN)	Diferencia de fase 90°	<ul style="list-style-type: none">Con el oscilador apagado, conecte el osciloscopio y el oscilador como lo ilustra la Fig. 9-14.Establezca el modo de reproducción normal.Encienda el oscilador y ajústelo para emitir una señal de 1,2 kHz y 2 Vp-p. <p>Nota: Algunos osciladores descargan una tensión de CC al ser encendidos. En este caso es recomendable conectar el oscilador después de encenderlo.</p> <ul style="list-style-type: none">Ajuste VR4 (TRK. GAN, ganancia de enfoque) de modo que la figura de Lissajous se vea como un círculo horizontal en el osciloscopio (diferencia de fase 90°). <div></div>	
<div></div> <div>Alta ganancia Foto 9-13.</div>						
<div></div> <div>Ganancia óptima Foto 9-14.</div>						
<div></div> <div>Baja ganancia Foto 9-15.</div>						

Paso N°	Ajuste del osciloscopio		Puntos de confirmación	Puntos de ajuste	Items de confirmación/ Especificaciones de ajuste	Procedimiento de ajuste
	V	H				
10	AJUSTE DE FRECUENCIA PROPIA DEL OSCILADOR CONTROLADO POR TENSION					
			Patilla 2 de TP2 (PLCK)	VR8 (VCO. ADJ)	4.275 ± 0.025 MHz	<ul style="list-style-type: none">• Establezca el modo de prueba (vea la página 56).• Ponga en cortocircuito los contactos ASY y GND con un destornillador o herramienta similar (vea la Fig. 9-1).• Conecte un contador de frecuencia capaz de medir frecuencias de 10 MHz y mayores al puente PLCK.• Ajuste VR8 (VCO. ADJ, ajuste de frecuencia libre del oscilador controlado por tensión) de modo que el contador de frecuencia indique 4,275 ± 0,025 MHz.
11	CONFIRMACION DEL CARACTER S (ERROR DE ENFOQUE)					
			Patilla 6 de TP1 (FCS. ERR)			<ul style="list-style-type: none">• Establezca el modo de prueba (vea la página 56).• Cortocircuite el contacto 5 de TP1 FCS. IN (entrada de enfoque) y el contacto 4 a tierra.• Observe la forma de onda emitida por la patilla 6 de TP1 (FCS.ERR, error de enfoque) al presionar la tecla TRACK FWD (▶▶).

10. MECHANISM DESCRIPTION

• Features

The twin-tray system mechanism incorporated in this unit has the following two main features.

The first is that loading motor for driving the trays is the same used with the conventional single tray system, and only one motor is used. This allows for the configuration of a twin tray system CD player at a low cost. Also because almost the same control circuit for driving loading motor as used for single tray CD players can be used, this also contributes to reducing costs.

The second feature is the reduction in space provided by having the trays stacked over top of each other. Because this allows for the same parts arrangement (electrical system board on right and mechanism on left as seen from front panel) as conventional single tray CD players, our know-how of these units can be directly applied.

• Movement Range of Trays

As shown in Fig. 10-1, tray is attached to the slider by two screws ⑧. Slider moves over the groove in the slid angle. Because it is impossible to provide the distance that tray must move (from OPEN position to PLAY position) by the movement which slide angle is capable of, the operation of the linear gear ① attached to loading base, synchronous gear attached to slide angle, and the linear gear section ③ of the tray, doubles the movement distance of slide angle to allow movement of tray. The principles of operation are as follows. When slide angle moves in the horizontal direction (forward and back direction), synchronous gear rotates to move tray by the same amount that slide angle was moved.

As can be seen in Fig. 10-1, the position of tray has moved twice the distance ② that slide angle travelled, when compared with the position of tray before movement of slide angle. (The same applies to both tray 1 and tray 2.)

As shown in Fig. 10-2, slide angle U and slide angle L have shafts ① and ③ and shafts ④ and ⑥ respectively, and E-rings ⑦ and washers ⑧ are used to attach these angles to loading base.

Thus, slide angle U and slide angle L move along grooves ① and ③.

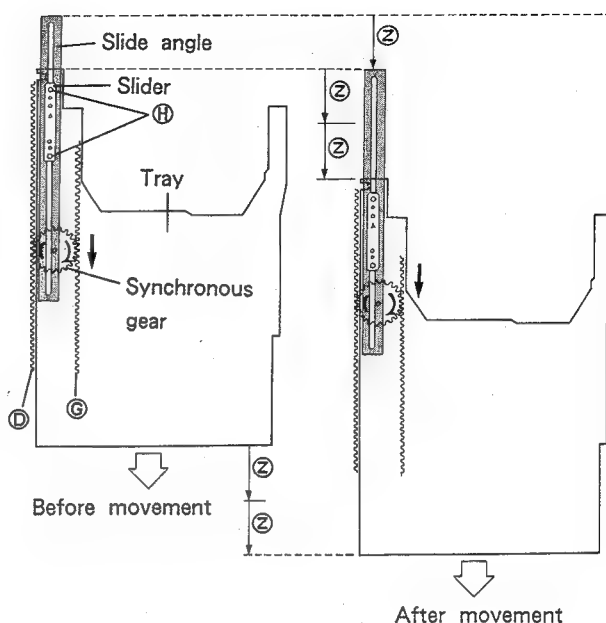


Fig. 10-1.

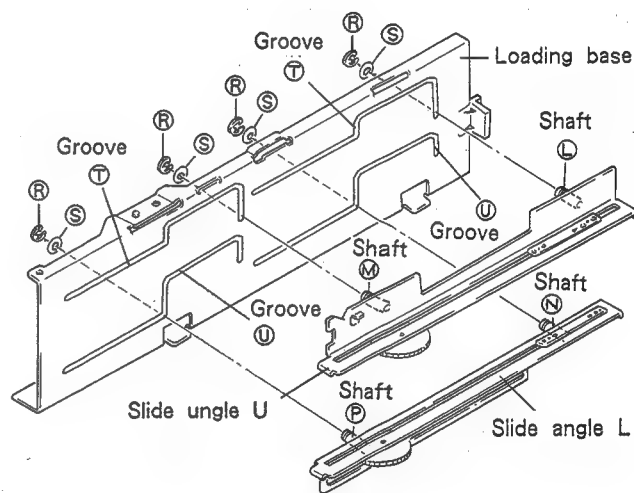


Fig. 10-2.

- Relationship between slide angle shaft movement range and tray movement range


In order to save space, the twin-tray system mechanism of this unit synchronizes the movement of the two trays, except when they are opened and closed independently (refer to page 72 regarding opening and closing).

Tray 1 and tray 2 stop at the play position, close position, and open position, and in either position both trays never stop at the same position at the same time.

Fig. 10-3 shows an example of tray 1 going from the close position to the play position and tray 2 from the play position to the close position (tray swapping operation).

1. Tray 2 rises distance ④ from the play position. At this time, movement of tray 1 is synchronized to tray 2, and it rises the same distance of ④ from the close position.
2. In order that tray 2 and tray 1 swap positions, both move a distance equivalent to twice distance ④. (This is performed by the 2× stroke mechanism formed by synchronous gear, trays, and loading base linear gear section.)
3. Tray 1 drops a distance of ③ from over top of the play position and tray 2 drops the same distance synchronized to it.

The above describes the tray swapping operation. When at the open position, the tray moves a distance of twice distance ① from the close position.

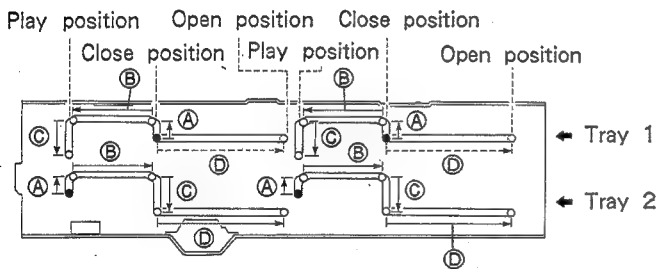

*Initial position • \longrightarrow After replacing

Tray 1 : CLOSE Tray 1 : PLAY

Tray 2 : PLAY Tray 2 : CLOSE

*Horizontal movement range

Tray movement.....Moving range of slide angle shaft : ⑧×2
(⑨×2)

- **Power transmission route from loading motor**

The power transmission route is shown in Fig. 10-4. The rotation of the loading motor is transferred by rubber belt, gear pulley, and gear, and is transmitted to the linear gear section © of rack U and rack L positioned above and below the gear.

Because rack U and rack L are positioned above and below gear, there is synchronized opposing movement to the left and right when the gear rotates.

This movement to the left and right (front and back directions when seen from the front panel) is used to drive the two trays.

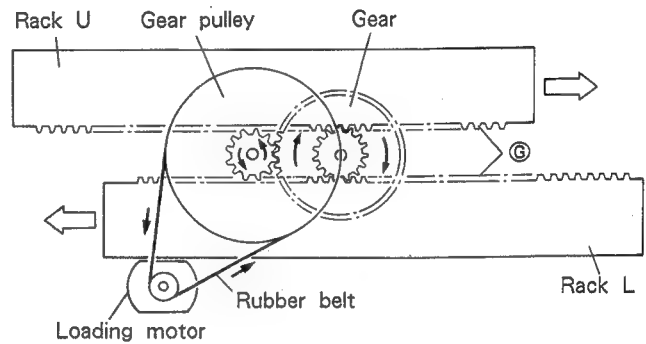


Fig. 10-4.

Fig. 10-3.

• Operation of rack U and rack L

Fig. 10-5 shows the racks and areas around the switch lever.

The racks change the linear movement in the right and left directions into the complex movement of the trays by grooves \textcircled{F} , \textcircled{G} , \textcircled{H} , and \textcircled{J} on the reverse side and grooves \textcircled{T} and \textcircled{U} in loading base, as shown in Fig. 10-6. Grooves \textcircled{K} , \textcircled{V} , \textcircled{W} , and \textcircled{Z} on the front side control the SW board ass'y switches (U, S, and L).

At the same time, the protruding section of switch lever S disengages the linear gear section of the rack from the gear at the play position so allow one of the trays to be opened/closed while the other tray is at the play position.

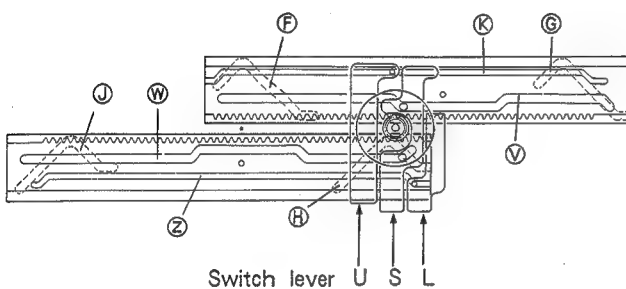


Fig. 10-5.

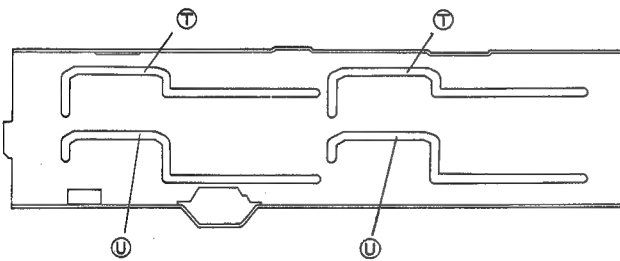


Fig. 10-6.

Fig. 10-7 through Fig. 10-10 show movement of tray 2 from the play position to the close position and tray 1 from the close position to the play position by the linear movement of rack U and rack L.

1. From the state shown in Fig. 10-7, racks U and L move in the directions of arrows $\textcircled{2}$ and $\textcircled{1}$ respectively.

This causes sections \textcircled{F} and \textcircled{G} of the racks and inclined grooves at \textcircled{H} and \textcircled{J} to push slide angle shafts \textcircled{L} , \textcircled{M} , \textcircled{N} , and \textcircled{P} .

2. When rack U and rack L move in the directions of the arrows $\textcircled{2}$ and $\textcircled{1}$ respectively, the force dispersed in the \textcircled{X} direction and the \textcircled{Y} direction shown in Fig. 10-8 acts on slide angle shafts \textcircled{L} , \textcircled{M} , \textcircled{N} , and \textcircled{P} .

However, because it is impossible to move forward in the \textcircled{X} direction, there is only movement in the \textcircled{Y} direction (upwards) and shafts \textcircled{L} , \textcircled{M} , \textcircled{N} , and \textcircled{P} rise while climbing the inclined sections of the grooves.

3. In Fig. 10-9, there is parallel movement pressing against the grooves for movement from $\textcircled{Q1}$ to $\textcircled{Q2}$, $\textcircled{R1}$ to $\textcircled{R2}$, $\textcircled{S1}$ to $\textcircled{S2}$, and $\textcircled{V1}$ to $\textcircled{V2}$.
4. When points $\textcircled{Q2}$, $\textcircled{R2}$, $\textcircled{S2}$, and $\textcircled{V2}$ are passed, the rack movement is dropping along the inclined section of the grooves as shown in Fig. 10-10.

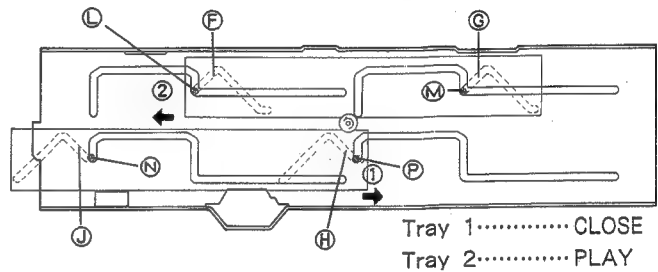


Fig. 10-7.

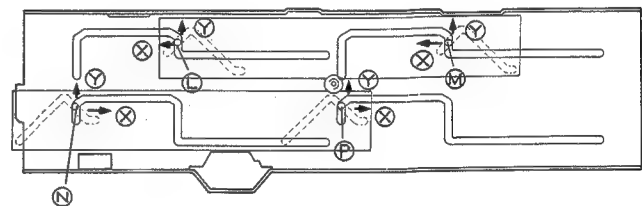


Fig. 10-8.

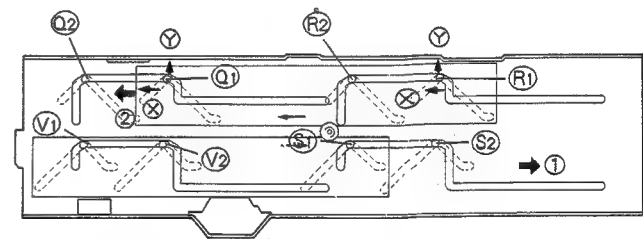


Fig. 10-9.

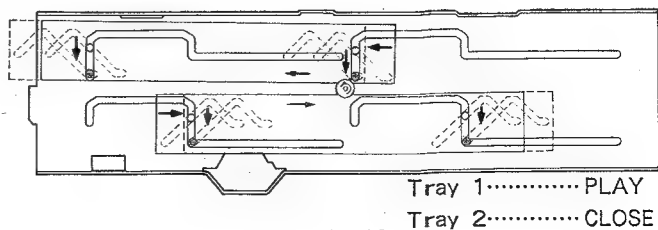


Fig. 10-10.

• Measures taken for opening/closing

As described above, rack U and rack L positioned above and below the gear have synchronized movement.

However, when one of the trays is in the play position and the other tray is opened or closed, there would be a problem with the two trays moving together.

This problem is solved by disengaging the linear gear section of the rack driving the tray at the play position from the gear.

Fig. 10-11 shows the positions of rack U and rack L and the position of switch lever S when tray 2 is in the play position and tray 1 is in the close position. There are protruding sections at A and B of switch lever S, and these are inserted in grooves V and W on the front side of racks U and L.

As shown in Fig. 10-12, when rack L (tray 2) is at the play position, the linear gear section of rack L is only touching the gear (section E), and rack L cannot move forward under its own force.

When tray 1 is opened or closed in this state, it is necessary to completely separate the linear gear section of rack L from the gear as there is the danger of contact with the gear.

The protruding sections of rack U and switch lever S are used to separate the gear section of rack L from the gear.

When tray 1 is moved towards the open position and rack U moves in the direction ①, protruding section A inserted in the groove V of rack U is pushed in the direction ② while climbing the inclined section of the groove. The protruding section B inserted into the groove of the rack L is synchronized to this movement and moves up.

This causes a force pushing rack L in the direction ③ (play position direction) to act upon the inclined section of the groove of rack L, and allows for complete separation of the rack L gear section from the gear (At this time disc does not come in contact with the tray.).

When the close and play positions of rack U and rack L are swapped, A is pushed down and B is synchronized to it and moves down. This causes rack L to be pulled in towards the gear side. In this manner, the gear section of rack L is engaged with the gear again.

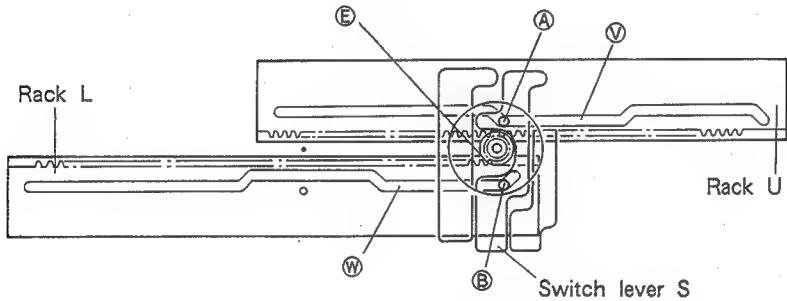


Fig. 10-11.

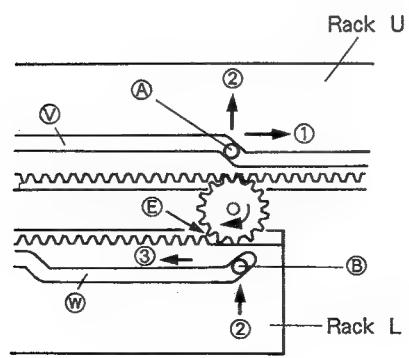


Fig. 10-12.

● Detection Method for Tray Position

The positions of tray 1 and tray 2 are detected by Pins ②④, ②⑤, and ②⑥ of the system control microcomputer IC6 (PD4184) installed in this unit. The current position of the trays is detected by the "H" and "L" combinations at these pins, and the loading motor is controlled accordingly.

Table 10-1 shows the status of the various pins and the corresponding status of tray 1 and tray 2. The positions of trays 1 and 2 are shown in Fig. 10-13. The status of Pins ②④, ②⑤, and ②⑥ of the system control microcomputer (PD4184) is created according to the ON/OFF status of the SW board ass'y switches (U, S, and L) attached to the loading base ass'y. Because Pins ②④, ②⑤, and ②⑥ are pulled up to 5V by the R146, R147, and R149 resistors, the status is "H" when the switches (U, S, and L) are OFF (lever not pressed).

These position detection switches (U, S, and L) are switched ON/OFF by the up and down movement of ㊶ (switch lever U), ㊷ (switch lever S), and ㊸ (switch lever L) shown in Fig. 10-14. The switch is ON when the switch lever is moved down. There are protruding sections ㊶, ㊷, ㊸, and ㊹ on these switch levers, and these are inserted into grooves ㊶, ㊷, ㊸, and ㊹ on the front side of rack U and rack L.

Because the grooves in these racks change height according to the positions of rack U and rack L, the height of the switch levers (U, S, and L) also changes accordingly. Fig. 10-15 through Fig. 10-17 show the state of the various sections as trays move.

As described above, switch lever S also has the function of separating the linear gear section of the rack (rack driving tray at play position) from the gear.

		TRAY1	TRAY2	TRY1 (Pin ②④)	TSEL (Pin ②⑤)	TRY2 (Pin ②⑥)	Remarks
MECHANISM POSITION	①	OPEN	PLAY	L	H	L	When tray 2 is at play position, indicates that tray 1 has arrived in open position from close position.
	②	OPEN/ CLOSE	PLAY	H	H	L	When tray 2 is at play position, indicates that tray 1 is between close position and open position.
	③	CLOSE	PLAY	H	L	L	When tray 2 is at play position, indicates that tray 1 is at close position.
	④	CHANGE	CHANGE	H	L	H	When there is transition from ④ to ⑤, indicates that there is movement in progress with tray 1 to play position and tray 2 to close position.
	⑤	CHANGE	CHANGE	H	H	H	When there is transition from ⑤ to ④, indicates that there is movement in progress with tray 1 to close position and tray 2 to play position.
	⑥	PLAY	CLOSE	L	H	H	Indicates that tray 1 is at play position and tray 2 at close position.
	⑦	PLAY	OPEN/ CLOSE	L	L	H	When tray 1 is at play position, indicates that tray 2 is between close position and open position.
	⑧	PLAY	OPEN	L	L	L	When tray 1 is at play position, indicates that tray 2 has arrived in open position.

Table 10-1.

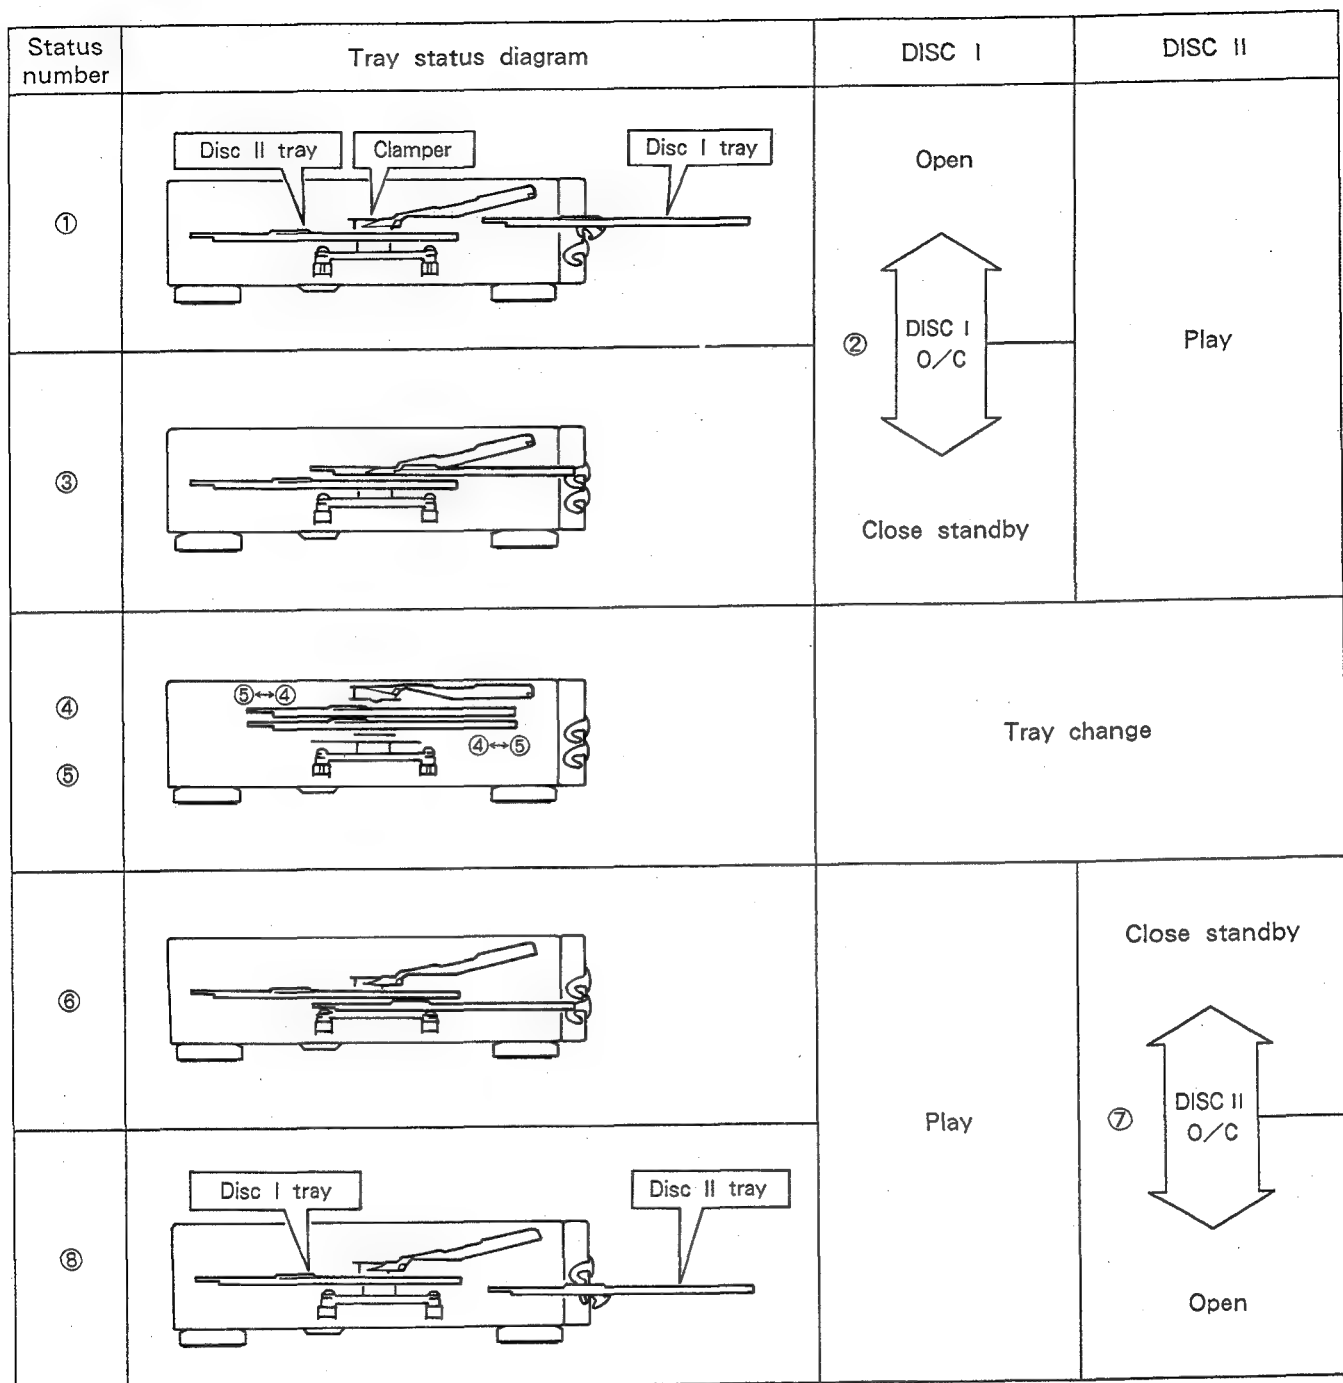


Fig. 10-13. Twin-Tray Operation Description Diagram

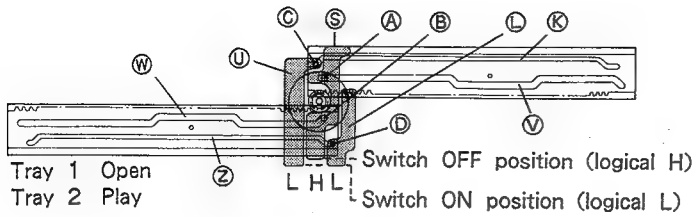


Fig. 10-14.

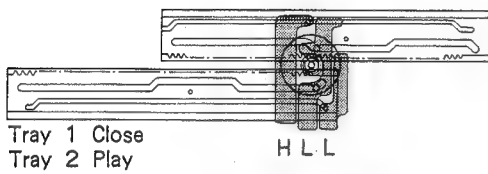


Fig. 10-15.

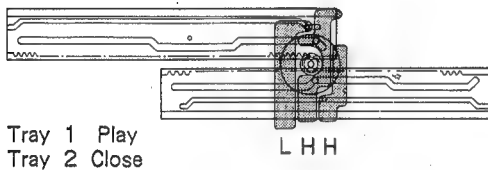


Fig. 10-16.

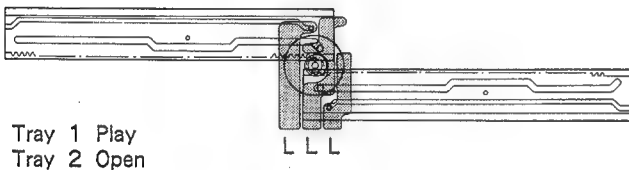


Fig. 10-17.

● Clamper holder operation

Only during clamping (tray at play position), clamper holder stops in the state that the ⑩ section of clamper holder is positioned over the upper surface section ⑪ of the gear on loading base, as shown in Fig 10-18.

This means that there is no contact with the slid angle U ① even if tray 1 is opened or closed.

● Clamper holder stopper

This unit is shipped with tray 2 at the play position and tray 1 at the close position.

A stopper to prevent up/down movement is attached at section ① of the slid angle U in Fig. 10-18 to prevent clamper holder from moving up or down due to vibration during transport.

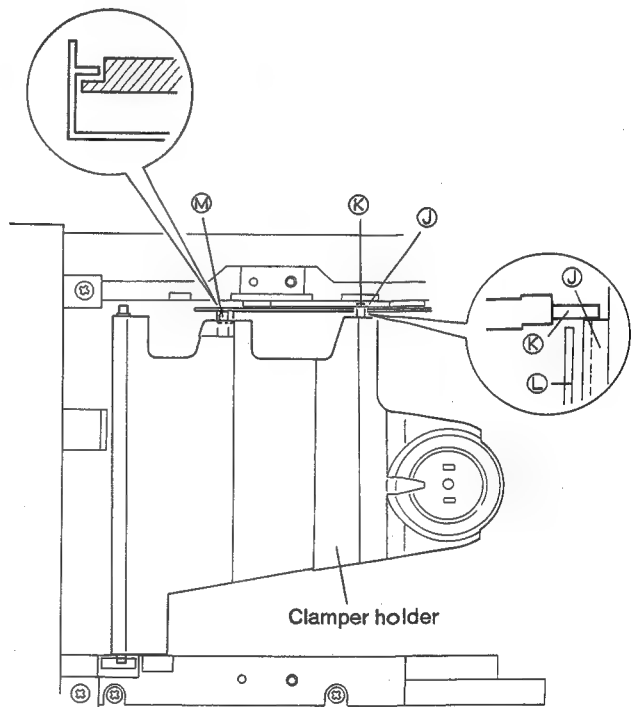


Fig. 10-18.

11. IC DESCRIPTIONS

• SM5807FP (quadruple oversampling digital filter)

This LSI is equipped with a digital filter for two channels, permitting quadruple oversampling output for each channel, so that a simple analog filter is sufficient for post processing.

In addition, since input and output are serial, compact system design was made possible, and by setting the output switching terminal it can be used for both 1 D/A converter and 2 D/A converter systems.

(I : Input terminal, O : Output terminal, IP : Input terminal with pull-up)

Pin No.	Pin Name	I/O	Pin Function	
1	XT	I	Oscillation input terminal	
2	$\overline{\text{XT}}$	O	Oscillation output terminal	
3	$\overline{\text{CKSL}}$	IP	$\overline{\text{CKSL}}=\text{H}$: Crystal oscillation (384 fs=16.9344 MHz) or external input to XT. $\overline{\text{CKSL}}=\text{L}$: Crystal oscillation (192 fs=8.4672 MHz) or external input to XT. (See Note 1.)	
4	CKO	O	Clock output (See Note 1.)	
5	LRCI	IP	44.1 kHz sync clock input Operation starts at the rising edge of the sync clock LRCI.	
6	DIN	IP	Serial data input	Serial input data is input at the rising edge of the serial input bit clock BCKI. The serial data is latched at the internal register by the sync clock LRCI after 16 bits are entered.
7	BCKI	IP	Serial input bit clock	
8	Vss	/	GND terminal (0V)	
9	$\overline{\text{SOMD}}$	IP	$\overline{\text{SOMD}}=\text{H}$: 1 D/A converter output mode (Serial data of Lch and Rch is output alternately from DOUT, thus conversion can be performed by one D/A converter.) $\overline{\text{SOMD}}=\text{L}$: 2 D/A converter output mode (Lch bit clock pulse is output from the WDCO terminal, thus in-phase conversion using two D/A converters is possible.)	
10	DGR	O	Deglitched signal for Rch (176.4 kHz, 25% duty)	
11	DGL	O	Deglitched signal for Lch (176.4 kHz, 25% duty)	
12	DOUT	O	Serial data output Data is output by MSB first with two's complement format. The data varies synchronizing at the serial output bit clock (BCKO terminal output) falling edge.	
13	WDCO	O	$\overline{\text{SOMD}}=\text{H}$: Output control clock (352.8 kHz) $\overline{\text{SOMD}}=\text{L}$: Lch bit clock	
14	$\overline{\text{LRCO}}$	O	Output control clock (176.4 kHz)	
15	BCKO	O	Serial output bit clock (8.4672 MHz) output terminal	
16	VDD	/	+ power supply terminal (TYP=5V)	

Note 1:
The system clock pulse is generated by crystal oscillation (X'tal) or external input (EXT) as shown in table 11.1.

$\overline{\text{CKSL}}$	H or open	L
Clock pulse generation method	Crystal oscillation or external input	Crystal oscillation or external input
XT input frequency	384 fs= 16.9344 MHz	192 fs= 8.4672 MHz
Clock output (CKO)	384 fs= 16.9344 MHz	192 fs= 8.4672 MHz
System clock	192 fs= 8.4672 MHz	192 fs= 8.4672 MHz

Table 11.1 Clock Pulse Generation Method

- The following sections for PD-T303 are the same as those of PD-T503.
(Refer to PD-T503)
- DISASSEMBLY, REASSEMBLY, Mechanism Section of EXPLODED VIEW AND PARTS LIST, ADJUSTMENTS, MECHANISM DESCRIPTION and Waveforms in the SCHEMATIC DIAGRAM.

12. EXPLODED VIEWS AND PARTS LIST FOR PD-T303

NOTES:

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Parts List of Exterior

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
Δ ⊙	1	PWZ1568	Main board assembly		36	PDZ26P050FMC	Screw
⊙	2	PWZ1572	Control board assembly		37	PDZ30P050FMC	Screw
Δ	3	CM-22C	Strain relief		38	PMZ30P060FCU	Screw
Δ	4	PDG1015	AC Power cord		39	PYY1088	Clamper assembly
Δ	5	PTT1091	Power transformer		40	PYY1091	Servo mechanism assembly
	6	PBA1011	Screw		41	PYY1093	Bonnet
	7	PBH1072	Door spring	⊙	42	PNW1477	Guide base
	8	PXA1201	Leg assembly		101		Transformer board assembly
	9	RNH-184	Cord clamper		102		Under base
	10	PBK1060	Plate spring		103		Rear base
	11	PHC1043	Spacer (For Packing)		104		Panel angle
	12	PNM1011	Cushion rubber		105		P.C.B angle
	13	PNW1475	Tray		106		Switch angle
	14	PNW1476	Guide		107		Mechanism support
	15	PNW1479	Clamper holder		108		Holder
	16	PEB1014	Floating rubber		109		P.C.B spacer
	17	PAC1058	Power Button (OFF/ON)		110		Magnet
	18	PAC1347	O/C Button (TIME, OPEN/CLOSE DISC I, II)		111		Synchronous lever
	19	PAC1348	Track Button (AUTO EJECT, REPEAT, ◀, ▶, ◀▶, ▶▶)		112		Joint plate
	20	PAC1349	Play Button (▶, ▶▶, ▶▶▶, DISC I, DISC II)		113		Yoke
	21	PAC1350	Button (A) (PROGRAM, RANDOM PLAY)		114		Clamper
	22	PAM1255	FL Plate (A)		115		Loading base assembly
	23	PAM1280	Window		116		Name plate
	24	PAM1281	Name plate (A)		117		Power switch joint
	25	PNW1498	Door 1		118		Binder
	26	PNW1499	Door 2		119		Hold rubber
	27	PYY1105	Control panel unit		120		Hold angle
	28	BBZ30P060FMC	Screw				
	29	BBZ30P080FZK	Screw				
	30	BBZ30P120FMC	Screw				
	31	BMZ20P040FZK	Screw				
	32	FBT40P080FZK	Screw				
	33	IBZ30P050FZK	Screw				
	34	PSA40P080FZB	Screw				
	35	IPZ30P080FMC	Screw				


Exterior

A

B

C

D

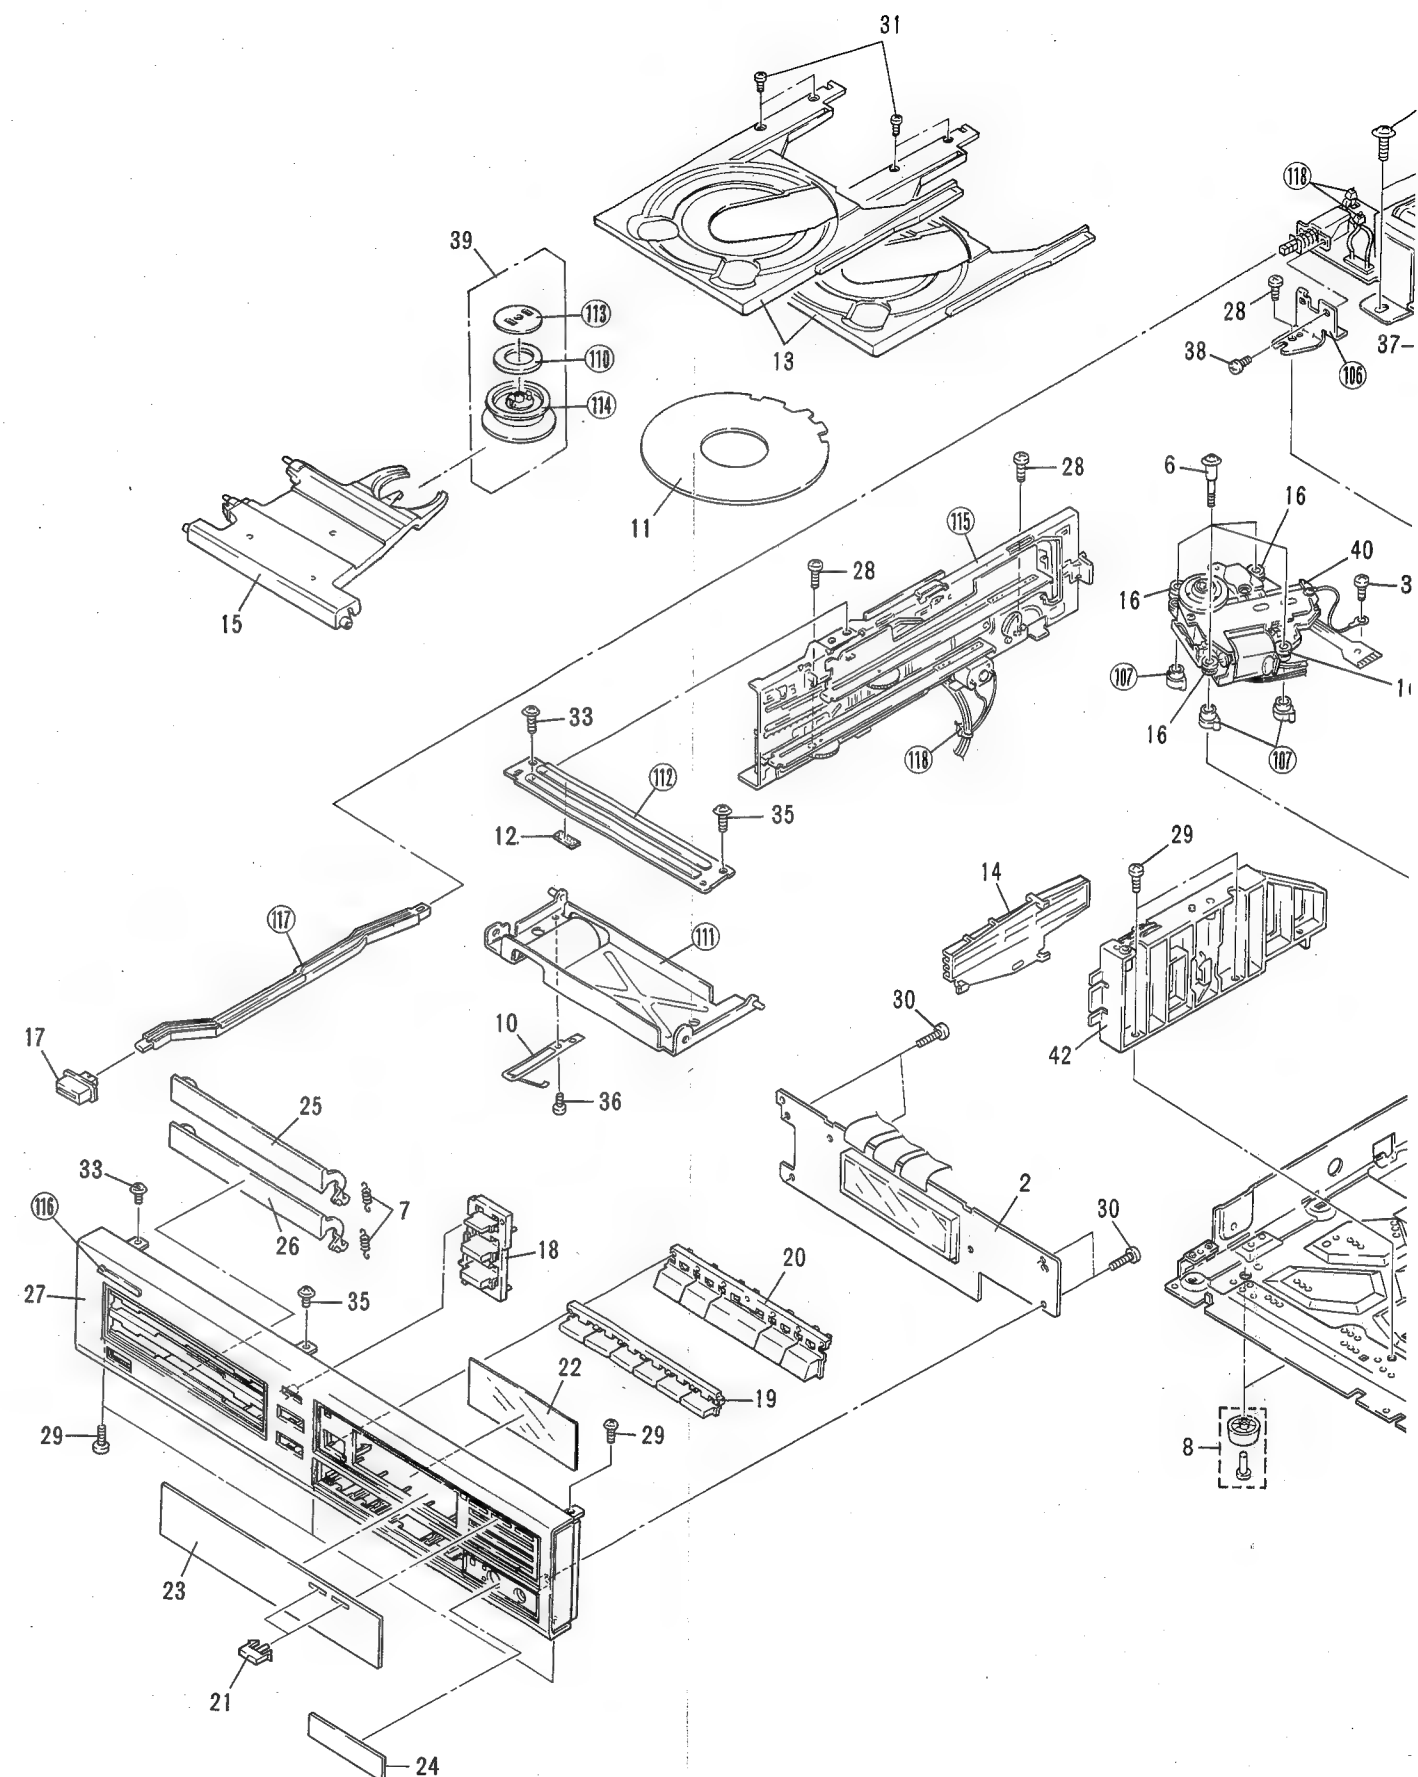

Exterior

PARTS
in the

T303

Therefore, when
the unavailable.

ion

y
assembly


rd

ort

or

sembly

nt

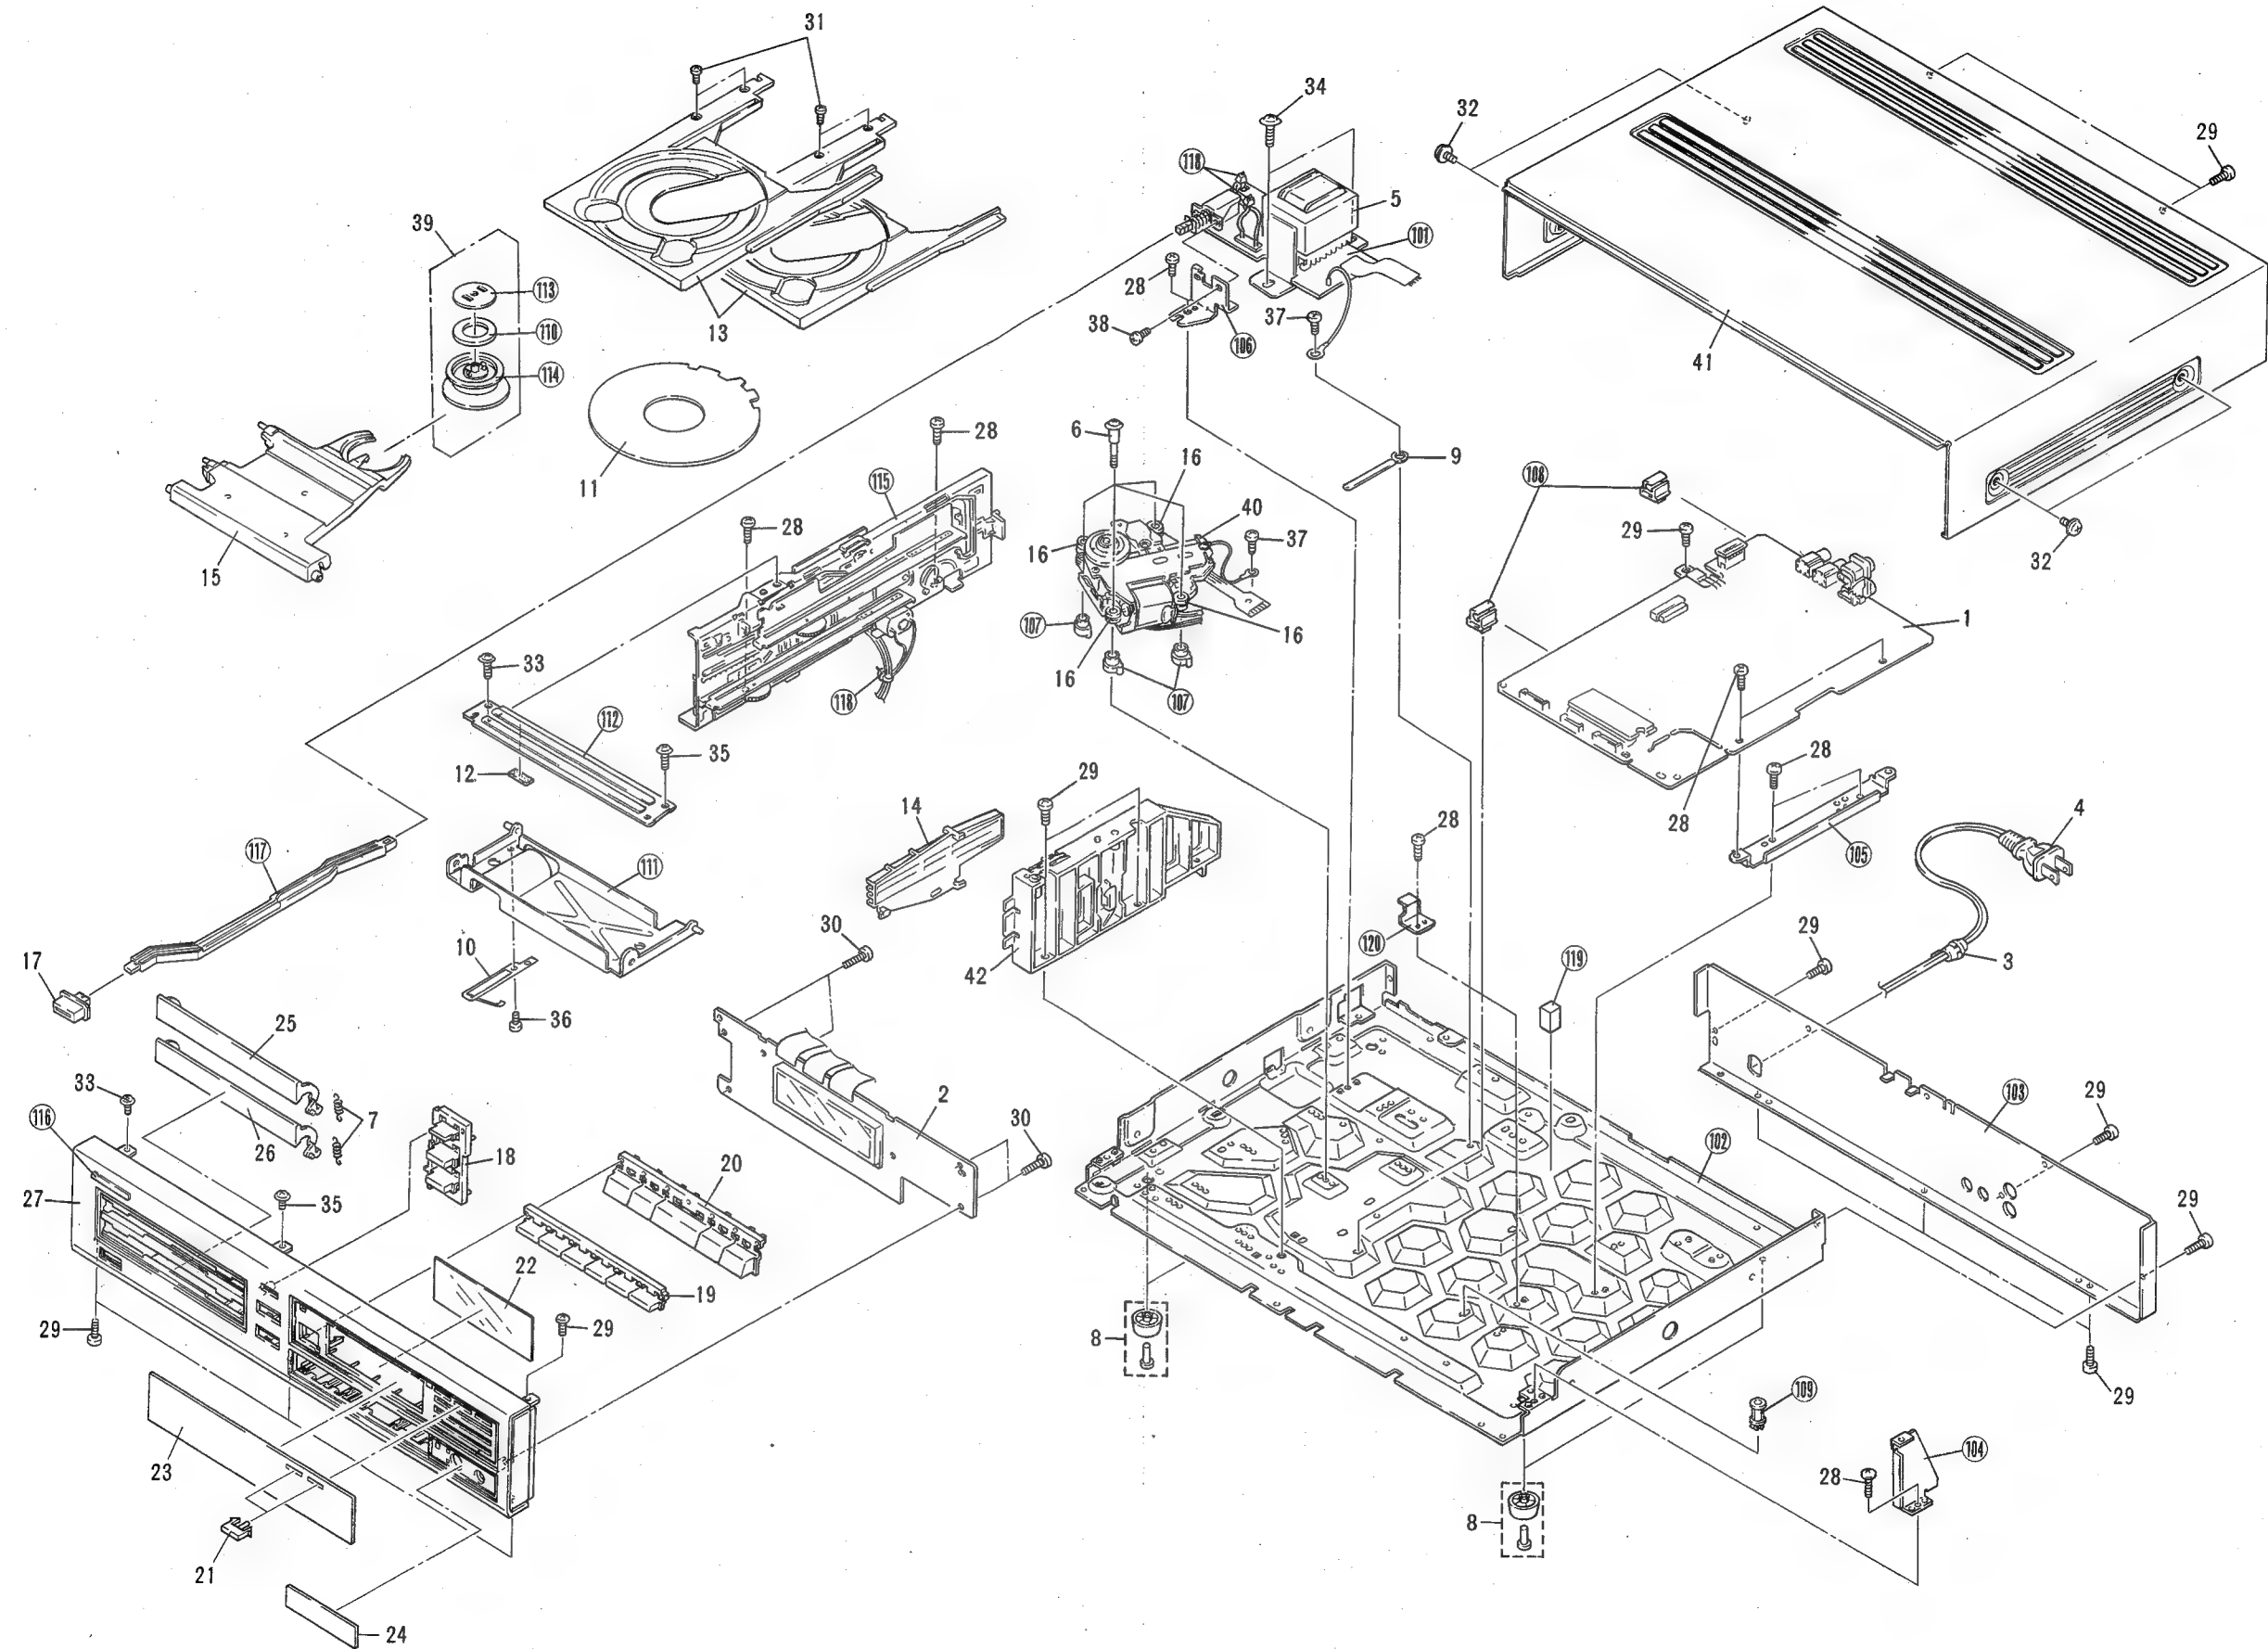



13. PACKING FOR PD-T303

Parts List of Packing

Mark	No.	Part No.	Description
	1	PHA1087	Protector (L)
	2	PHA1088	Protector (R)
	3	PHC1043	Spacer (in the tray 2)
	4	PHG1291	Packing case
	5	Z23-007	Sheet
	6	PDE-319	Connection cord
	7	PDE1002	Connection cord
	8	PRB1081	Operating instructions (English)
*	9	PWW1035	Remote control unit
*101			Battery

Note: Parts marked with (*) are applied only for PD-T403 type.

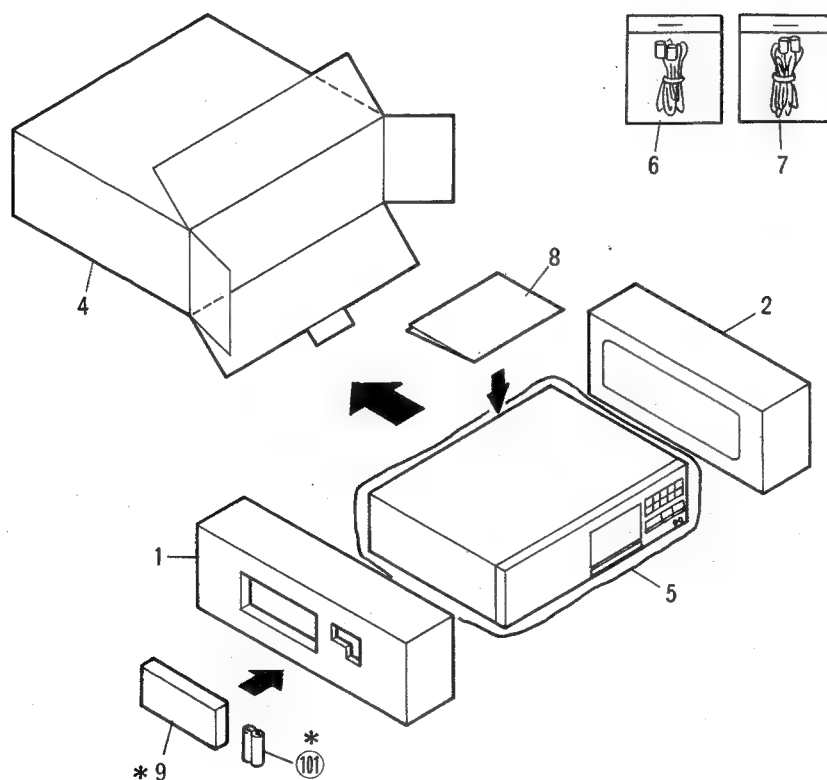

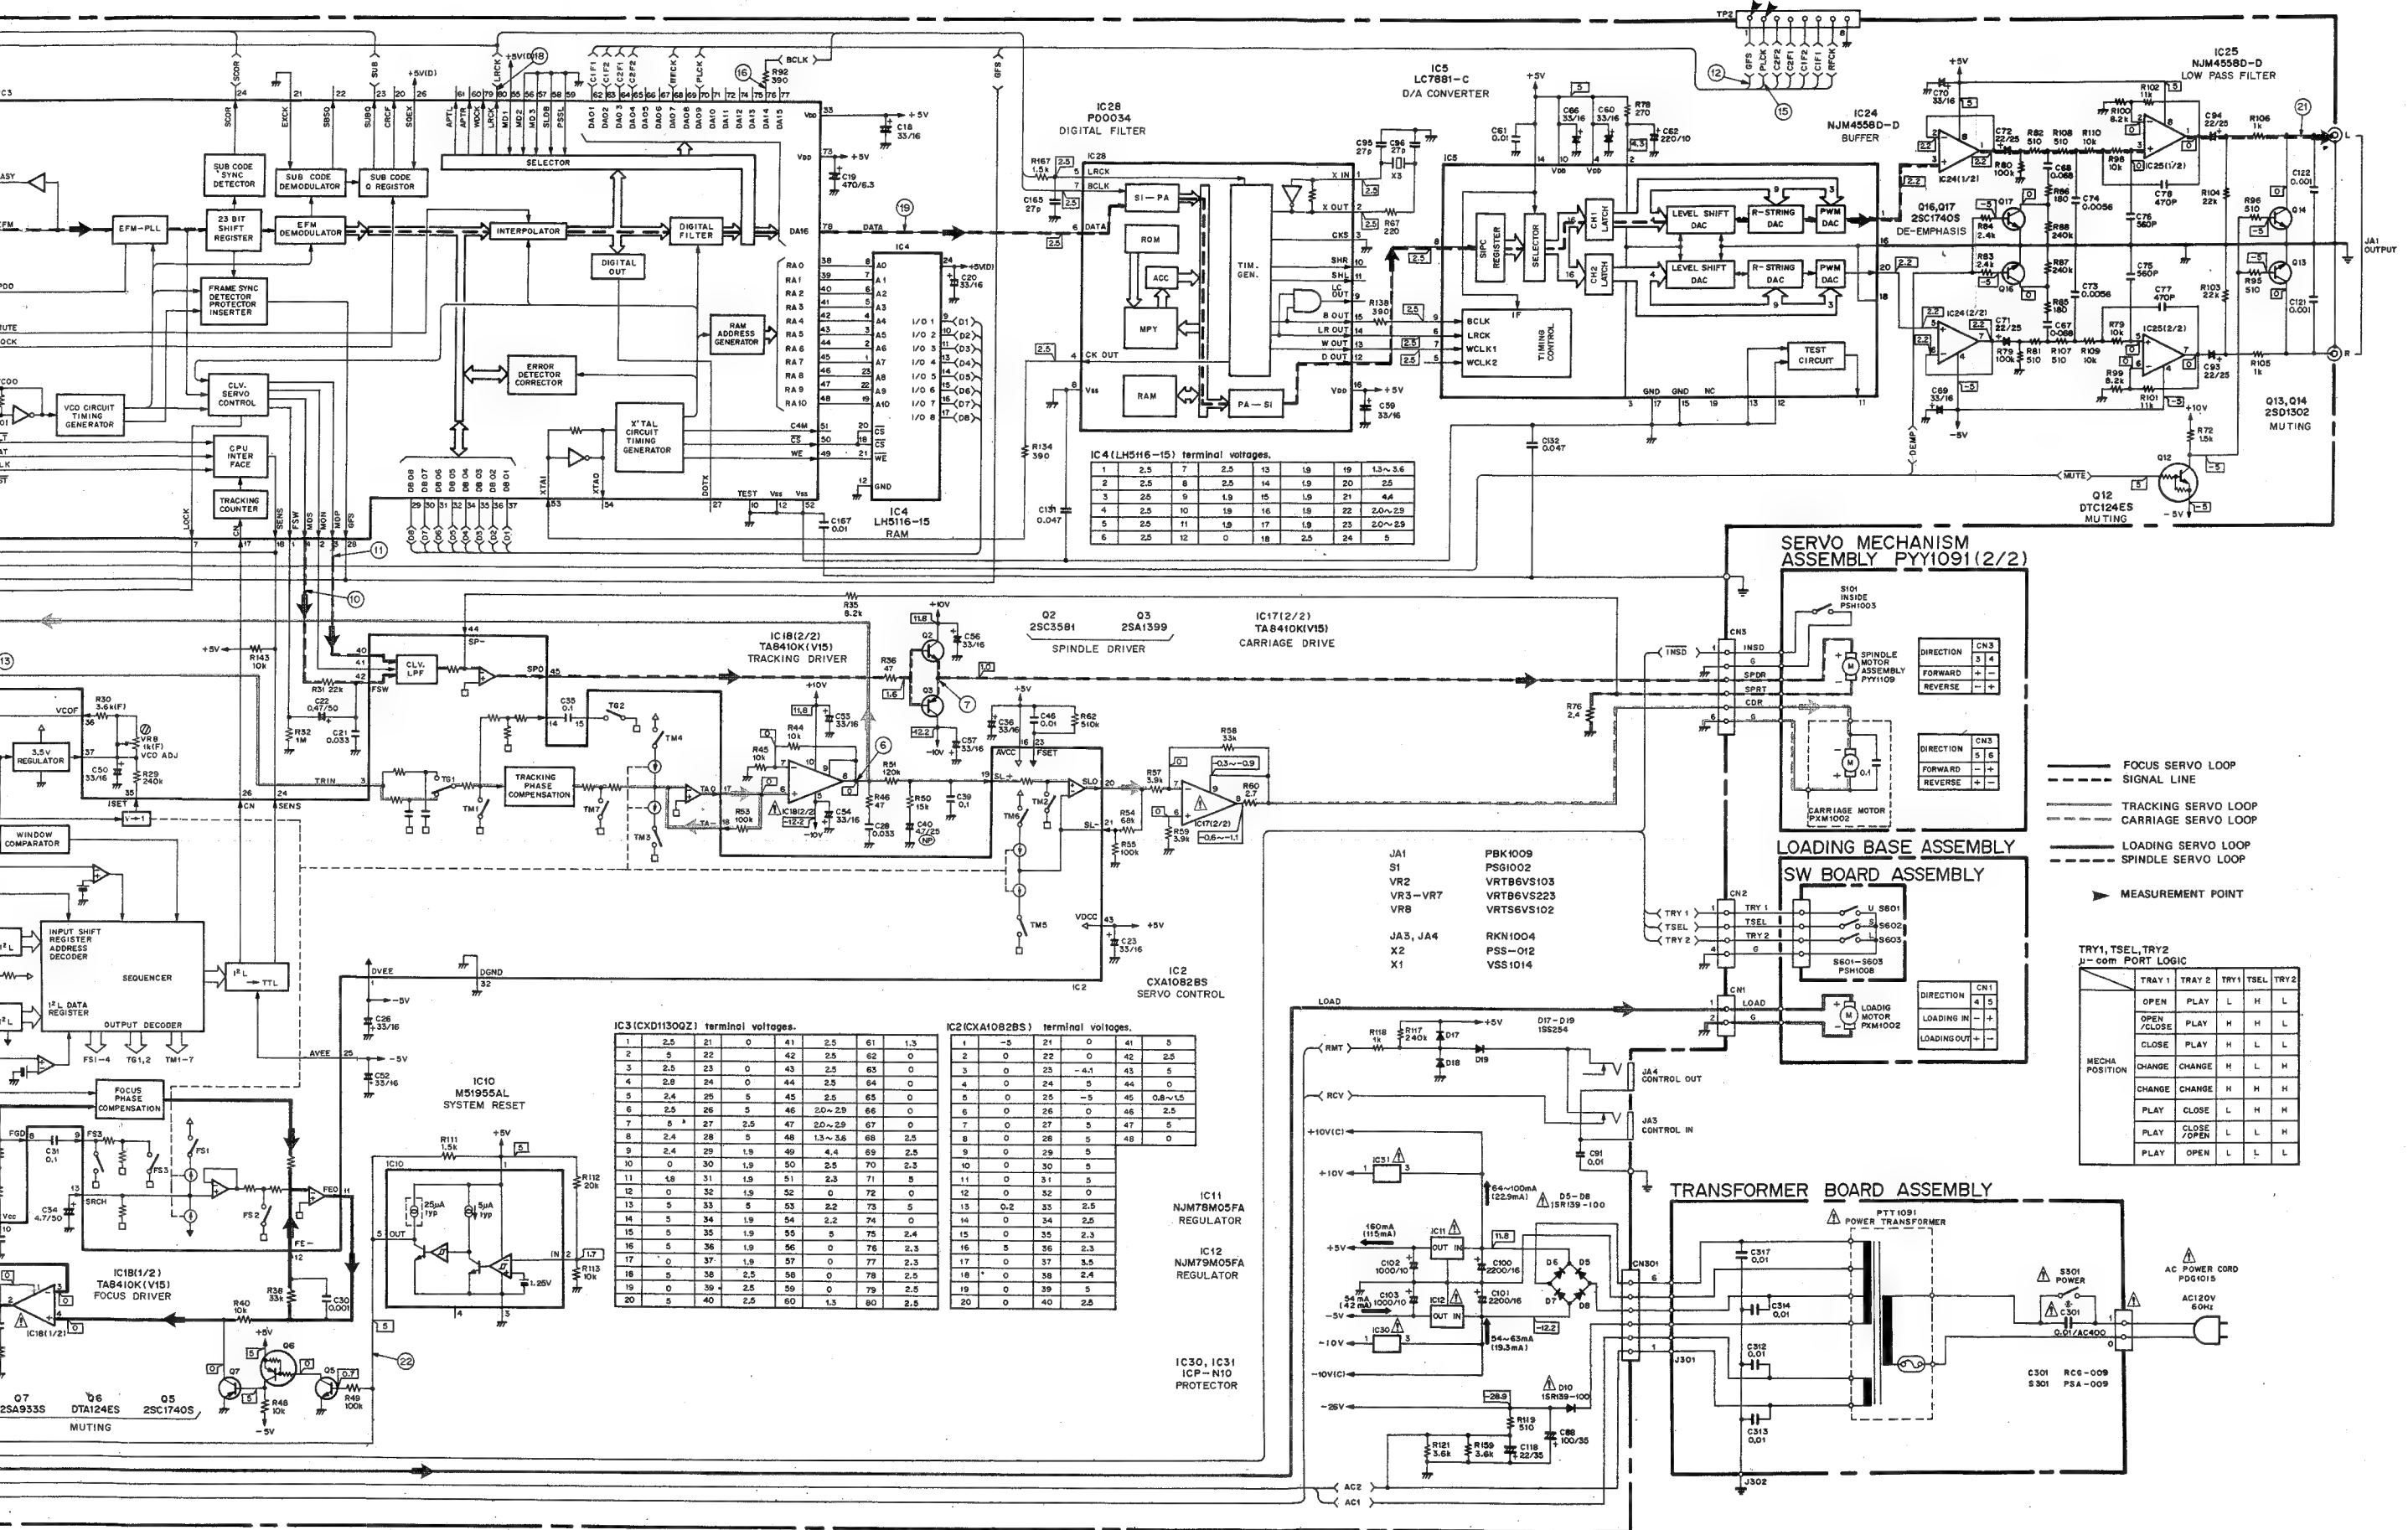

A

B

C

D

15. P.C. BOARDS CONNECTION DIAGRAM FOR PD-T303

• View from component side

A

SERVO MECHANISM
ASSEMBLY PYY1091

B


PICK UP ASSMBLY PWY1009

C

D

TRANSFORMER BOARD ASSEMBLY T1 POWER TRANSFORMER

AC120V
60Hz



POWER

LOADING BASE ASSEMBLY

DIRECTION	CN2
LOADING IN	+
LOADING OUT	-

LOADING MOTOR

	MECHANISM POSITION							
TRAY 1	OPEN	CLOSE / OPEN	CLOSE	CHANGE	CHANGE	PLAY	PLAY	PLAY
TRAY 2	PLAY	PLAY	PLAY	CHANGE	CHANGE	CLOSE	CLOSE / OPEN	OPEN
TRY 1	L	H	H	H	H	L	L	L
TSEL	H	H	L	L	H	H	L	L
TRY 2	L	L	L	H	H	H	H	L

SWITCH BOARD ASSEMBLY

CONTROL BOARD ASSEMBLY PWZ1572


DIRECTION	CN3
FORWARD	+
REVERSE	-


DIRECTION	CN3
FORWARD	+
REVERSE	-

CARRIAGE MOTOR
(INDICATES FWD)

SPINDLE MOTOR
ASSEMBLY
(INDICATED FWD)

S101
INSIDE SWITCH


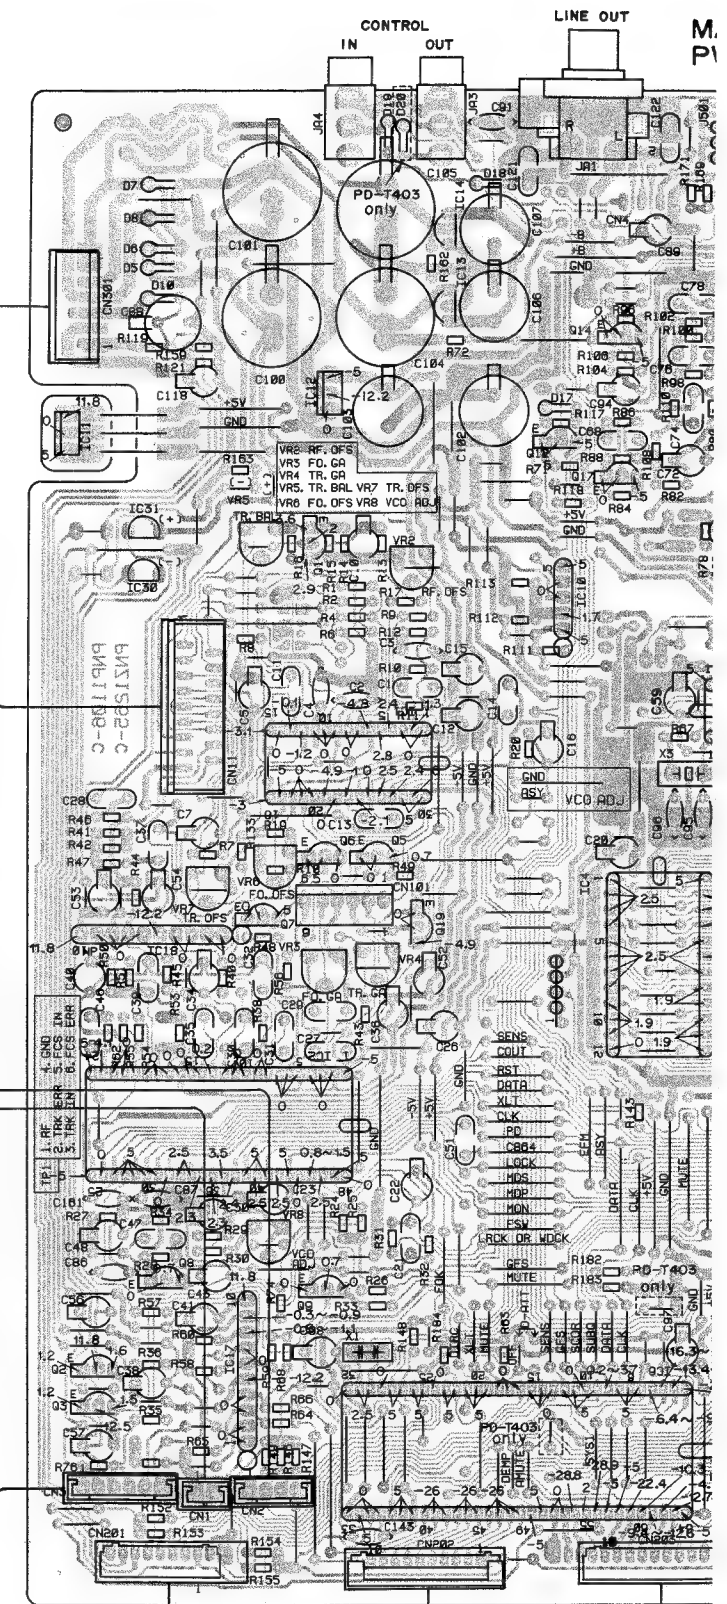


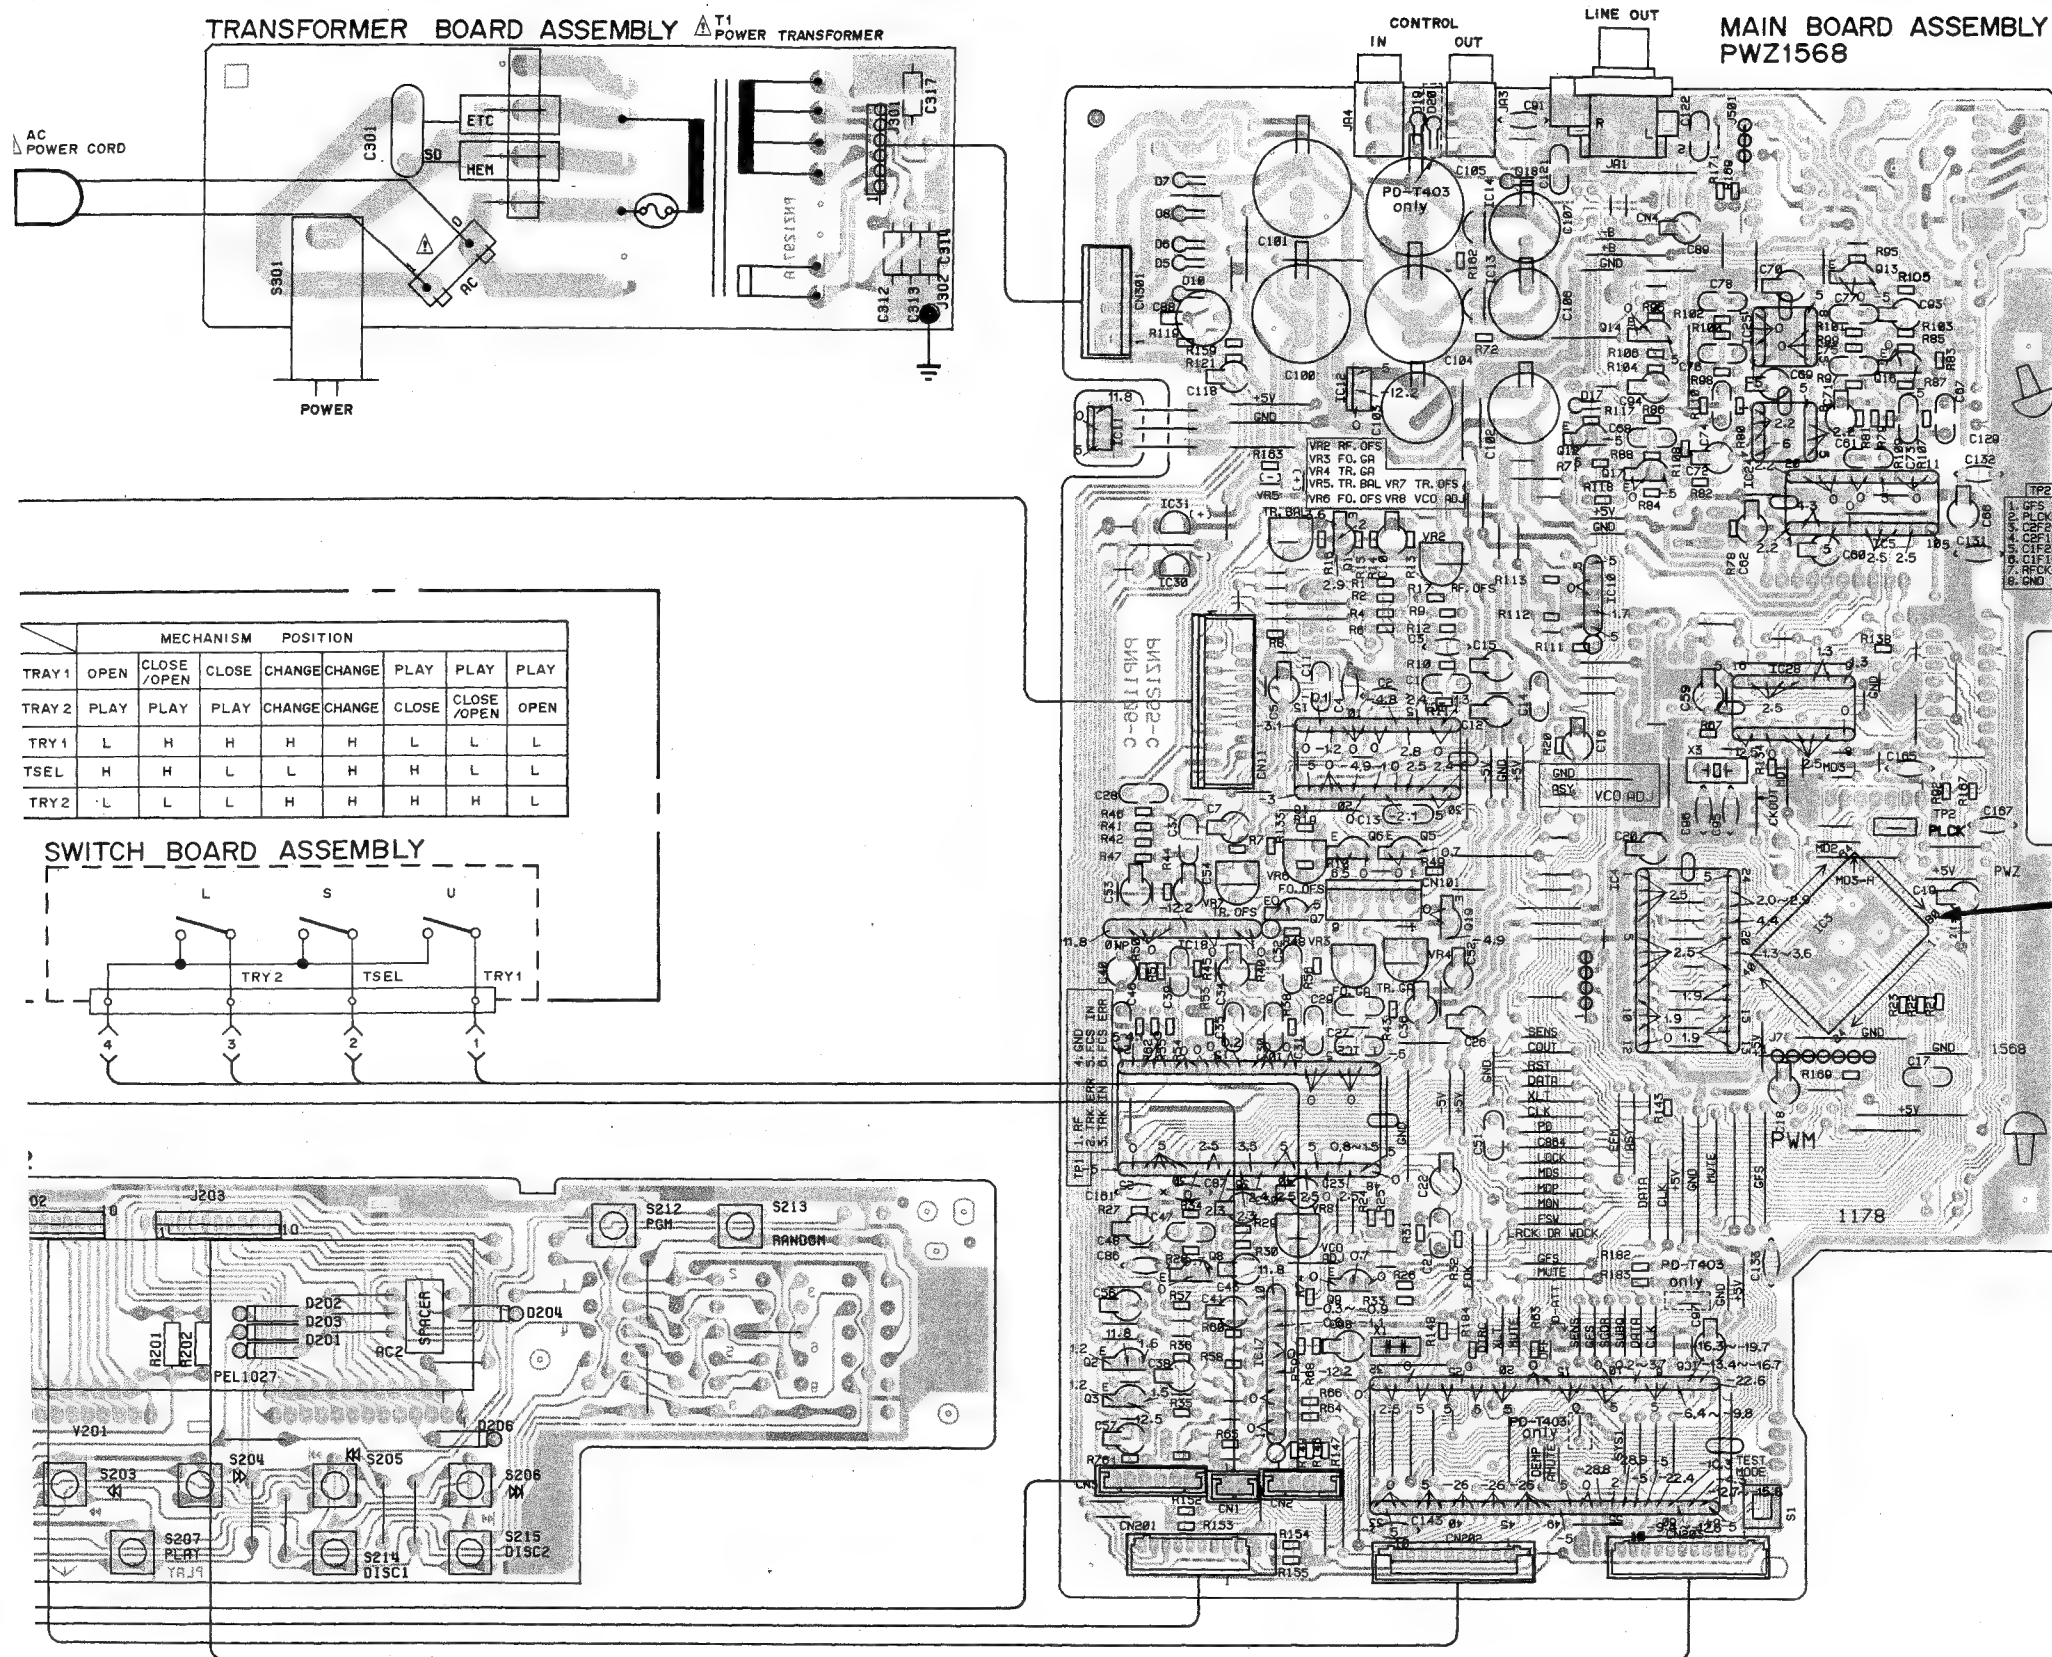

IC3 (CXD1130QZ) TERMINAL VOLTAGE	
1	2.5
2	5
3	2.5
4	2.8
5	2.4
6	2.5
7	5
8	2.4
9	0
10	1.8
11	0
12	0
13	5
14	5
15	5
16	0
17	0
18	5
19	0
20	5
21	0
22	0
23	0
24	0
25	5
26	5
27	2.5
28	5
29	1.9
30	1.9
31	5
32	5
33	5
34	5
35	1.9
36	1.9
37	2.5
38	2.5
39	2.5
40	2.5
41	2.5
42	2.5
43	2.5
44	2.5
45	2.5
46	2.0-2.9
47	1.3-3.6
48	4.4
49	2.5
50	2.3
51	0
52	0
53	2.2
54	5
55	0
56	0
57	0
58	1.3
59	0
60	0
61	0
62	0
63	0
64	0
65	0
66	0
67	0
68	2.5
69	2.3
70	5
71	0
72	0
73	0
74	0
75	2.4
76	2.3
77	2.5
78	2.5
79	2.5
80	2.5

P.C.B. pattern diagram indication	Corresponding part symbol	Part name
		Transistor
		FET
		Diode
		Zenner diode
		LED
		Varactor
		Tact switch
		Inductor
		Coil
		Transformer
		Filter
		Ceramic capacitor
		Mylar capacitor
		Styrol capacitor
		Electrolytic capacitor (Non polarized)
		Electrolytic capacitor (Noiseless)
		Electrolytic capacitor (Polarized)
		Electrolytic capacitor (Polarized)
		Power capacitor
		Semi-fixed resistor
		Resistor array
		Resistor
		Resonator
		Thermistor




1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the above Table.
3. The capacitor terminal marked with shows negative terminal.
4. The diode marked with shows cathode side.
5. The transistor terminal marked with shows emitter.

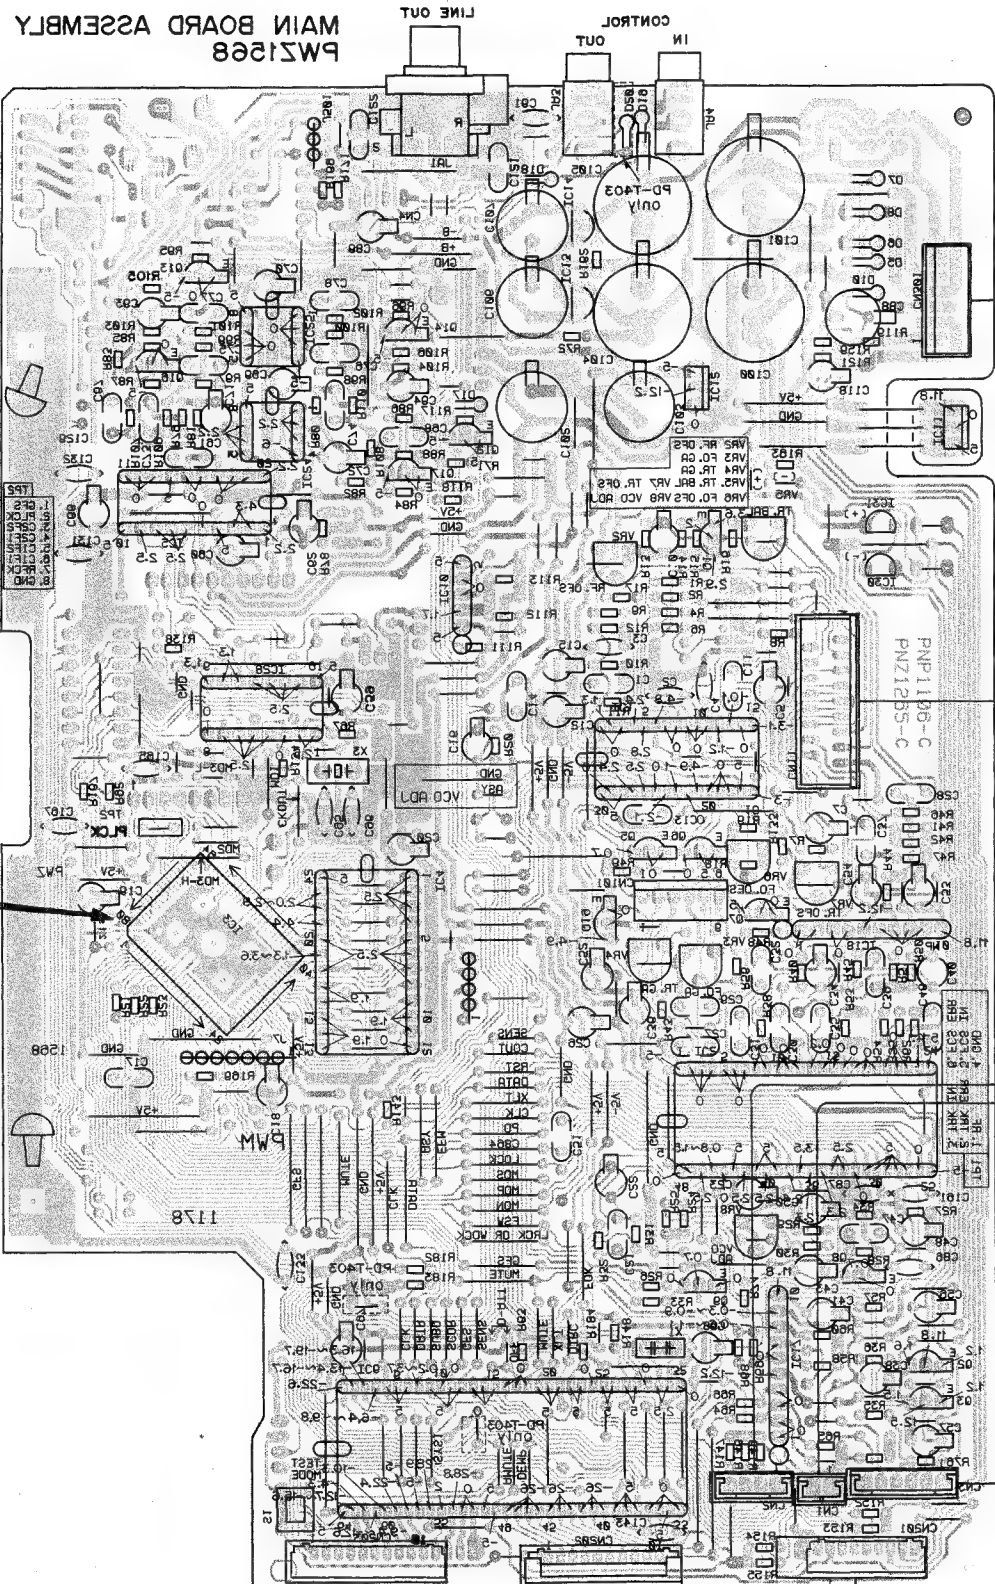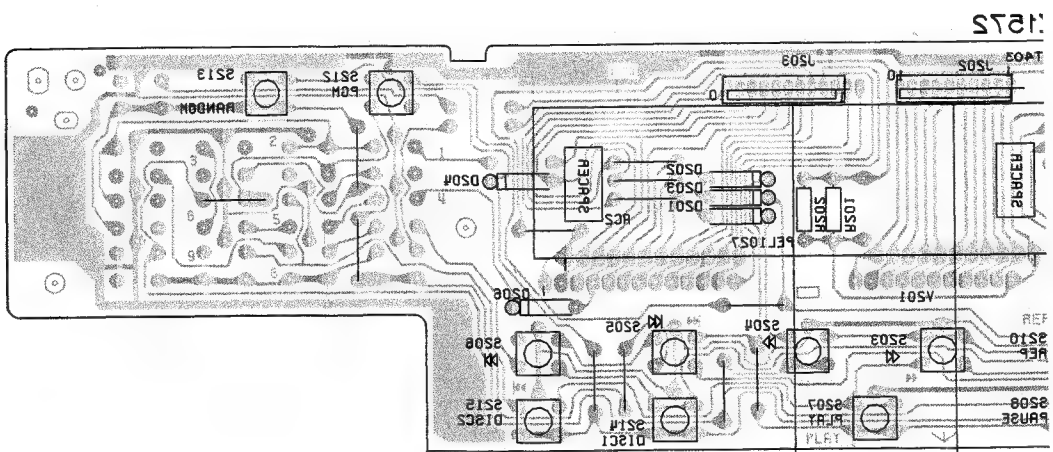

TERMINAL VOLTAGE	13 (CXDH3002)
0.8	1
2.5	2
2.5	3
2.5	4
2.5	5
2.5	6
2	7
2.5	8
0	9
1.8	10
0	11
2	12
2	13
2	14
2	15
0	16
0	17
2	18
0	19
2	20
0	21
0	22
0	23
0	24
0	25
2	26
2.5	27
2	28
2	29
2	30
2	31
2	32
2	33
2	34
2	35
2	36
2	37
2	38
2	39
2	40
2	41
2	42
2	43
2	44
2	45
2	46
2	47
2	48
2	49
2	50
2	51
2	52
2	53
2	54
2	55
2	56
2	57
2	58
2	59
2	60
2	61
2	62
2	63
2	64
2	65
2	66
2	67
2	68
2	69
2	70
2	71
2	72
2	73
2	74
2	75
2	76
2	77
2	78
2	79
2	80

15. P.C. BOARDS CONNECTION DIAGRAM FOR PD-1303

- **View from soldering side**

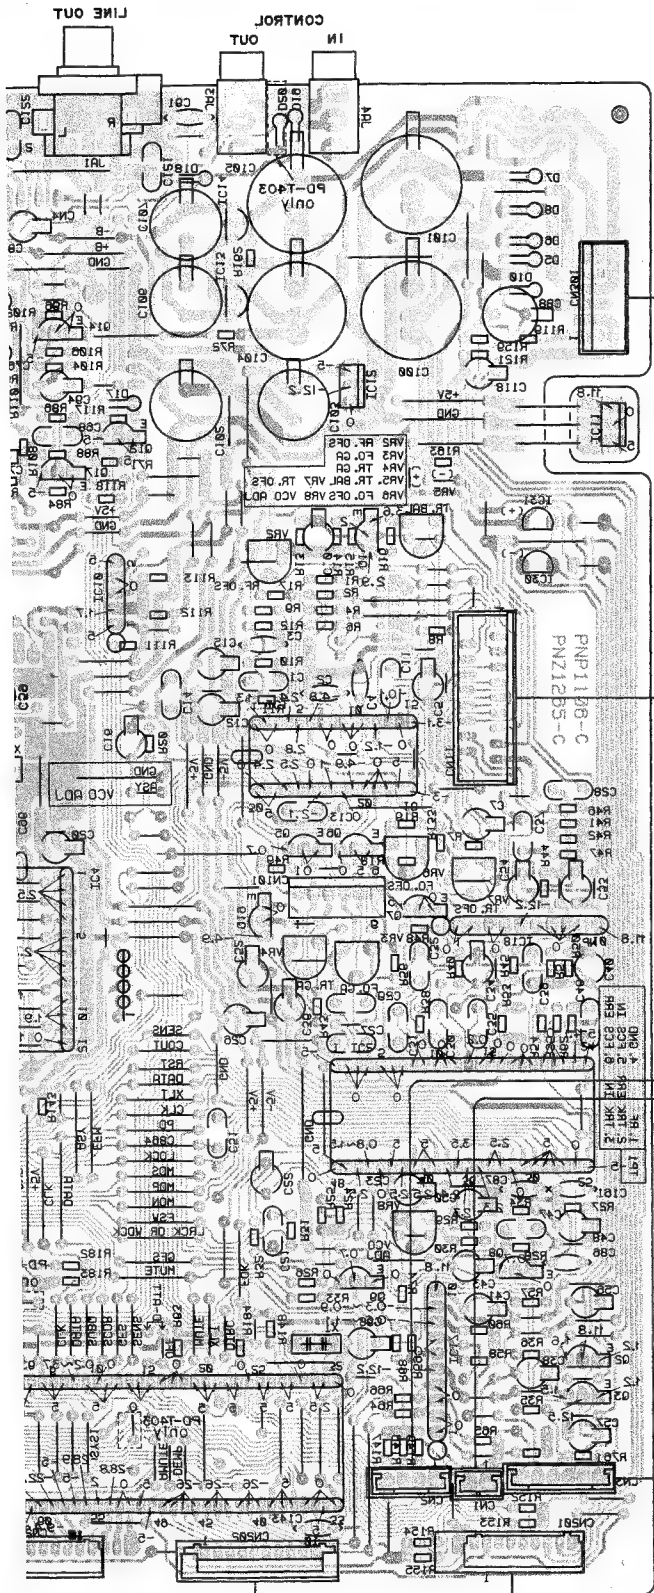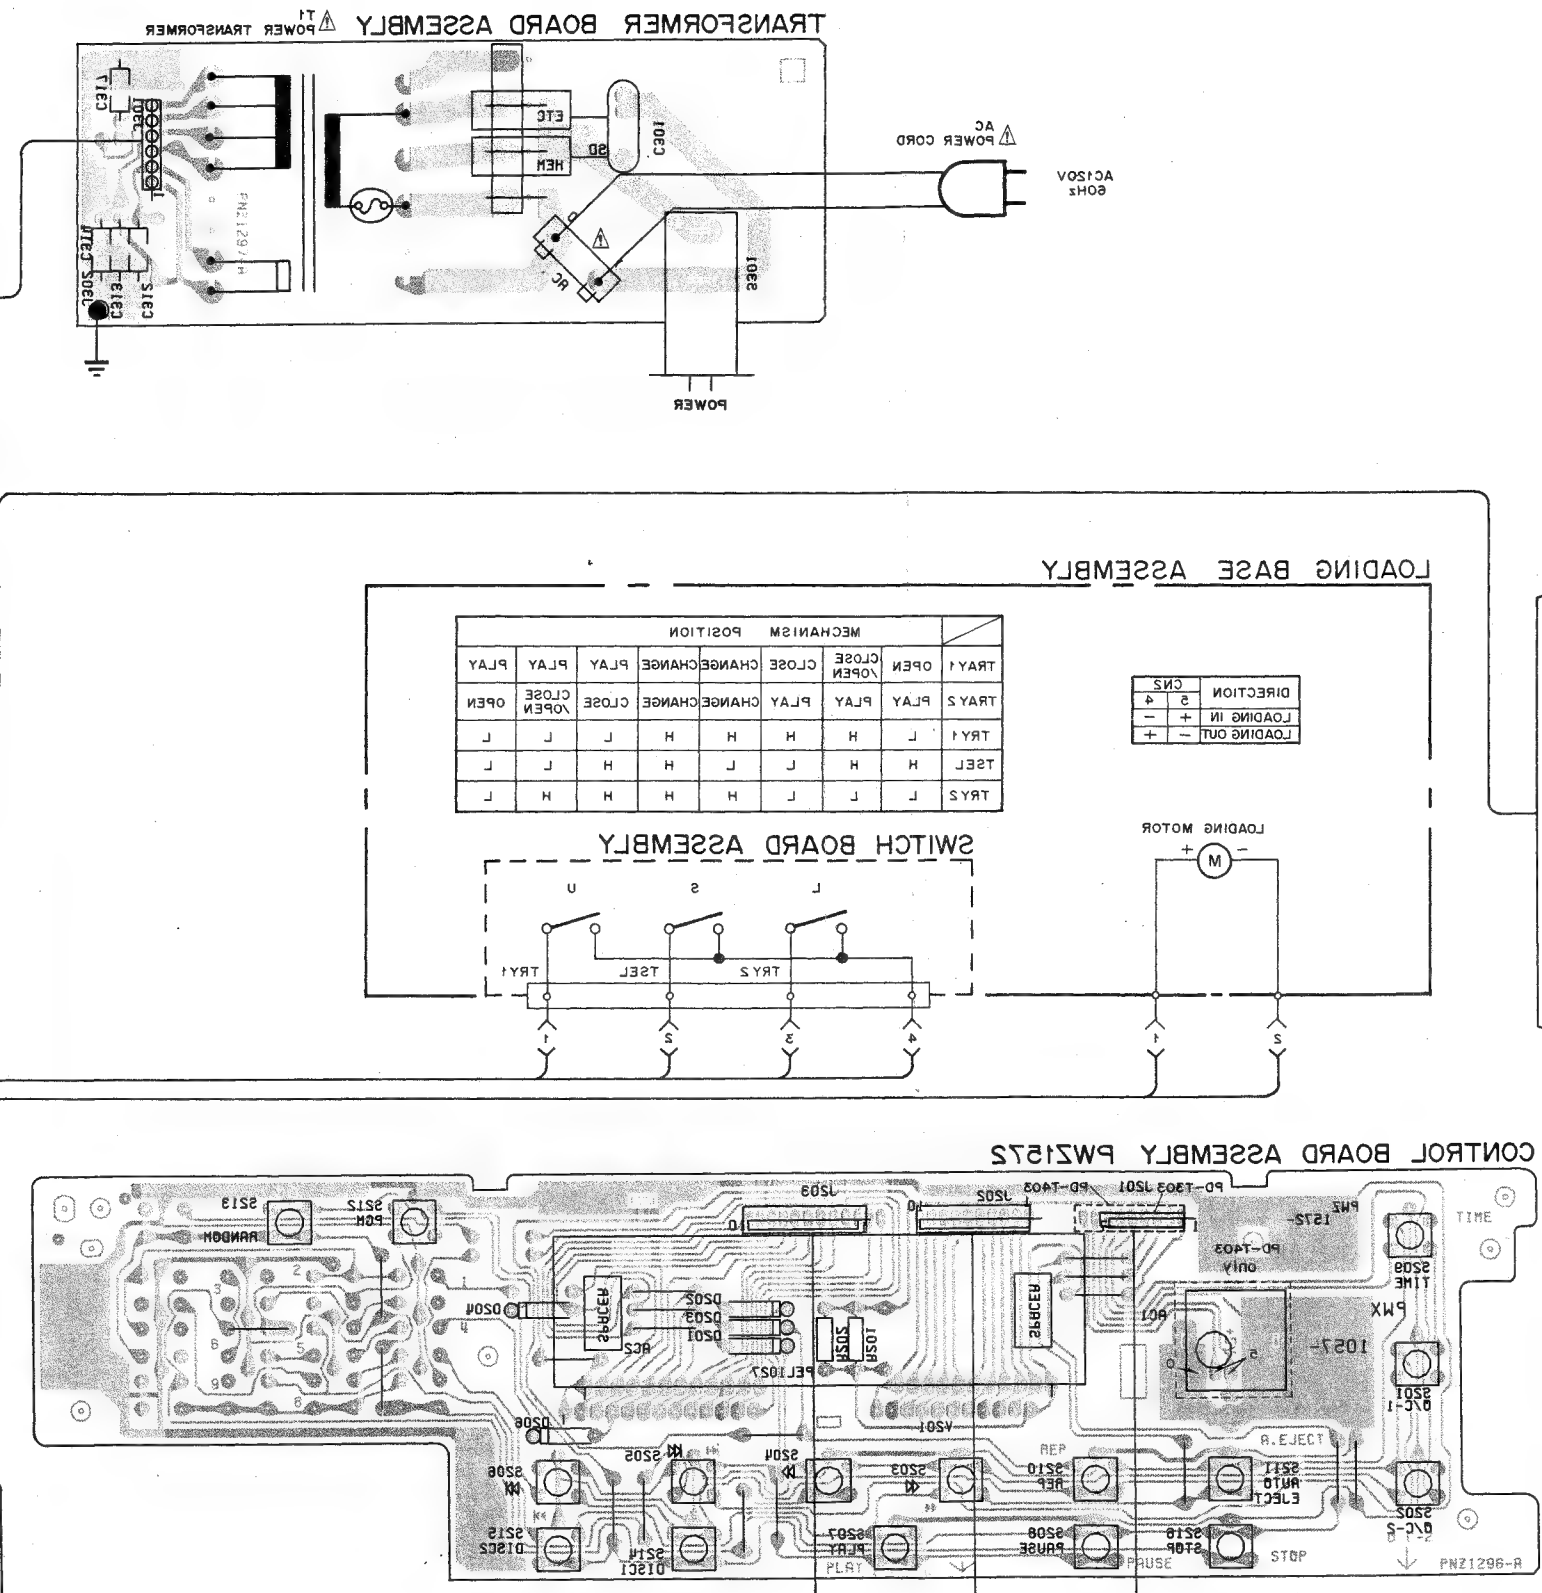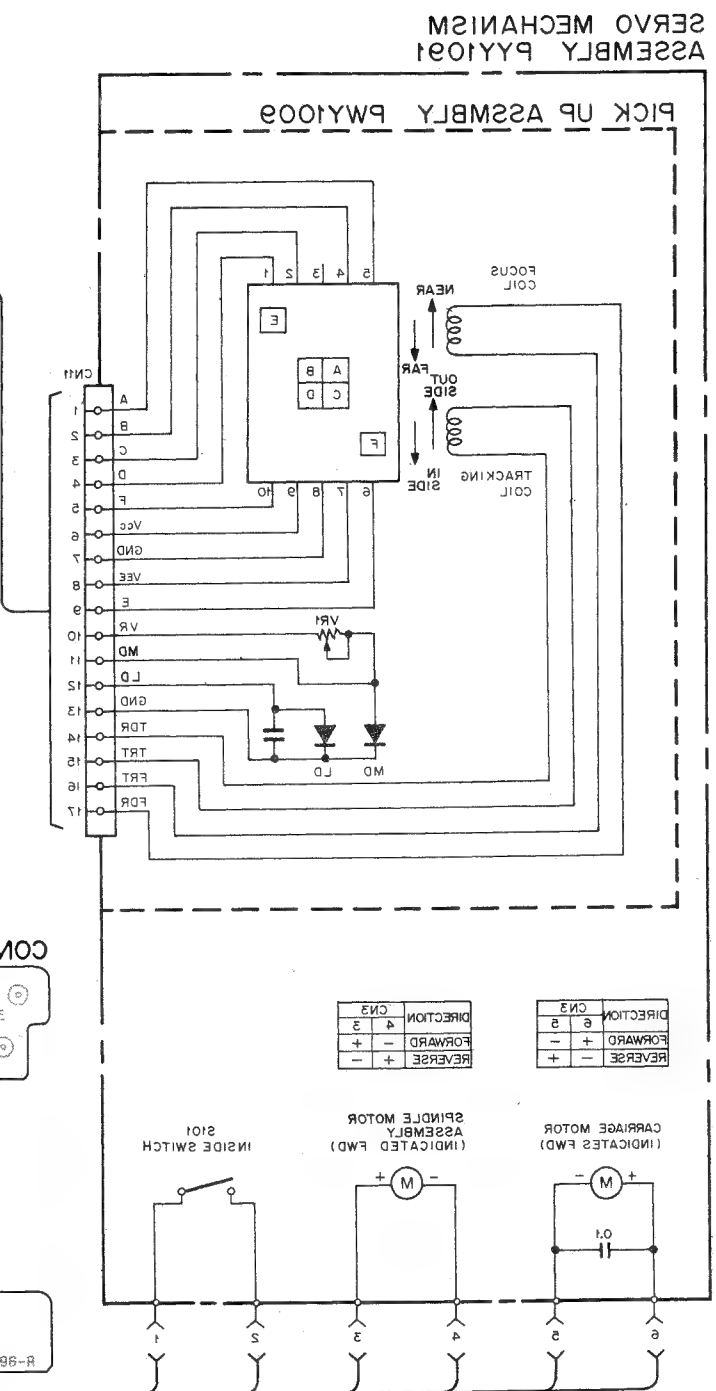

16. ELECTRICAL PARTS LIST FOR PD-T303

NOTES :

- Parts without part number cannot be supplied.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω 56 $\times 10^1$ 561RD1/4PS $\boxed{5}\boxed{6}\boxed{1}$ J
 47k Ω 47 $\times 10^3$ 473RD1/4PS $\boxed{4}\boxed{7}\boxed{3}$ J
 0.5 Ω 0R5RN2H $\boxed{0}\boxed{R}\boxed{5}$ K
 1 Ω 010RS1P $\boxed{0}\boxed{1}\boxed{0}$ K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω 562 $\times 10^1$ 5621RN1/4SR $\boxed{5}\boxed{6}\boxed{2}\boxed{1}$ F

Miscellaneous Parts

P. C. BOARD ASSEMBLIES

Mark	Symbol & Description	Part No.
$\Delta\odot$	Main board assembly	PWZ1568
\odot	Control board assembly	PWZ1572
Δ	Transformer board assembly	
	Switch board assembly	

OTHERS

Mark	Symbol & Description	Part No.
Δ	Strain relief	CM-22C
Δ	AC power cord	PDG1015
Δ	Power transformer	PTT1091
	Semiconductive ceramic capacitor	CGDYX104M25
	S101 Slide switch (INSIDE)	PSH1003
	Spindle motor assembly (with oil)	PYY1109
	Motor (CARRIAGE, LOADING)	PXM1002
	Pick-up assembly	PWY1009
	Motor assembly (CARRIAGE)	PYY1025
	Motor assembly (LOADING)	PYY1089

$\Delta\odot$ Main Board Assembly (PWZ1568)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
	IC1	CXA1081S
	IC2	CXA1082BS
	IC3	CXD1130QZ
Δ	IC30, IC31	ICP-N10
	IC5	LC7881-C
	IC4	LH5116-15
	IC10	M51955AL
	IC24, IC25	NJM4558D-D
Δ	IC11	NJM78M05FA
Δ	IC12	NJM79M05FA
	IC28	PD0034
	IC6	PD4184
Δ	IC17, IC18	TA8410K (V15)
	Q6	DTA124ES
	Q12, Q19	DTC124ES

Mark	Symbol & Description	Part No.
	Q1, Q3	2SA1399
	Q7	2SA933S
	Q5, Q8, Q9, Q16, Q17	2SC1740S
	Q2	2SC3581
	Q13, Q14	2SD1302
Δ	D5-D8	1SR139-100
	D10	1SR139-100
	D17-D19	1SS254

SWITCH

Mark	Symbol & Description	Part No.
	S1 Tact switch (TEST)	PSG1002

CAPACITORS

Mark	Symbol & Description	Part No.
	C95, C96, C165	CCCCH270J50
	C2, C4	CCCCH300J50
	C3	CCCCH390J50
	C87	CCCCL101J50
	C161	CCCCL221J50
	C40	CEANP4R7M25
	C16, C22	CEASR47M50
	C5, C10, C43	CEAS101M10
	C88	CEAS101M35
	C102, C103	CEAS102M10
	C71, C72, C93, C94	CEAS220M25
	C118	CEAS220M35
	C62	CEAS221M10
	C100, C101	CEAS222M16
	C48	CEAS3R3M50
	C7, C12, C15, C18, C20, C23, C26, C36, C38, C41, C50, C52- C54, C56, C57, C59, C60, C66, C69, C70, C97, C98	CEAS330M16
	C34	CEAS4R7M50
	C19	CEAS471M6R3
	C61, C86, C91, C143, C167	CKCYF103Z50
	C131-C133	CKCYF473Z50

<u>Mark</u>	<u>Symbol & Description</u>	<u>Part No.</u>
	C30, C51, C121, C122	CQMA102K50
	C14, C17, C46	CQMA103K50
	C31, C32, C35, C39	CQMA104K50
	C29	CQMA272J50
	C13	CQMA332J50
	C11, C21, C28, C37	CQMA333K50
	C77, C78	CQMA471J50
	C1, C27, C47	CQMA472J50
	C75, C76	CQMA561J50
	C73, C74	CQMA562J50
	C67, C68	CQMA683J50

RESISTORS

Mark	Symbol & Description	Part No.
	R30	RN ½ PQ3601F
	VR2 Semi-fixed resistor (10k)	VRTB6VS103
	VR3-VR7 Semi-fixed resistor (22k)	VRTB6VS223
	VR8 Semi-fixed resistor (1k)	VRTS6VS102
	Other resistors	RD ½ PM □ □ □ J

OTHERS

Mark	Symbol & Description	Part No.
JA1	Terminal 2P (LINE OUT L/R)	PKB1009
JA3,	JA4 Mini jack (CONTROL IN/OUT)	RKN1004
X3	Crystal resonator	PSS-012
X1	Ceramic resonator	VSS1014

● **Control Board Assembly (PWZ1572)**

SEMICONDUCTORS

<u>Mark</u>	<u>Symbol & Description</u>	<u>Part No.</u>
	D201-D204	1SS254

SWITCHES

<u>Mark</u>	<u>Symbol & Description</u>	<u>Part No.</u>
	S201-S216 Tact switch (OPEN/CLOSE DISC I, OPEN/ CLOSE DISC II, ◀, ▶, ◀▶, ▶▶, ▶, ■, TIME, REPEAT, AUTO EJECT, PGM, RANDOM PLAY, DISC I, DISC II, ■)	PSG1003

RESISTORS

Mark	Symbol & Description	Part No.
	R201, R202	RD¼PM101J

OTHER

Mark	Symbol & Description	Part No.
	V201 Fluorescent indicator tube	PEL1027

⚠ Transformer Board Assembly

SWITCH

Mark	Symbol & Description	Part No.
A	S301 Push switch (POWER)	PSA-009

CAPACITORS

Mark	Symbol & Description	Part No.
	C312-C314, C317	CKPYX103N25
⚠	C301 (0.01 μ F/AC400V)	RCG-009

Switch Board Assembly

SWITCHES

<u>Mark</u>	<u>Symbol & Description</u>	<u>Part No.</u>
	S601-S603 Push switch (U. S. L)	PSH1008

17. FOR PD-T303/KC AND PD-T403/KU, KC TYPES

CONTRAST OF MISCELLANEOUS PARTS

NOTES :

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

The PD-T303/KC and PD-T403/KU, KC types are the same as the PD-T303/KU type with the exception of the following sections.

Mark	Symbol & Description	Part No.				Remarks
		PD-T303 /KU type	PD-T303 /KC type	PD-T403 /KU type	PD-T403 /KC type	
△⊙ ⊙	Main board assembly	PWZ1568	PWZ1568	PWZ1567	PWZ1567	
	Control board assembly	PWZ1572	PWZ1572	PWZ1575	PWZ1575	
	Window	PAM1280	PAM1280	PAM1315	PAM1315	
	Control panel unit	PYY1105	PYY1105	PYY1112	PYY1112	
	Remote control unit	PWW1035	PWW1035	
	Packing case	PHG1219	PHG1292	PHG1337	PHG1337	
	Operating instructions (English)	PRB1081	PRB1096	
	Operating instructions (English/French)	PRE1079	PRE1095	

Note : Packing is described in section 13 PACKING FOR PD-T303.

MAIN BOARD ASSEMBLY (PWZ1567)

The main board assembly (PWZ1567) is the same as the main board assembly (PWZ1568) with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		PWZ1568	PWZ1567	
	1SS254	D20	

Note : The difference between PWZ1567 and PWZ1568 is described in the PD-T303 schematic diagram and P. C. boards connection diagram.

CONTROL BOARD ASSEMBLY (PWZ1575)


The control board assembly (PWZ1575) is the same as the control board assembly (PWZ1572) with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		PWZ1572	PWZ1575	
	Remote sensor unit	GPIU50X	

Note : The difference between PWZ1567 and PWZ1568 is described in the PD-T303 schematic diagram and P. C. boards connection diagram.

18. PANEL FACILITIES

FRONT PANEL

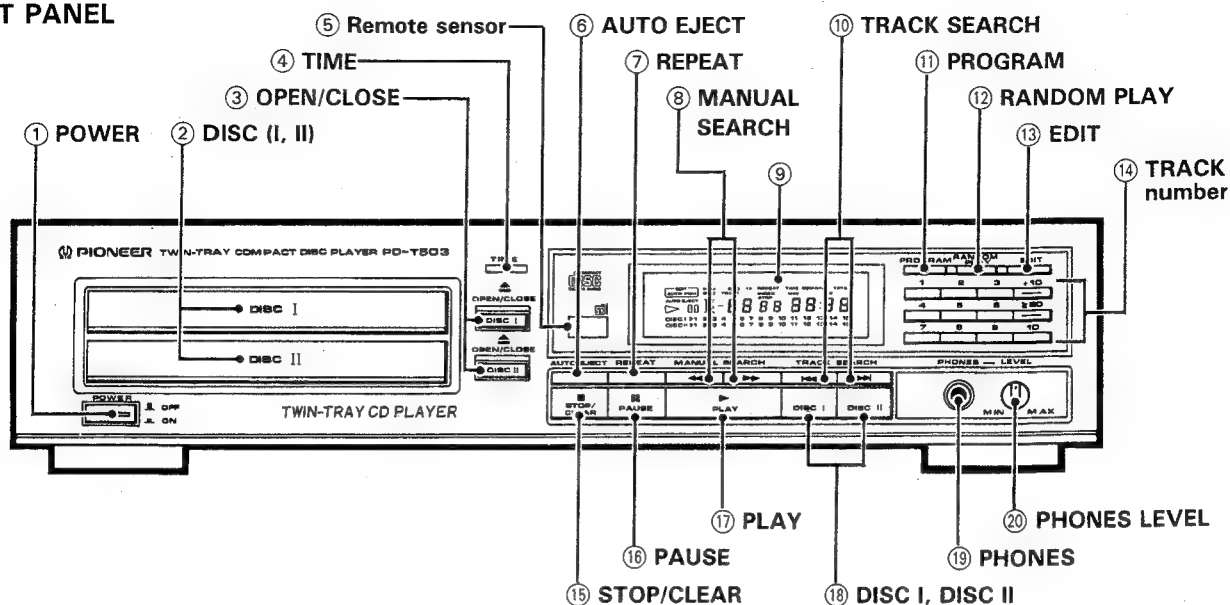

① POWER switch

Press to turn power to the unit ON and OFF.

② DISC (I, II)

These are where the discs are set. When power is switched ON and the OPEN/CLOSE key is pressed, the tray is ejected forward.

To insert the tray, press the OPEN/CLOSE key, or lightly push the tray in with your finger.

③ OPEN/CLOSE keys (I, II) (▲)

Press when you wish to eject or load a disc. Each time the key is pressed, the tray is alternately pushed out or pulled in.

④ TIME key

This key selects the display mode of the indicator panel. Each time the key is pressed, the indication changes from TIME, REM, to TOTAL in that order. (For details concerning the display contents, refer to the explanation about the indicators.)

⑤ Remote sensor

⑥ AUTO EJECT key

Press to perform auto eject playback.

When a disc is finished playing, the disc's disc tray will automatically eject. The other disc tray will close and playback will start. By replacing discs, continuous playback can be maintained.

⑦ REPEAT key

Press this key for repeat playback. Pressing the key once, twice, or three times will change the repeat mode from single track repeat, all tracks repeat, and repeat playback cancellation.

⑧ MANUAL SEARCH keys (◀, ▶)

When the player is in playback or pause modes, these keys are pressed to perform fast forward or reverse operations to allow manual searching. These operations are only carried out during the time either key is pressed.

⑨ Indicators

- AUTO PGM : Displays when auto program editing is set or used.
 - AUTO EJECT : Lights during auto eject playback.
 - PGM : Lights during program mode.
 - RND : Lights during random playback.
 - DISC : Displays the disc number (I or II) of the disc to be played.
 - ▶ : Lights during playback.
 - ⏏ : Lights during temporarily interrupted playback.
 - TRACK : Displays the current track number and index number (during normal playback and programmed playback) or the track being programmed and the program steps during programming operation.
 - 1▶REPEAT : Lights during repeat playback of one track.
 - REPEAT : Lights during repeat play.
 - INDEX : Displays the index number of the music section of a track or the track division.
 - STEP : Displays the program steps.
 - TIME/REMAIN/TOTAL : Changes each time the TIME key is pressed.
 - TIME : Displays the track number of the track being played (TRACK) and the elapsed time (minutes and seconds).
 - REMAIN : Displays the remaining time on the track being played.
- When the TIME key is pressed again, the remaining time on the disc being played will be displayed.

- **TOTAL** : Displays the total number of tracks on the disc (TRACK) and the overall playback time (minutes and seconds) of disc I. When the TIME key is pressed again, the total number of tracks on the disc (TRACK) and the overall playback time of disc II will be displayed. During playback, the display goes on for about 5 seconds before changing to the TIME display.

⑩ **TRACK SEARCH keys (◀, ▶)**

During normal playback, programmed playback or pause modes, these keys are pressed to search for the desired track. Pressing either key causes the player to advance to the next track or to return to the previous track. When the player is stopped at PROGRAM mode, the performance time of each track is displayed by pressing the TRACK SEARCH keys.

⑪ **PROGRAM key**

Use to program a sequence of tracks.

- Press this key to set the unit to program mode. Then specify the desired DISC and TRACK.

The DISC and TRACK will be programmed as they are entered in this way.

⑫ **RANDOM PLAY key**

Press to begin random playback.

⑬ **EDIT key**

Press to program a tune which may be played back within a specified time.

⑭ **Track number keys (1 to 10, + 10 and ≥ 20)**

- These keys are used to specify the track numbers (tracks 1 to 99) for direct track selection or program entry.
- During auto program editing, the keys are used to specify the time period (in minutes).

⑮ **STOP/CLEAR key (■)**

Press to stop playback. When pressed, the player goes into stop mode and all operations stop.

Press to clear a program. When pressed during stop mode, the program stored in memory is cleared.

⑯ **PAUSE key (■)**

Press to temporarily interrupt playback. When pressed again, the pause mode is cancelled and playback resumes.

⑰ **PLAY key (▶)**

Press to begin playback, and to cancel the pause mode.

⑱ **Disc select keys (DISC I, DISC II)**

DISC I: Use to select DISC I for playback or programming.

DISC II: Use to select DISC II for playback or programming.


⑲ **PHONES (headphones) jack**

When you wish to use headphones, insert the plug for the headphones into the headphone jack.

⑳ **PHONES LEVEL control knob**

Use to adjust the level of sound when using headphones. Turning the knob to the right increases the sound level.

REAR PANEL

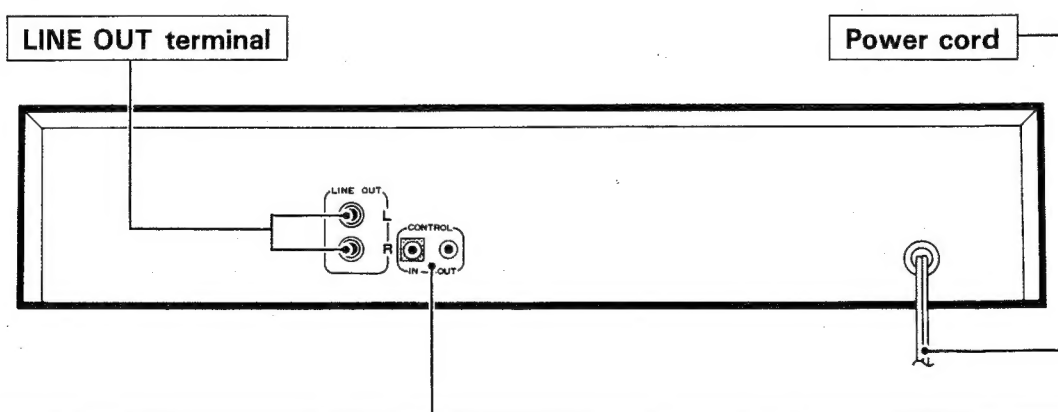


**CONTROL IN terminal
(U.S. and Canadian models only)**

This terminal is for inputting the remote control signals relayed from an amplifier with a sensor for receiving control signals from a remote control unit and carrying the Pioneer **SR** mark. For instructions regarding connection and operation, please refer to the operating instruction manual for your stereo amplifier.

**CONTROL OUT terminal
(U.S. and Canadian models only)**

This terminal is for further relaying remote control signals to other components carrying the Pioneer **SR** mark. Please connect to the control input terminal of the other component.

FRONT PANEL

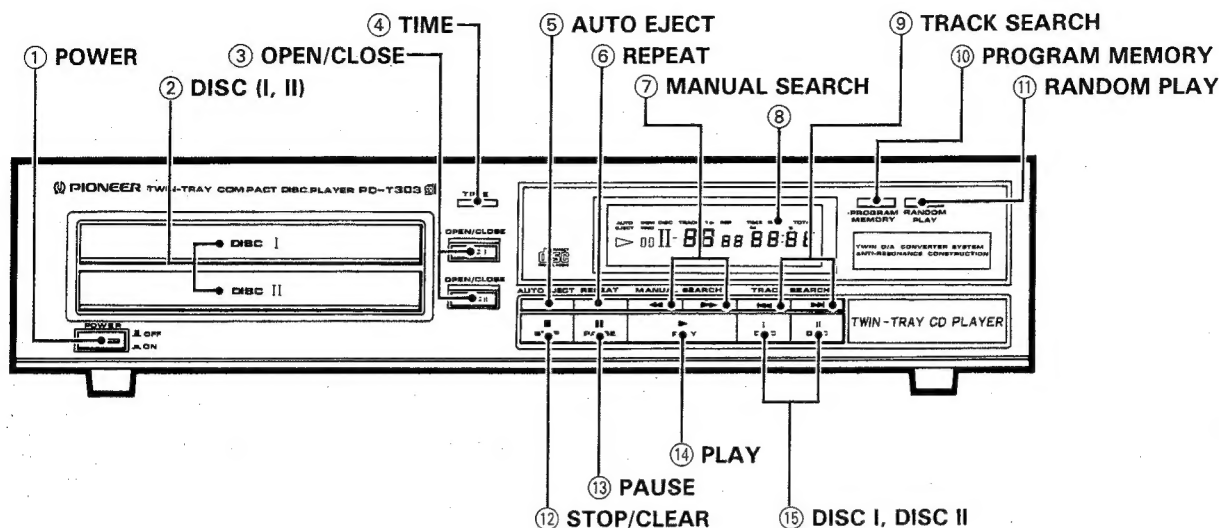

① POWER switch

Press to turn power to the unit ON and OFF.

② DISC (I, II)

This is where the disc is set. When power is switched ON and the OPEN/CLOSE key is pressed, the tray is ejected forward. To insert the tray, press the OPEN/CLOSE key, or lightly push the tray in with your finger.

③ OPEN/CLOSE keys (I, II)

Press when you wish to eject or load a disc. Each time the key is pressed, the tray is alternately pushed out or pulled in.

④ TIME key

This key selects the display mode of the indicator panel. Each time the key is pressed, the indication changes from TIME, REM, to TOTAL in that order. (For details concerning the display contents, refer to the explanation about the indicators.)

⑤ AUTO EJECT key

Press to perform auto eject playback. When a disc is finished playing, the disc's disc tray will automatically eject. The other disc tray will close and playback will start. By replacing discs, continuous playback can be maintained.

⑥ REPEAT key

Press this key for repeat playback. Pressing the key once, twice, or three times will change the repeat mode from single track repeat, all tracks repeat, and repeat playback cancellation.

⑦ MANUAL SEARCH keys (◀, ▶)

When the player is in playback or pause modes, these keys are pressed to perform fast forward or reverse operations to allow manual searching. These operations are only carried out during the time either key is pressed.

⑧ Indicators

AUTO EJECT	: Lights during auto eject playback.
PGM	: Lights after programming (after program has been memorized).
RND	: Lights during random playback.
DISC	: Displays the disc number (I or II) of the disc to be played.
▶	: Lights during playback.
⏸	: Lights during temporarily interrupted playback.
TRACK	: Displays the current track number and index number (during normal playback and programmed playback) or the track being programmed and the program steps during programming operation.
1▶REP	: Lights during repeat playback of one track.
REP	: Lights during repeat play.
TIME/REM/TOTAL	: Changes each time the TIME key is pressed.
● TIME	: Displays the track number of the track being played (TRACK) and the elapsed time (minutes and seconds).
● REM	: Displays the remaining time on the track being played. When the TIME key is pressed again, the remaining time on the disc being played will be displayed.
● TOTAL	: Displays the total number of tracks on the disc (TRACK) and the overall playback time (minutes and seconds) of disc I. When the TIME key is pressed again, the total number of tracks on the disc (TRACK) and the overall playback time of disc II will be displayed. During playback, the display goes on for about 5 seconds before changing to the TIME display.

⑨ TRACK SEARCH keys (◀◀, ▶▶)

During normal playback, programmed playback or pause modes, these keys are pressed to search for the desired track. Pressing either key causes the player to advance to the next track or to return to the previous track. Even in stop mode, these keys can be used to select the desired track. Press the play key to playback the desired track. If the PROGRAM MEMORY key is pressed when the player is stopped to set the program mode, the performance time of each track is displayed each time the track search key is pressed.

⑩ PROGRAM MEMORY key

Use to program a sequence of tracks.

- Press this key after selecting a desired disc and track with disc select and track search keys. Tunes will be added to the program in the order in which they are specified.

⑪ RANDOM PLAY key

Press to begin random playback.

⑫ STOP/CLEAR key (■)

Press to stop playback. When pressed, the player goes into stop mode and all operations stop.
Press to clear a program. When pressed during stop mode, the program stored in memory is cleared.

⑬ PAUSE key (⏸)

Press to temporarily interrupt playback. When pressed again, the pause mode is cancelled and playback resumes.

⑭ PLAY key (▶)

Press to begin playback, and to cancel the pause mode.


⑮ Disc select keys (DISC I, DISC II)

DISC I: Use to select DISC I for playback or programming.

DISC II: Use to select DISC II for playback or programming.

- During playback, when the disc select key for the disc not being played is pressed, the current playback will stop and playback of that disc will begin.

REAR PANEL

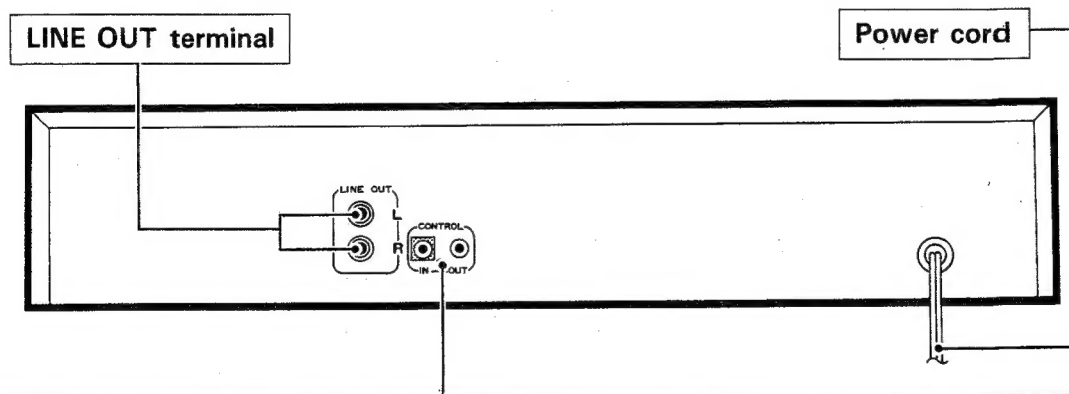

CONTROL IN terminal

This terminal is for inputting the remote control signals relayed from an amplifier with a sensor for receiving control signals from a remote control unit and carrying the Pioneer **SR** mark. For instructions regarding connection and operation, please refer to the operating instruction manual for your stereo amplifier.

CONTROL OUT terminal

This terminal is for further relaying remote control signals to other components carrying the Pioneer **SR** mark. Please connect to the control input terminal of the other component.

19. SPECIFICATIONS

PD-T503

1. General

Type	Compact disc digital audio system
Power requirements	
European models	AC 220V, 50/60Hz
U.K., Australian models	AC 240V, 50/60Hz
U.S., Canadian models	AC 120V, 60Hz
Other models	AC 110/120—127/220/240V (switchable), 50/60Hz
Power consumption	16W
Operating temperature	+ 5°C — + 35°C (+ 41°F — + 95°F)
Weight	4.2kg (9lb, 4oz)
External dimensions	420(W) × 325(D) × 98(H)mm 16-9/16(W) × 12-25/32(D) × 3-9/16(H) in.

2. Audio section

Frequency response	4Hz—20kHz (± 0.5 dB) (EIAJ)
S/N	104dB or more (EIAJ)
Dynamic range	95dB or more (EIAJ)
Channel separation	96dB or more (EIAJ)
Output voltage	2.0V
Wow and flutter	Limit of measurement ($\pm 0.001\%$ W.PEAK) or less (EIAJ)
Number of channels	2 channels (stereo)

3. Functions

- Play
- Pause
- Track search
- Manual search
- Programmed playback
- Programmed repeat
- Pause program
- Auto program edit
- Single track repeat
- Sequential disc all track repeat
- Relay playback
- Random relay play
- Program relay play
- Auto eject play
- Auto eject random play
- Auto eject program play
- Random play
- Random repeat
- Timer start

4. Accessories

- Remote control unit 1
- Size AAA/R03 dry cell batteries 2
- Remote control cord 1
(U.S. and Canadian models only)
- Output cable 1
- Operating instructions 1

NOTE:

The specifications and design of this product are subject to change without notice, due to improvements.

PD-T303

1. General

Type Compact disc digital audio system

Power requirements

European models AC 220V, 50/60Hz

U.K., Australian models AC 240V, 50/60Hz

U.S., Canadian models AC 120V, 60Hz

Other models AC 110/120—127/220/240V
(switchable), 50/60Hz

Power consumption 16W

Operating temperature +5°C—+35°C
(+41°F—+95°F)

Weight 4.1kg (9lb)

External dimensions 420(W) × 324(D) × 90(H)mm
16-9/16(W) × 12-3/4(D) × 3-9/16(H) in.

2. Audio section

Frequency response	4Hz—20kHz ($\pm 1^{+0.5}$ dB) (EIAJ)
S/N	102dB or more (EIAJ)
Dynamic range	90dB or more (EIAJ)
Channel separation	95dB or more (EIAJ)
Output voltage	1.8V
Wow and flutter	Limit of measurement ($\pm 0.001\%$ W.PEAK) or less (EIAJ)
Number of channels	2 channels (stereo)

3. Functions

- Play
- Pause
- Track search
- Manual search
- Programmed playback
- Programmed repeat
- Pause program
- Single track repeat
- Sequential disc all track repeat
- Relay playback
- Auto eject play
- Auto eject random play
- Random play
- Random repeat
- Timer start

4. Accessories

- Remote control cord 1
- Output cable 1
- Operating instructions 1

NOTE:

The specifications and design of this product are subject to change without notice, due to improvements.